



# VACU-STACK® INSTALLATION INSTRUCTIONS

The Vacu-Stack® chimney cap installs quickly, easily, and securely. Follow applicable state code requirements relative to spark arresters.

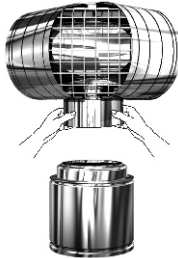

## Instructions for installing Vacu-Stack® Model VSS on round flues other than air-cooled

**STEP 1. FIT INSIDE FLUE.** Vacu-Stack® chimney caps fit inside round metal and masonry flues. Press pipe end of Vacu-Stack® into flue until fit is snug.

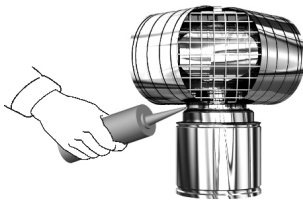

**STEP 2. APPLY WATERTIGHT SEAL.** Apply thin film of silicone caulking (not furnished, but readily available at local hardware store or home center) to seal joint between Vacu-Stack® and top of chimney.

## Instructions for installing Vacu-Stack® model VSS-TDW on round air-cooled flues

**FOLLOW STEPS 1 AND 2 ABOVE;  
DO NOT BEND OR ADJUST SPACERS**



Underside of cap showing three spacers. Do not bend or adjust these spacers.

The three spacers located on the underside of TDW models maintain ventilation space between bottom of Vacu-Stack® and top of chimney. This is essential for uninterrupted air flow through cooling channels in air cooled chimneys.



## Instructions for installing Vacu-Stack® model VSS on rectangular or square flues

**USE ADAPTER FOR SQUARE/RECTANGULAR CHIMNEYS.** An optional adapter is required for Vacu-Stack® installations on square and rectangular chimneys and must be purchased separately. Then follow Steps 1 and 2 above. See adapter installation instructions.