


Models:
DM100 & DM100-S
Glass Doors



The DM100 & DM100-S doors have been tested for use with specific Hearth & Home Technologies products. Check with your local building code agency before you begin installation to ensure compliance with local codes, including the need for permits and follow-up inspections. If you encounter any problems regarding code approvals, or if you need clarification of any of the instructions contained here, contact the Technical Services Dept., Hearth & Home Technologies Inc., phone 1-888-427-3973 or 1-800-927-6841.

Note: An arrow (➡) found in the text signifies change in content.

	CAUTION Sharp Edges • Wear protective gloves and safety glasses during installation.	
--	--	---

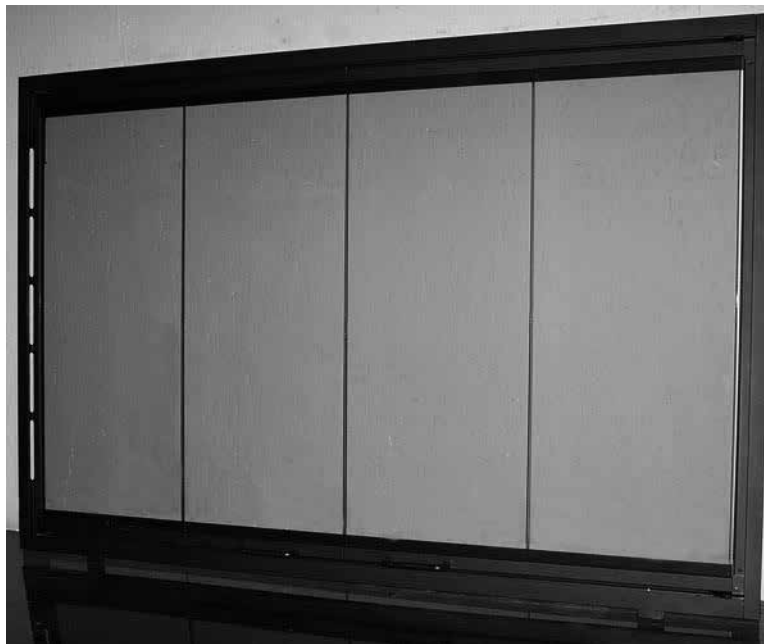

1. Remove the screens.
2. Make sure the hearth stone is pushed all the way to the back refractory. This will leave you a small gap at the front of the hearth to allow the bottom legs to slide in.
3. Loosen the two screws holding each top bracket in place with the allen wrench provided. See Figure 1. Make sure the top brackets are below the top of the door frame. See Figure 2.

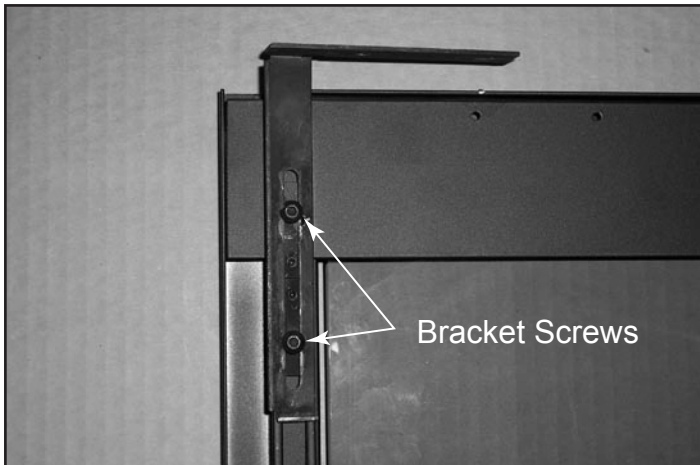


Figure 1

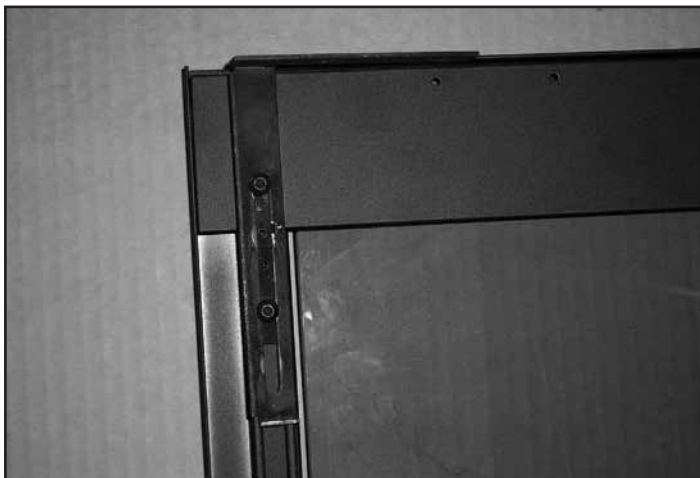


Figure 2

4. Pick up the complete door assembly and insert each leg (located on the bottom of the frame) into the gap at the front of the hearth stone. See Figure 3.

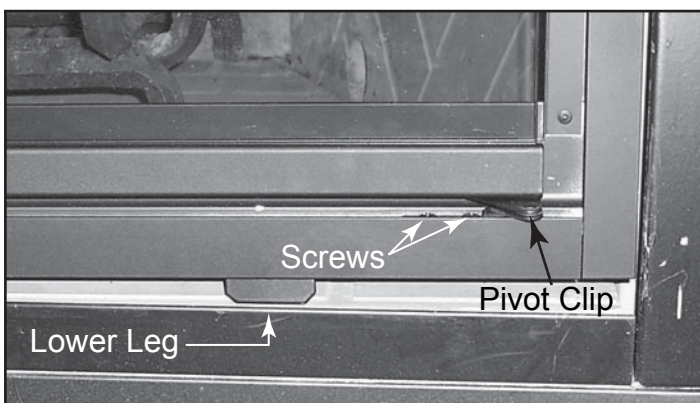


Figure 3

5. Push the top of the door back into the fireplace. While holding the doors by the top of the frame, open one door, reach around the inside top corner of the frame. Slide the top bracket up tight against the fireplace. Tighten the two bracket screws to the frame with the allen wrench. Repeat for the other side.
6. With the door assembly being held in by the brackets, center the door frame on the fireplace.

Note: The door frame will stick out approximately 3/8 in. from the front of the fireplace.

7. Secure the top door brackets to the fireplace with two screws up through each bracket on both sides. See Figure 4.



Figure 4

Note: If the holes in the brackets don't line up with any mating holes in the fireplace, use self-drilling screws or drill holes with a 1/8 in. drill bit.

8. Reinstall the screens.
9. Doors may be adjusted at the top or bottom by loosening the two screws on the pivot clip (top - See Figure 3 - and bottom) and sliding the doors in or out.
10. Door lock only on DM100-S is shown in Figure 5.



Figure 5