



USER MANUAL

REMOTE CONTROL

QUICK CONNECT DUCTLESS MINI-SPLIT



MODELS 3PAMSHQCW09-U230, 3PAMSHQCW12-U230, 3PAMSHQCW18-U230

Remote Controller Instructions

Remote controller	1
Operation instructions	3
Operation modes	3
Airflow direction control	4
Smart mode	5
Clock button	5
Timer mode	6
8° Heating mode	7
Super mode	7
Sleep mode	8
Ifeel mode	8

Remote controller

Remote controller

1 ON/OFF BUTTON

The appliance will turn on when button is pushed or will be turned off when pushed again.

2 MODE BUTTON

Press this button to select the operation mode.

3 FAN BUTTON

Used to select fan speed in sequence auto, higher, high, medium, low or lower.

4 5 ROOM TEMPERATURE SETTING BUTTONS

Used to adjust the room temperature, the timer, and the clock function.

6 SMART BUTTON

Used to automatically set temperature and fan speeds based on the room temperature.

7 SLEEP BUTTON

Used to set or cancel Sleep Mode operation.

8 ◆ SWING BUTTON

Used to stop or start vertical adjustment louver swinging and set the desired up/down airflow direction.

9 IFEEL BUTTON

Used to set IFEEL temperature sensing mode operation. Press it once, the IFEEL function will be started. Press it again, the IFEEL function will be shut off.

10 CLOCK BUTTON

Used to set the current time.

11 12 TIMER ON/OFF BUTTON

Used to set or cancel the timer operation.

13 SUPER BUTTON

Used to start or stop the fast cooling/heating. (Fast cooling operates at high fan speed with 61°F(16°C) set temp automatically ; Fast heating operates at auto fan speed with 86°F(30°C) set temp automatically.)

Indication symbols on LCD:

❄ Cooling indicator

💧 Dry indicator

❀ Fan only indicator

❀ 8° Heating indicator

❀ Heating indicator

✿ Auto fan speed

✿ Higher fan speed

✿ High fan speed

✿ Medium fan speed

✿ Low fan speed

☽ Lower fan speed

☽ Sleep 1 indicator

☽ Sleep 2 indicator

☽ Sleep 3 indicator

☽ Sleep 4 indicator

▲ Smart indicator

◎ Super indicator

◎ Mute indicator


Signal transmit

ON 88:00 Display set timer

⌚ Ifeel

88°F Display temperature

OFF Display current time

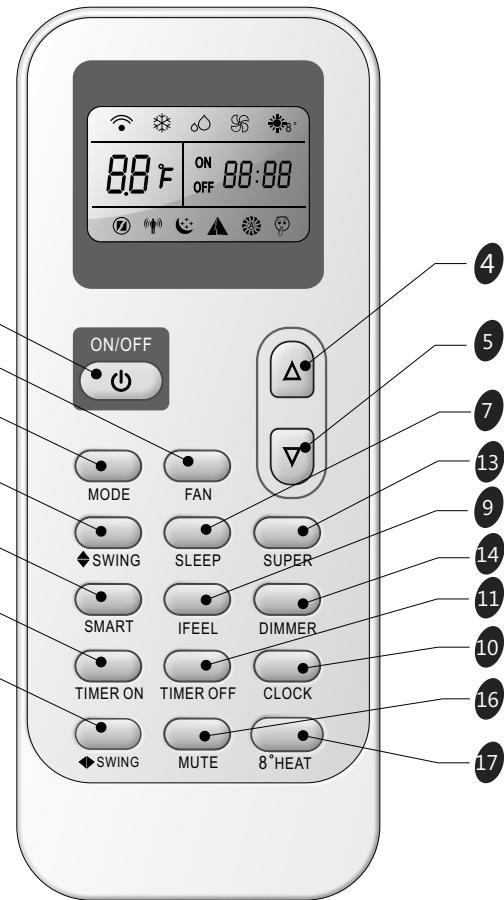

14 DIMMER BUTTON

When you press this button, all the display of indoor unit will be hidden. Press any button to resume display.

15 ◆ SWING BUTTON

Used to stop or start Horizontal adjustment louver swinging and set the desired left/right airflow direction.

16 MUTE BUTTON

Fan speed is automatically set at lower fan speed.

17 8°C/46°F HEAT BUTTON

Used to automatically set the heating mode, when a lower temperature operation is desired.

Note: Each mode and relevant function will be further specified in following pages.

Remote controller

Remote controller

- **How to Insert the Batteries**


Remove the battery cover according to the direction of the arrow.

Insert new batteries making sure that the (+) and (-) of battery are matched correctly.

Reattach the cover by sliding it back into position.

Note:


- Use 2 LR03 AAA(1.5volt) batteries. Do not use rechargeable batteries. Replace batteries with new ones of the same type when the display becomes dim.

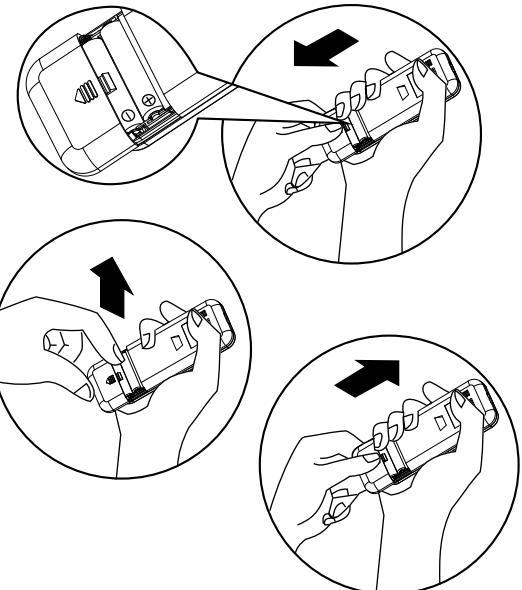

- **Storage and Tips for Using the Remote Controller**

The remote controller may be stored or mounted on the wall with a remote control holder.

Note: The remote controller holder is an optional part.

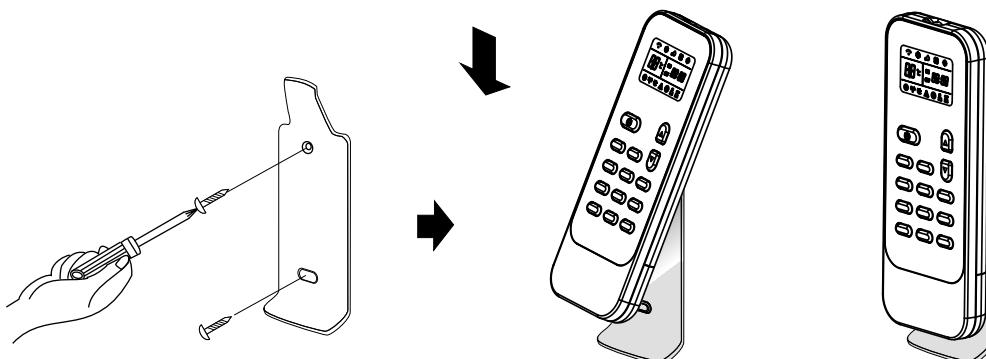

- **How to Use**


To operate, aim the remote control at the signal receptor on the air conditioning unit. The remote control will operate the air conditioner at a distance up to 23 ft (7 m) when pointing at the signal receptor of the indoor unit.

⚠ CAUTIONS

For appropriate signal transmission between remote controller and indoor unit, keep the signal receiver away from the following items:

- Direct sunlight or other strong lights or heat
- Flat panel television screen or other electrical appliances that react to the remote controller

Additionally, the air conditioner will not operate if curtains, doors or other materials block the signals from the remote controller to the indoor unit. If the signal may not be transmitted properly, either move these materials or consult your local dealer.

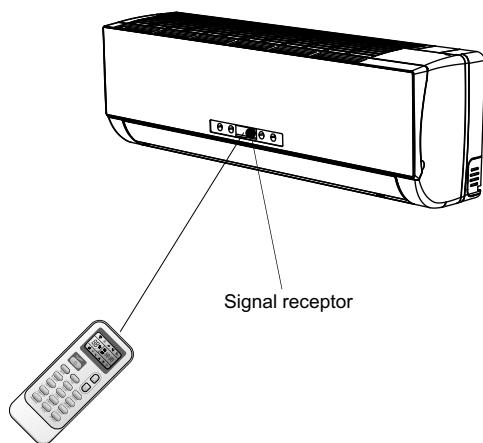

Operation instructions

Operation modes

Selecting mode

Each time **MODE** button is pressed, the operation mode is changed in sequence:

COOLING → DRY → FAN ONLY → HEATING

Heating mode is NOT available for cooling only air conditioner.

FAN mode

Each time the "FAN" button is pressed, the fan speed is changed in sequence:

Auto → Higher → High → Medium → Low → Lower

At "FAN ONLY" mode, the "Auto" is not available.
At "DRY" mode, Fan speed is set at "AUTO" automatically, "FAN" button is ineffective in this case.

Setting temperature

▲ Press once to raise temperature setting by 1°F or 1°C.

▼ Press once to lower temperature setting by 1°F or 1°C.

Range of available set temperature	
*HEATING, COOLING	61°F ~ 86°F(16°C~30°C)
DRY	-7 ~ 7
FAN ONLY	unable to set


Note: Press and hold "MODE" button and "▼" button together for 3 seconds will alternate the temperature display between the °C and °F scale.
Note: Heating mode is NOT available for cooling only models.
Note: At "Dry" mode, the unit can decrease or rise 7°F by remote controller if you feel uncomfortable.

Turning on

Press **POWER** button, when the appliance receives the signal, the RUN indicator of the indoor unit lights up.

SWING, SMART, TIMER ON, TIMER OFF, CLOCK, 8° HEATING, SLEEP and SUPER operation modes will be specified in the following pages.

• Changing modes during operation, sometimes the unit does not response at once. Wait 3 minutes.
• During heating operation, air flow is not discharged at the beginning. After 2–5 minutes, the air flow will be discharged until temperature of indoor heat exchanger rises.
• Wait 3 minutes before restarting the appliance.

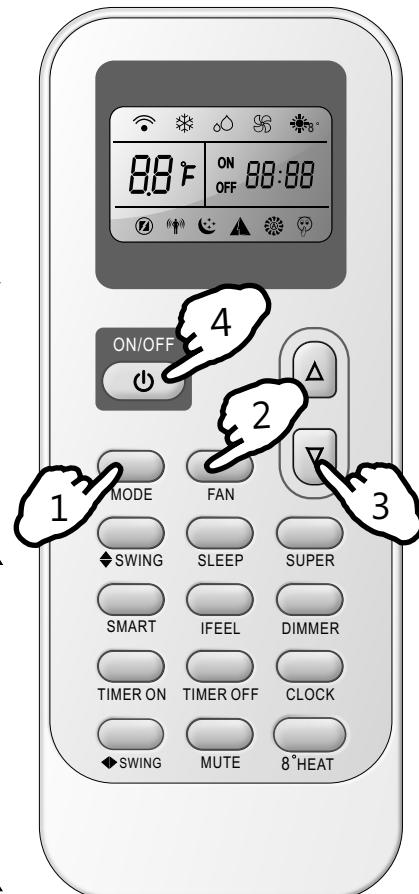

Operation instructions

Airflow direction control

Airflow direction control

Vertical airflow(Horizontal airflow) is automatically adjusted to a certain angle in accordance with the operation mode after turning on the unit.

Operation mode	Direction of airflow
COOLING, DRY	horizontal
*HEATING, FAN ONLY	downward

The direction of airflow can be also adjusted to your own requirement by pressing the "SWING" button of the remote controller.

5

**Heating mode is only available for heat pump models.*



Vertical airflow control (with the remote controller)

Using remote controller to set various angles of flow or specific angle as you like.

Swinging airflow

Pressing "◆ SWING" button once, the vertical adjustment louver will swing up and down automatically.

Desired direction airflow

Pressing the "◆ SWING" button again when the louvers swing to a suitable angle as desired.

Horizontal airflow control (with the remote controller)

Using remote controller to set various angles of flow or specific angle as you like.

Swinging airflow

Pressing "◆ SWING" button once, the horizontal adjustment louver will swing left and right automatically.

Desired direction airflow

Pressing the "◆ SWING" button again when the louvers swing to a suitable angle as desired.

NOTE:If the unit doesn't have four ways airflow function,you can adjust horizontal airflow by yourself.(invalid for some models)

A Do not turn the vertical adjustment louvers manually, otherwise malfunction may occur. If that happens, turn off the unit first and cut off the power supply, then restore power supply again.

B It is better not to let the vertical adjustment louver tilt downward for a long time at COOLING or DRY mode to prevent condensed water from dripping.

Operation instructions

SMART mode

In this mode, temperature and fan speed are automatically set based on the actual room temperature.

Operation mode and temperature are determined by indoor temperature		
Heat pump models		
Indoor temperature	Operation mode	Target temperature
70°F(21°C) or below	HEATING	72°F(22°C)
70°F-73°F(21°C~23°C)	FAN ONLY	
73°F-79°F(23°C~26°C)	DRY	Room temperature decrease 2°F(2°C) after operate for 3 minutes
Over 79°F(26°C)	COOLING	79°F(26°C)
Cooling only models		
Indoor temperature	Operation mode	Target temperature
73°F(23°C) or below	FAN ONLY	
73°F-79°F(23°C~26°C)	DRY	Room temperature decrease 2°F(2°C) after operate for 3 minutes
Over 79°F(26°C)	COOLING	79°F(26°C)



SMART button is ineffective in SUPER mode. Press

MODE button cancel SMART mode.

Note: Temperature, airflow and direction are controlled automatically in SMART mode. However, for the inverter you can choose from -7°C to 7°C (1 degree Celsius = 1.8 degrees Fahrenheit.) If you still feel uncomfortable.

What you can do in SMART mode		
Your feeling	button	adjustment procedure
Uncomfortable because of unsuitable air flow volume.		Indoor fan speed alternates among Auto, Higher, High, Medium, low and Lower each time this button is pressed.
Uncomfortable because of unsuitable flow direction.		Press it once, the vertical adjustment louver swings to change vertical airflow direction. Press it again, swings stops. For horizontal airflow direction, please refer to the previous page for details.

CLOCK button

You can adjust the real time by pressing CLOCK button, then using and buttons to get the correct time, press CLOCK button again the real time is set.



Operation instructions

TIMER mode

It is convenient to set the timer on with **TIMER ON** buttons in the morning to achieve a comfortable room temperature in the evening.

► How to set the **TIMER ON**

The **TIMER ON** button can be used to set the timer to switch on the appliance at your desired time.

- i) Press the **TIMER ON** button and when "ON 12:00" flashes on the LCD display, you can then press the  or  buttons to select the time you wish for the appliance to turn on.



Press the  or  button once to increase or decrease the time setting by 1 minute.
Press the  or  button within 2 seconds to increase or decrease the time setting by 10 minutes.
Press the  or  button for 5 seconds to increase or decrease the time by 1 hour.

Note: If you don't set the time in 10 seconds after you press the **TIMER ON** button, the remote control will exit the **TIMER ON** mode automatically.

- ii) When your desired time is displayed on the LCD, press the **TIMER ON** button and confirm it.
A "beep" will sound.
"ON" stops flashing.
The **TIMER** indicator on the indoor unit lights up. (invalid for some models)
- iii) After the set timer is displayed for 5 seconds the clock will be displayed on the remote control.

► How to cancel **TIMER ON**

Press the **TIMER ON** button again. You will hear a "beep" and indicator will disappear, canceling the **TIMER ON** function.

Note: It is similar to set **TIMER OFF**. You can make the appliance switch off automatically at your desired time.

Operation instructions

8° HEATING mode

8° HEATING mode

- 8° HEAT button is used to set 8°C (46°F) heating mode. In this mode, the fan speed is automatically set to "AUTO".
- The 8° HEATING mode will be started when you press the 8° HEAT button in heat mode.
- If you press any button except for TIMER ON, TIMER OFF, CLOCK, IFEEL and SWING button, you can escape from 8°HEATING mode. Then the display  will disappear and the 8°HEATING mode will be cancelled.



Note:

In 8°HEATING mode, the default temperature is set 8°C.

8°HEATING mode can be set only when the air conditioner works in the heating mode.

SUPER mode

SUPER mode

- **SUPER** mode is used to start or stop fast cooling or heating. In SUPER mode, the super indicator  will display on LCD. Fast cooling operates at high fan speed, changing the set temperature automatically to 61°F(16°C); Fast heating operates at auto fan speed, changing the set temperature automatically to 86 °F(30°C).
- **SUPER** mode can be set when the appliance is in operation or energized.
- In SUPER mode, you can set temperature, airflow direction or timer. If you want to turn off SUPER mode, press SUPER, MODE, FAN, ON/OFF or SLEEP button, the display will return to the original mode.

Note:

- *SMART button is not available in SUPER mode.*
- *The Appliance will continue working in SUPER mode , if you don't escape from it by pressing any of the buttons mentioned above.*
- *Heating is NOT available for cooling only air conditioner.*
- *For the first generation of products, you can't set temperature in super mode, but you can press TEMPERATURE SETTING button to escape super mode.*

Operation instructions

SLEEP mode

SLEEP mode

SLEEP mode can be set in **COOLING**, **HEATING** or **DRY** mode. This function gives you a more comfortable environment to sleep in.

- The appliance will stop automatically after operating for 8 hours.
- Fan speed is automatically set to low speed.

Each time **SLEEP** button is pressed, the operation mode is changed in sequence:

SLEEP 1 → SLEEP 2 → SLEEP 3 → SLEEP 4 → QUIT SLEEP MODE



SLEEP mode 1:

- Set temperature will rise by 2°F (2°C) at most if the appliance operates in cooling mode for 2 hours constantly.
- Set temperature will decrease by 2°F (2°C) at most if the appliance operates in heating mode for 2 hours constantly.

SLEEP mode 2:

- Set temperature will rise by 2°F(2°C) if the appliance operates in cooling mode for 2 hours constantly, decrease by 1°F(1°C) after 6 hours, then decrease by 1°F(1°C) after 7 hours.
- Set temperature will decrease by 2°F(2°C) if the appliance operates in heating mode for 2 hours constantly, rise by 1°F(1°C) after 6 hours, then rise by 1°F(1°C) after 7 hours.

SLEEP mode 3:

- Set temperature will rise by 1°F(1°C) if the appliance operates in cooling mode for 1 hour, rise by 2°F(2°C) after 2 hours, then decrease by 2°F(2°C) after 6 hours, decrease by 1°F(1°C) after 7 hours.
- Set temperature will decrease by 2°F(2°C) if the appliance operates in heating mode for 1 hour, decrease by 2°F(2°C) after 2 hours, then rise by 2°F(2°C) after 6 hours, rise by 2°F(2°C) after 7 hours.

SLEEP mode 4:

- Set temperature will stay steady.

Note: Heating is NOT available for cooling only air conditioner.

Note: Press SUPER, SMART, MODE, SLEEP or FAN button cancel SLEEP mode.

IFEEL mode

IFEEL mode

In IFEEL mode, the temperature sensor built in the remote controller is activated and transmits the signal back the unit. The unit can adjust the temperature to provide maximum comfort.

Note: When using IFEEL mode, advice to put the remote in the place where the indoor unit can receive the signal easily.

Note: When stopping the air conditioner, advice to cancel the IFEEL mode so as to save energy.



5401 Dansher Road
Countryside, IL 60525

844-4PA-AIRE | 844-472-2473 | support@perfectaire.us

CANADA SUPPORT 877-997-2473 | supportcanada@perfectaire.us

www.perfectaire.us