



# ACiQ

**STANDARD & EXTREME HEAT SINGLE-ZONE CONDENSER (230V MODELS)**

## SERVICE MANUAL

### Models Covered:

ACiQ-06ZPL-HP230C	ACiQ-09ZS-HP230C
ACiQ-09ZPL-HP230C	ACiQ-12ZS-HP230C
ACiQ-12ZPL-HP230C	ACiQ-18ZS-HP230C
ACiQ-18ZPL-HP230C	ACiQ-24ZS-HP230C
ACiQ-24ZPL-HP230C	ACiQ-30Z-HP230C
ACiQ-36ZPL-HP230C	ACiQ-36Z-HP230C
ACiQ-48ZPL-HP230C	
ACiQ-60ZPL-HP230C	

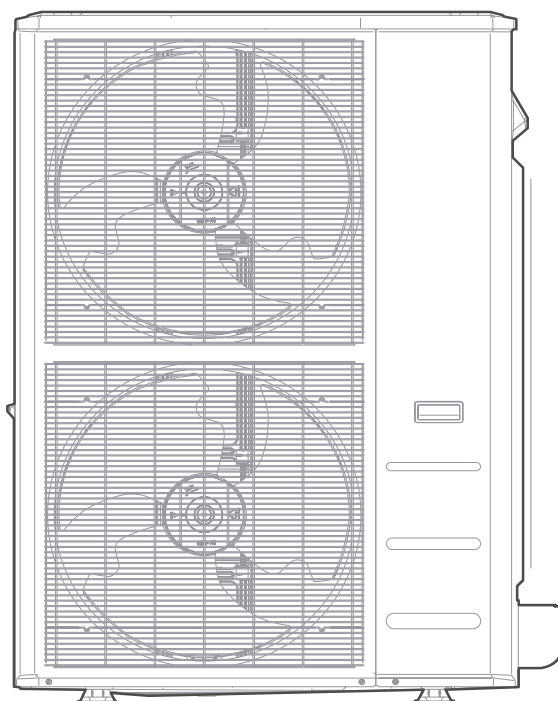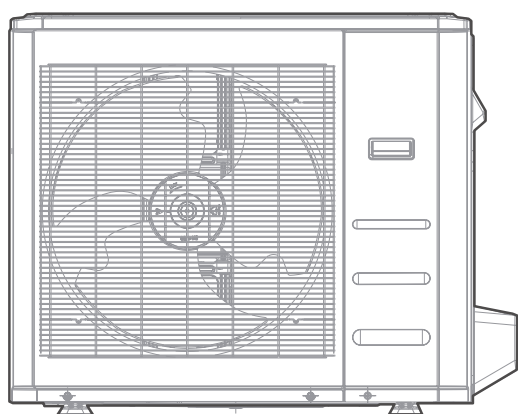

**VERSION DATE: 5-16-25**



A2L

---

## Table of Contents

---

### **§. Safety Precautions**

1. Precautions
2. Information servicing

### **§. Model Reference & External Appearance**

1. Model Reference
2. External Appearance

### **§. Outdoor Unit**

1. Dimensional Drawings
2. Service Space
3. Capacity Correction Factor for Height Difference
4. Noise Criterion Curves
5. Refrigerant Cycle Diagrams
6. Electrical Wiring Diagrams

### **§. Installation**

### **§. Basic functions**

### **§. Troubleshooting**

1. Safety Caution
2. General Troubleshooting
3. Outdoor Unit Point Check Function
4. Quick Maintenance by Error Code
5. Troubleshooting by Error Code
6. Check Procedures

### **Appendix**

- i) Temperature Sensor Resistance Value Table for TP (°C – K)
- ii) Other Temperature Sensor Resistance Value Table (°C – K)
- iii) Pressure On Service Port





---

# Safety Precautions


## Contents


1.	Precautions.....	2
2.	Information servicing(For flammable materials).....	4

## 1. Precautions


To prevent personal injury, or property or unit damage, adhere to all precautionary measures and instructions outlined in this manual. Before servicing a unit, refer to this service manual and its relevant sections.

Failure to adhere to all precautionary measures listed in this section may result in personal injury, damage to the unit or to property, or in extreme cases, death.


 **WARNING** indicates a potentially hazardous situation which if not avoided could result in serious personal injury, or death.

 **CAUTION** indicates a potentially hazardous situation which if not avoided could result in minor or moderate personal injury, or unit damage.

### 1.1 In case of Accidents or Emergency


 **WARNING**

- If a gas leak is suspected, immediately turn off the gas and ventilate the area if a gas leak is suspected before turning the unit on.
- If strange sounds or smoke is detected from the unit, turn the breaker off and disconnect the power supply cable.
- If the unit comes into contact with liquid, contact an authorized service center.
- If liquid from the batteries makes contact with skin or clothing, immediately rinse or wash the area well with clean water.
- Do not insert hands or other objects into the air inlet or outlet while the unit is plugged in.
- Do not operate the unit with wet hands.
- Do not use a remote controller that has previously been exposed to battery damage or battery leakage.


 **CAUTION**

- Clean and ventilate the unit at regular intervals when operating it near a stove or near similar devices.
- Do not use the unit during severe weather conditions. If possible, remove the product from the window before such occurrences.

### 1.2 Pre-Installation and Installation


 **WARNING**

- Use this unit only on a dedicated circuit.
- Damage to the installation area could cause the unit to fall, potentially resulting in personal injury, property damage, or product failure.
- Only qualified personnel should disassemble, install, remove, or repair the unit.
- Only a qualified electrician should perform electrical work. For more information, contact your dealer, seller, or an authorized service center.


 **CAUTION**

- While unpacking be careful of sharp edges around the unit as well as the edges of the fins on the condenser and evaporator.

### 1.3 Operation and Maintenance

 **WARNING**

- Do not use defective or under-rated circuit breakers.
- Ensure the unit is properly grounded and that a dedicated circuit and breaker are installed.
- Do not modify or extend the power cable. Ensure the power cable is secure and not damaged during operation.
- Do not unplug the power supply plug during operation.
- Do not store or use flammable materials near the unit.
- Do not open the inlet grill of the unit during operation.
- Do not touch the electrostatic filter if the unit is equipped with one.
- Do not block the inlet or outlet of air flow to the unit.
- Do not use harsh detergents, solvents, or similar items to clean the unit. Use a soft cloth for cleaning.
- Do not touch the metal parts of the unit when removing the air filter as they are very sharp.
- Do not step on or place anything on the unit or outdoor units.
- Do not drink water drained from the unit
- Avoid direct skin contact with water drained from the unit.
- Use a firm stool or step ladder according to manufacturer procedures when cleaning or maintaining the unit.

 **CAUTION**

- Do not install or operate the unit for an extended period of time in areas of high humidity or in an environment directly exposing it to sea wind or salt spray.
- Do not install the unit on a defective or damaged installation stand, or in an unsecure location.
- Ensure the unit is installed at a level position
- Do not install the unit where noise or air discharge created by the outdoor unit will negatively impact the environment or nearby residences.
- Do not expose skin directly to the air discharged by the unit for prolonged periods of time.
- Ensure the unit do not operate in areas water or other liquids.
- Ensure the drain hose is installed correctly to ensure proper water drainage.
- When lifting or transporting the unit, it is recommended that two or more people are used for this task.
- When the unit is not to be used for an extended time, disconnect the power supply or turn off the breaker.

## **WARNING For Using Flammable Refrigerant**

### 1. Installation (where refrigerant pipes are allowed)

- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorises their competence to handle refrigerants safely in accordance with an industry recognised assessment specification.
- Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
- That the installation of pipe-work shall be kept to a minimum.
- That pipe-work shall be protected from physical damage.
- Where refrigerant pipes shall be compliance with national gas regulations.
- That mechanical connections shall be accessible for maintenance purposes.
- Be more careful that foreign matter (oil, water, etc) does not enter the piping.

Also, when storing the piping, securely seal the opening by pinching, taping, etc.

- Appliance shall be stored in a well ventilated area where the room size corresponds to the room area as specified for operation.
- Appliance shall be stored in a well ventilated area where the room size corresponds to the room area as specified for operation.
- Joints shall be tested with detection equipment with a capability of 5 g/year of refrigerant or better, with the equipment in standstill and under operation or under a pressure of at least these standstill or operation conditions after installation. Detachable joints shall NOT be used in the indoor side of the unit (brazed, welded joint could be used).
- In cases that require mechanical ventilation, ventilation openings shall be kept clear of obstruction.

### 2. When a FLAMMABLE REFRIGERANT is used, the requirements for installation space of appliance and /or ventilation requirements are determined according to

- the mass charge amount (M) used in the appliance,
- the installation location,
- the type of ventilation of the location or of the appliance.
- piping material, pipe routing, and installation shall include protection from physical damage in operation and service, and be in compliance with national and local codes and standards, such as ASHRAE 15, IAPMO Uniform Mechanical Code, ICC International Mechanical Code, or CSA B52. All field joints shall be accessible for inspection prior to being covered or enclosed.
- that protection devices, piping, and fittings shall be protected as far as possible against adverse environmental effects, for example, the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris;
- that piping in refrigeration systems shall be so designed and installed to minimize the likelihood of hydraulic shock damaging the system;
- that steel pipes and components shall be protected against corrosion with a rustproof coating before applying any insulation;
- that precautions shall be taken to avoid excessive vibration or pulsation;
- the minimum floor area of the room shall be mentioned in the form of a table or a single figure without reference to a formula;
- after completion of field piping for split systems, the field pipe-work shall be pressure tested with an inert gas and then vacuum

tested prior to refrigerant charging, according to the following requirements:

- a. The minimum test pressure for the low side of the system shall be the low side design pressure and the minimum test pressure for the high side of the system shall be the high side design pressure, unless the high side of the system can not be isolated from the low side of the system in which case the entire system shall be pressure tested to the low side design pressure.
- b. The test pressure after removal of pressure source shall be maintained for at least 1 h with no decrease of pressure indicated by the test gauge, with test gauge resolution not exceeding 5% of the test pressure.

c. During the evacuation test, after achieving a vacuum level specified in the manual or less, the refrigeration system shall be isolated from the vacuum pump and the pressure shall not rise above 1500 microns within 10 min. The vacuum pressure level shall be specified in the manual, and shall be the lesser of 500 microns or the value required for compliance with national and local codes and standards, which may vary between residential, commercial, and industrial buildings.

-- field-made refrigerant joints indoors shall be tightness tested according to the following requirements: The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0,25 times the maximum allowable pressure. No leak shall be detected.

-- Any servicing shall be performed only as recommended by the manufacturer.

### 3. Qualification of workers

Any maintenance, service and repair operations must be required qualification of the working personnel. Every working procedure that affects safety means shall only be carried out by competent persons that joined the training and achieved competence should be documented by a certificate. The training of these procedures is carried out by national training organizations or manufacturers that are accredited to teach the relevant national competency standards that may be set in legislation. All training shall follow the ANNEX HH requirements of UL 60335-2-40 4th Edition.

Examples for such working procedures are:

- breaking into the refrigerating circuit;
- opening of sealed components;
- opening of ventilated enclosures.

---

## 2. Information servicing(For flammable materials)

### 2.1 Checks to the area

- Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

### 2.2 Work procedure

- Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.

### 2.3 General work area

- All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.

### 2.4 Checking for presence of refrigerant

- The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres.
- Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. no sparking, adequately sealed or intrinsically safe.

### 2.5 Presence of fire extinguisher

- If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

### 2.6 No ignition sources

- No person carrying out work in relation to a REFRIGERATING SYSTEM which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks.
- "No Smoking" signs shall be displayed.

### 2.7 Ventilated area

- Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any

hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

### 2.8 Checks to the refrigeration equipment

- Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt consult the manufacturer's technical department for assistance. The following checks shall be applied to installations using FLAMMABLE REFRIGERANTS:
  - the actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed;
  - the ventilation machinery and outlets are operating adequately and are not obstructed;
  - if an indirect refrigerating circuit is being used, the secondary circuits shall be checked for the presence of refrigerant;
  - marking to the equipment continues to be visible and legible, marking and signs that are illegible shall be corrected;
  - refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

### 2.9 Checks to electrical devices

- Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

#### Initial safety checks shall include:

- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that there no live electrical components and wiring are exposed while charging, recovering or purging the system;
- that there is continuity of earth bonding.

### 2.10 Sealed electrical components shall be replaced

### 2.11 Intrinsically safe components must be replaced

---

## 2.12 Cabling

- Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

## 2.13 Detection of flammable refrigerants

- Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.
- The following leak detection methods are deemed acceptable for refrigerant systems. Electronic leak detectors may be used to detect refrigerant leaks but, in the case of FLAMMABLE REFRIGERANTS, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed. Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

NOTE Examples of leak detection fluids are

- bubble method,
- fluorescent method agents.
- If a leak is suspected, all naked flames shall be removed/ extinguished.
- If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut of valves) in a part of the system remote from the leak. See the following instructions of removal of refrigerant.

## 2.14 Removal and evacuation

- When breaking into the refrigerant circuit to make repairs or for any other purpose, conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration.
- The following procedure shall be adhered to:
  - safely remove refrigerant following local and national regulations;
  - evacuate;
  - purge the circuit with inert gas(optional for A2L);
  - evacuate(optional for A2L);
  - continuously flush or purge with inert gas when using flame to open circuit; and open the circuit;
- The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and

national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

- For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for A2L). This process shall be repeated until no refrigerant is within the system (optional for A2L). When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.
- The outlet for the vacuum pump shall not be close to any potential ignition sources, and ventilation shall be available.

## 2.15 Charging procedures

- In addition to conventional charging procedures, the following requirements shall be followed:
  - Works shall be undertaken with appropriate tools only (In case of uncertainty, please consult the manufacturer of the tools for use with flammable refrigerants)
  - Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
  - Cylinders shall be kept upright.
  - Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
  - Label the system when charging is complete(if not already).
  - Extreme care shall be taken not to overfill the refrigeration system.
  - Prior to recharging the system it shall be pressure tested with OFN. The system shall be leak tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

## 2.16 Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before the task is commenced.

- Become familiar with the equipment and its operation.
- Isolate system electrically.
- Before attempting the procedure ensure that:
  - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
  - all personal protective equipment is available and being

---

used correctly;

- the recovery process is supervised at all times by a competent person;
- recovery equipment and cylinders conform to the appropriate standards.
- Pump down refrigerant system, if possible.
- If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- Make sure that cylinder is situated on the scales before recovery takes place.
- Start the recovery machine and operate in accordance with manufacturer's instructions.
- Do not overfill cylinders. (No more than 80 % volume liquid charge).
- Do not exceed the maximum working pressure of the cylinder, even temporarily.
- When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

## 2.17 Labelling

- Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing FLAMMABLE REFRIGERANTS, ensure that there are labels on the equipment stating the equipment contains FLAMMABLE REFRIGERANT.

## 2.18 Recovery

- When removing refrigerant from a system, either for servicing or decommissioning,
- it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i. e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

- The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be carried out safely.

## 2.19 Transportation, marking and storage for units

1. Transport of equipment containing flammable refrigerants

Compliance with the transport regulations

2. Marking of equipment using signs

Compliance with local regulations

3. Disposal of equipment using flammable refrigerants

Compliance with national regulations

4. Storage of equipment/appliances

The storage of equipment should be in accordance with the manufacturer's instructions.

5. Storage of packed (unsold) equipment

Storage package protection should be constructed such that mechanical damage to the equipment inside the package will not cause a leak of the refrigerant charge. The maximum number of pieces of equipment permitted to be stored together will be determined by local regulations.

---

# Model Reference

## Contents

1.	Model Reference.....	2
2	External Appearance .....	3

---

## 1. Model Reference

Outdoor Unit Model	Capacity (Btu/h)	Power Supply
ACiQ-06ZPL-HP230C	6k Extreme Heat	1Ph, 208/230V~, 60Hz
ACiQ-09ZS-HP230C	9k	
ACiQ-09ZPL-HP230C	9k Extreme Heat	
ACiQ-12ZS-HP230C	12k	
ACiQ-12ZPL-HP230C	12k Extreme Heat	
ACiQ-18ZS-HP230C	18k	
ACiQ-18ZPL-HP230C	18k Extreme Heat	
ACiQ-24ZS-HP230C	24k	
ACiQ-24ZPL-HP230C	24k Extreme Heat	
ACiQ-30Z-HP230C	30k	
ACiQ-36Z-HP230C	36k	
ACiQ-36ZPL-HP230C	36k Extreme Heat	
ACiQ-48ZPL-HP230C	48k Extreme Heat	
ACiQ-60ZPL-HP230C	60k Extreme Heat	




## 2. External Appearance

### Outdoor Unit

6k Extreme Heat/9k/12k



9k Extreme Heat/12k Extreme Heat

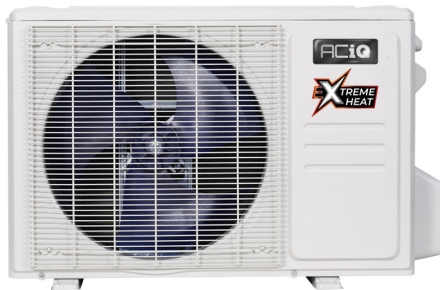


18k/18k Extreme Heat



24k/24k Extreme Heat/30k/36k



36k Extreme Heat

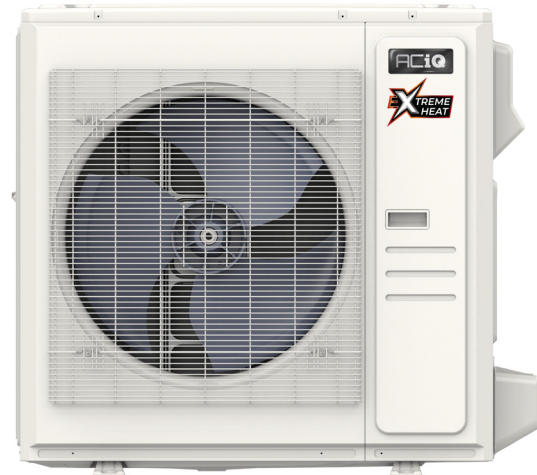

48k/48k Extreme Heat/60k/60k Extreme Heat



---

# Outdoor Unit

## Contents

1.	Dimensional Drawings .....	2
2.	Installation location.....	9
3.	Capacity Correction Factor for Height Difference .....	10
4.	Noise Criterion Curves.....	17
5.	Refrigerant Cycle Diagrams .....	22
6.	Electrical Wiring Diagrams.....	30


---

## 1. Dimensional Drawings


Please check the corresponding dimensional drawing according to the panel plate.

Outdoor Unit Model	Panel Plate
ACiQ-06ZPL-HP230C	X230
ACiQ-09ZS-HP230C	X230
ACiQ-09ZPL-HP230C	X330
ACiQ-12ZS-HP230C	X230
ACiQ-12ZPL-HP230C	X330
ACiQ-18ZS-HP230C	X430
ACiQ-18ZPL-HP230C	X430
ACiQ-24ZS-HP230C	D30
ACiQ-24ZPL-HP230C	D30
ACiQ-30Z-HP230C	D30
ACiQ-36Z-HP230C	D30
ACiQ-36ZPL-HP230C	X630
ACiQ-48ZPL-HP230C	E30
ACiQ-60ZPL-HP230C	E30


X230 Platform

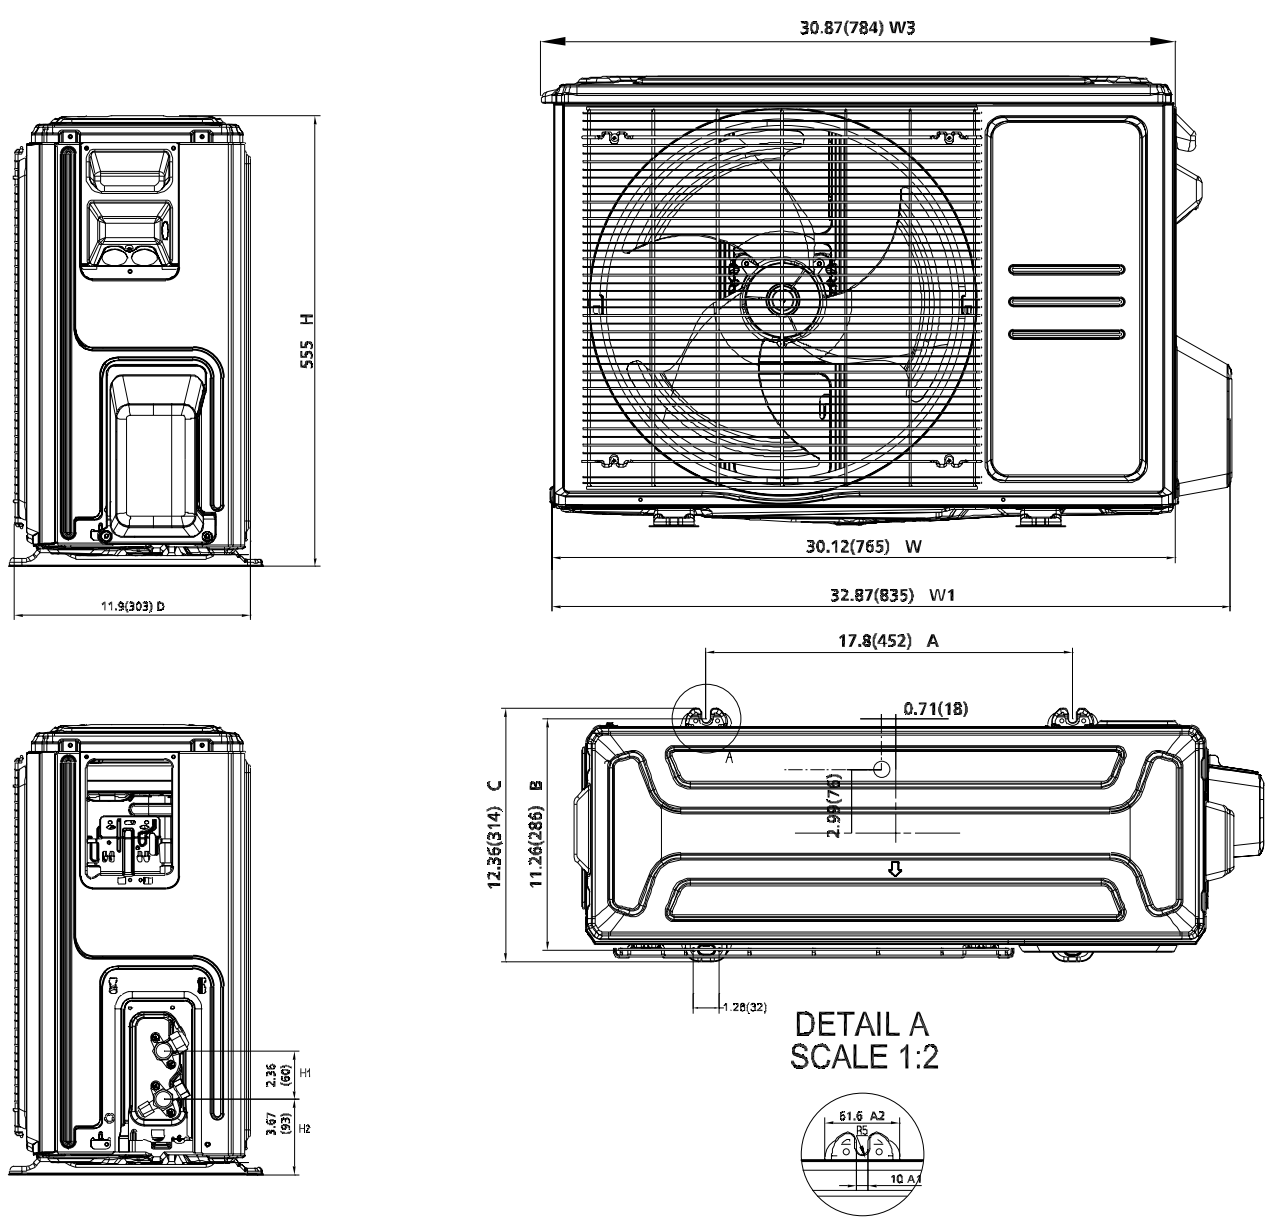


X330 Platform

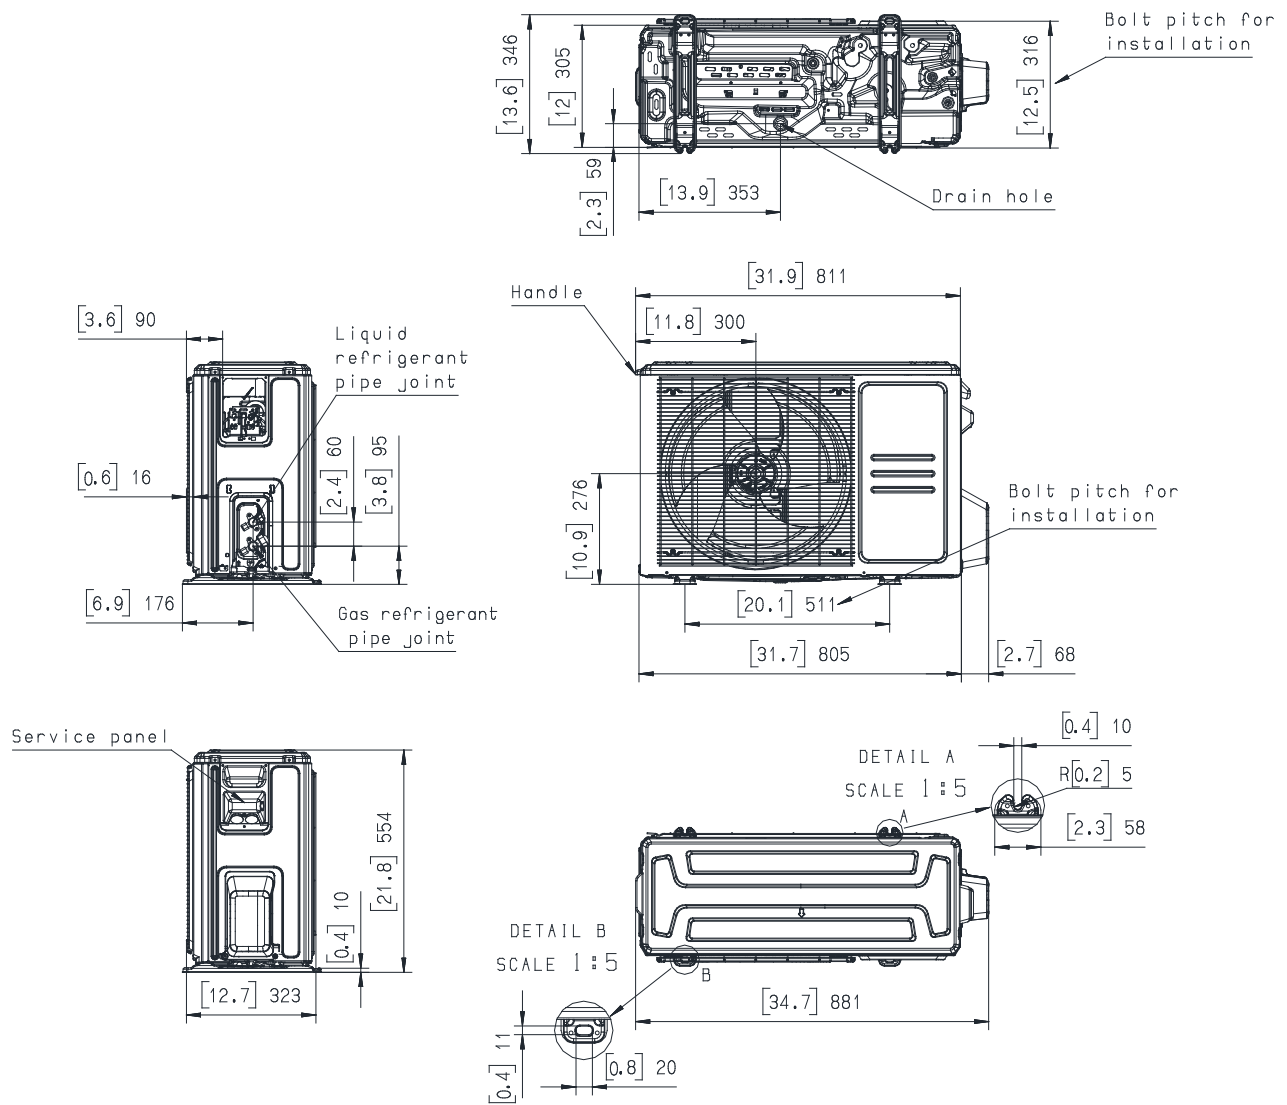


## X430 Platform

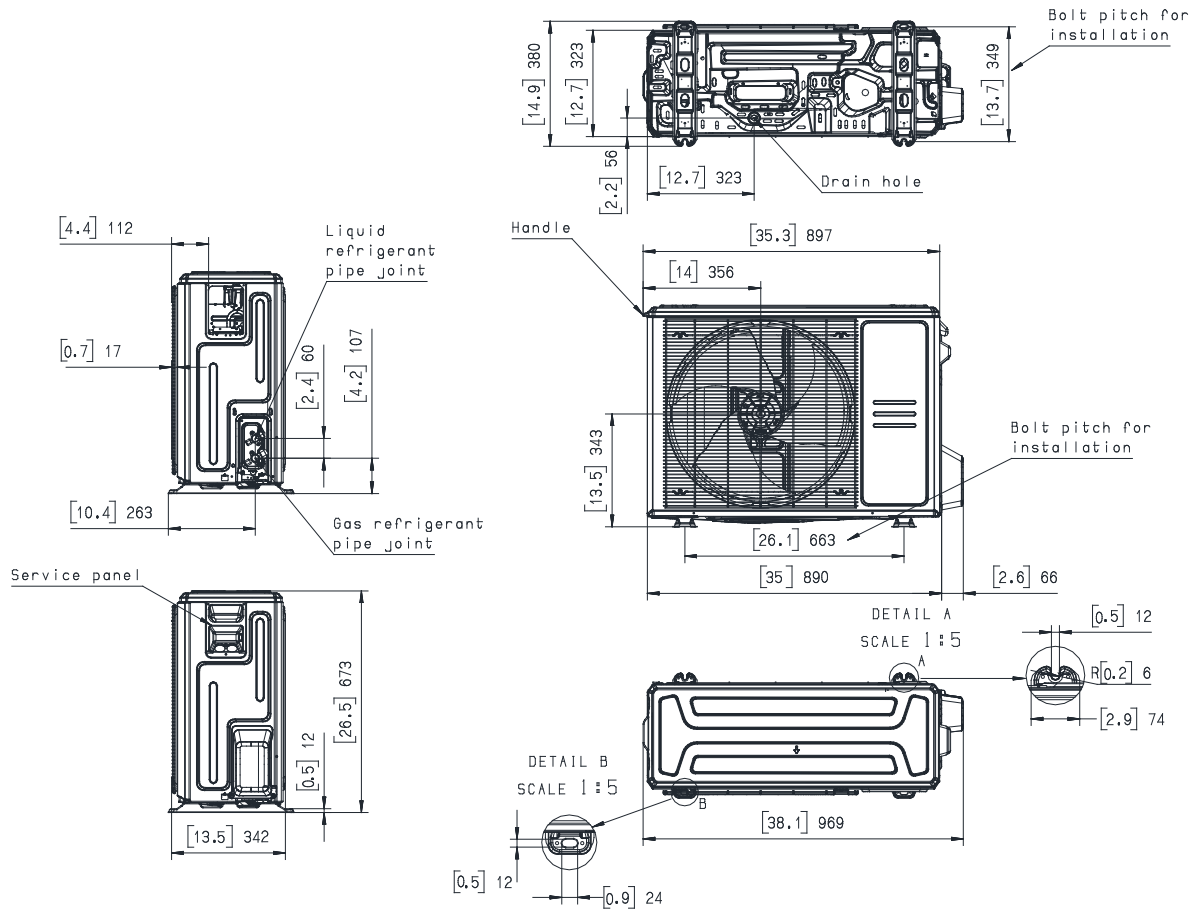

## D30 Platform

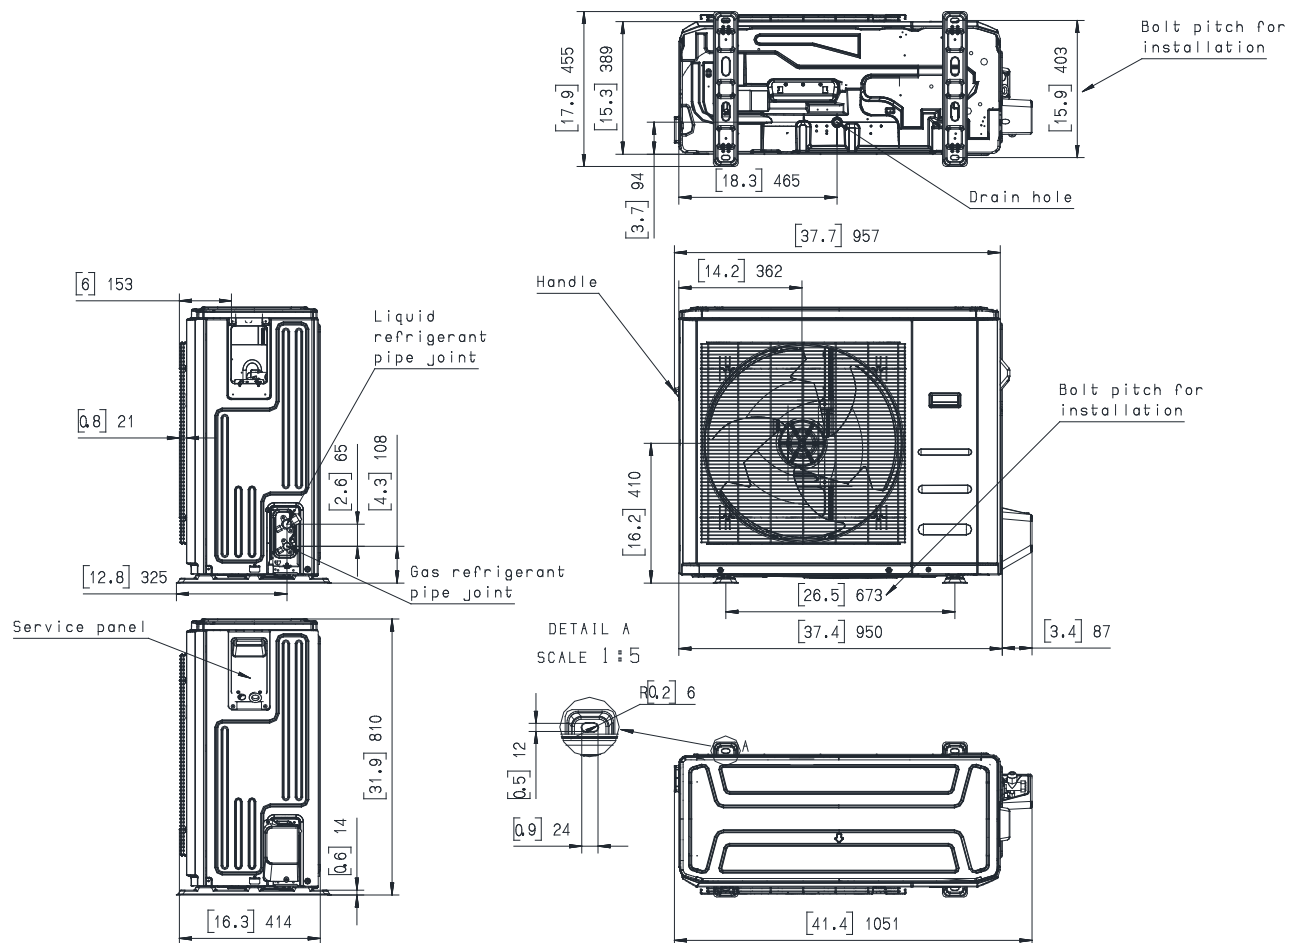


## X630 Platform


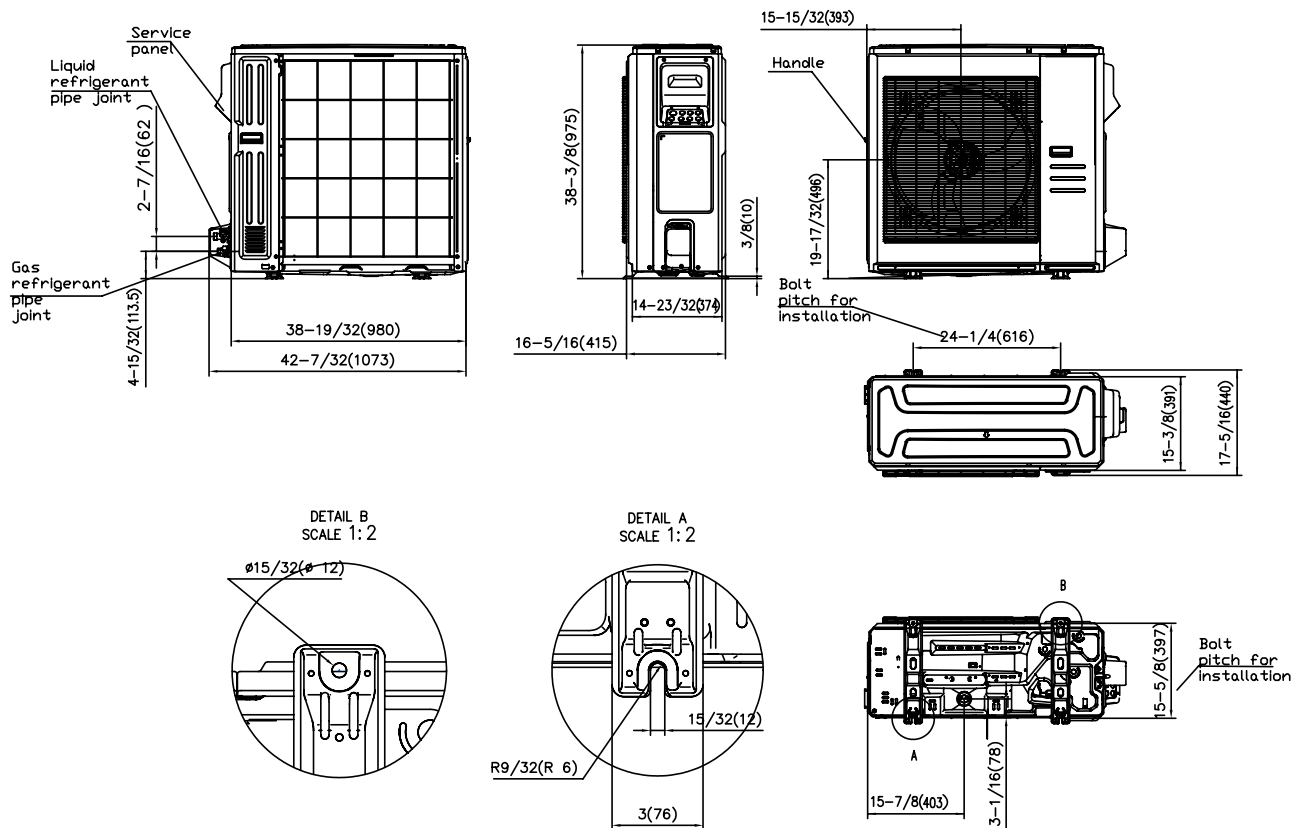




E30 Platform

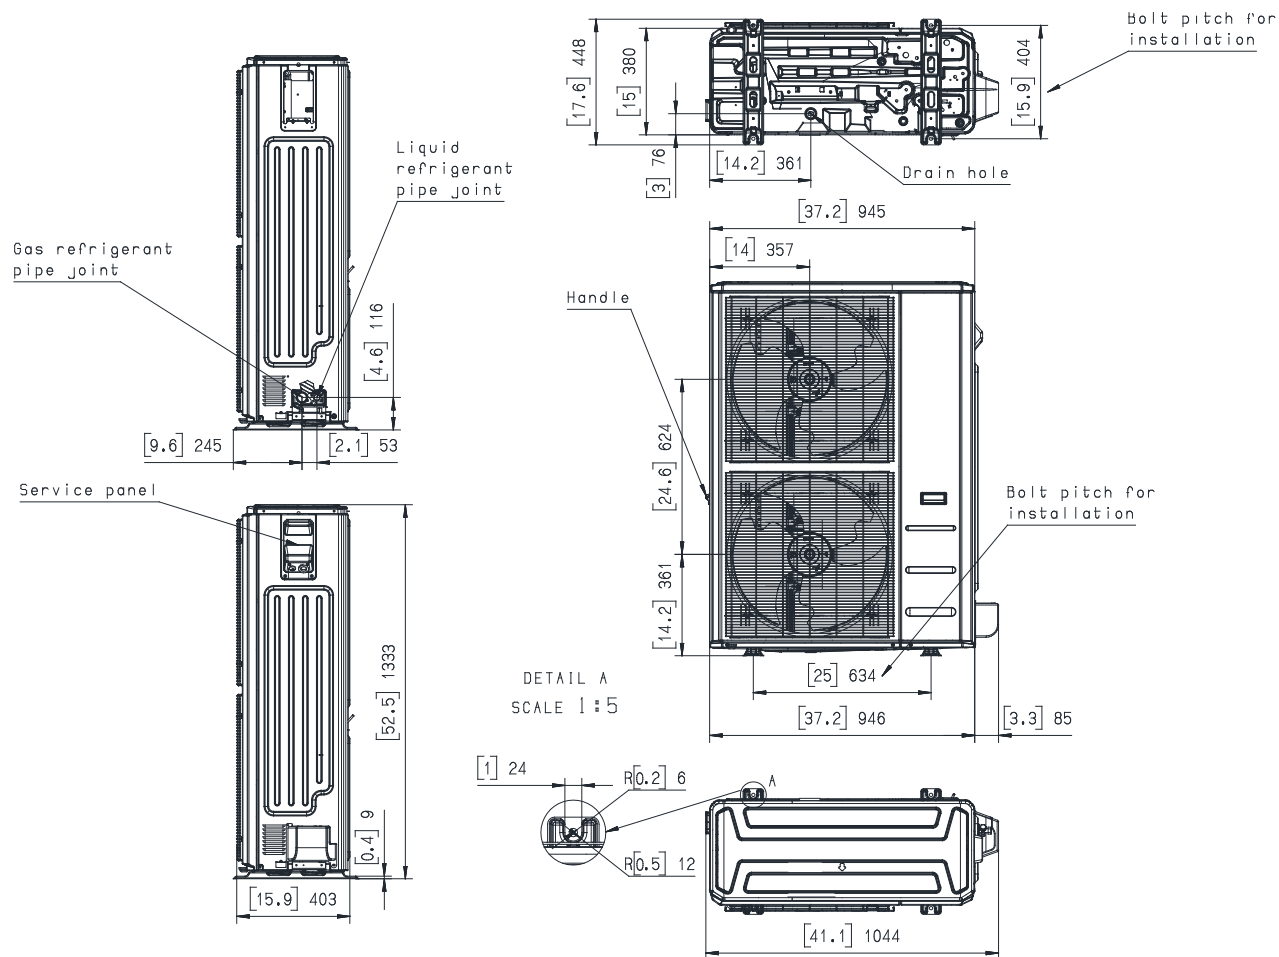

## 2. Installation location

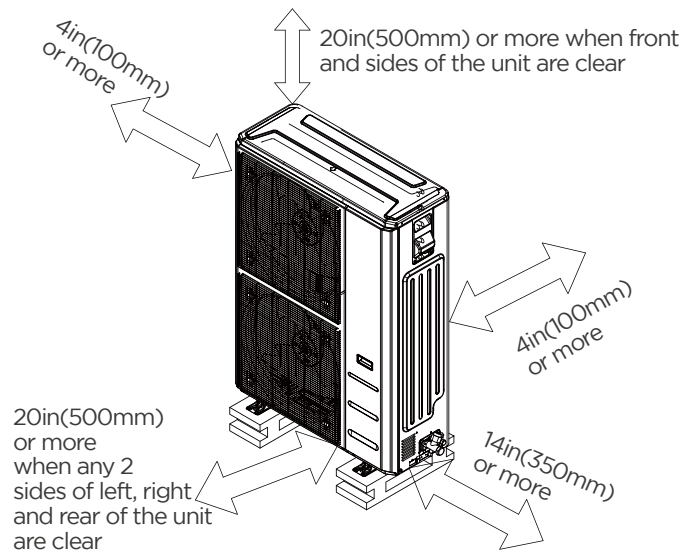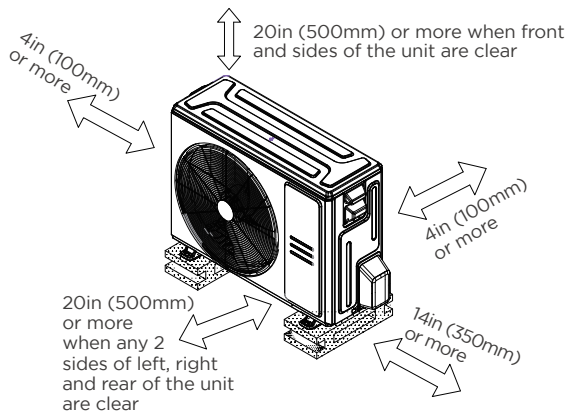

### 3. Capacity Correction Factor for Height Difference

Capacity (Btu/h)	6k 9k		Pipe Length (m)			
Indoor Upper than Outdoor			24.6/7.5	32.8/10	65.6/20	82.0/25
Height difference H (m)	Cooling	32.8/10	<div></div>	0.969	0.936	0.920
		16.4/5	0.995	0.979	0.946	0.929
		0	1.000	0.984	0.951	0.934
	Heating	32.8/10	<div></div>	0.989	0.967	0.956
		16.4/5	1.000	0.989	0.967	0.956
		0	1.000	0.989	0.967	0.956
Outdoor Upper than Indoor			24.6/7.5	32.8/10	65.6/20	82.0/25
Height difference H (m)	Cooling	0	1.000	0.984	0.951	0.934
		16.4/5	1.000	0.984	0.951	0.934
		32.8/10	<div></div>	0.984	0.951	0.934
	Heating	0	1.000	0.989	0.967	0.956
		16.4/5	0.992	0.981	0.959	0.948
		32.8/10	<div></div>	0.973	0.952	0.941

Capacity (Btu/h)	12k		Pipe Length (m)			
Indoor Upper than Outdoor			24.6/7.5	32.8/10	65.6/20	82.0/25
Height difference H (m)	Cooling	49.2/15			0.975	0.932
		32.8/10		0.985	0.985	0.942
		16.4/5	0.995	0.995	0.995	0.951
		0	1.000	1.000	1.000	0.956
	Heating	49.2/15			0.981	0.974
		32.8/10		0.994	0.981	0.974
		16.4/5	1.000	0.994	0.981	0.974
		0	1.000	0.994	0.981	0.974
Outdoor Upper than Indoor			24.6/7.5	32.8/10	65.6/20	82.0/25
Height difference H (m)	Cooling	0	1.000	1.000	1.000	0.956
		16.4/5	1.000	1.000	1.000	0.956
		32.8/10		1.000	1.000	0.956
		49.2/15			1.000	0.956
	Heating	0	1.000	0.994	0.981	0.974
		16.4/5	0.992	0.986	0.973	0.966
		32.8/10		0.978	0.965	0.958
		49.2/15			0.957	0.951

Capacity (Btu/h)	18k		Pipe Length (m)			
Indoor Upper than Outdoor			24.6/7.5	32.8/10	65.6/20	98.4/30
Height difference H (m)	Cooling	65.6/20			0.941	0.919
		32.8/10		0.974	0.951	0.928
		16.4/5	0.995	0.983	0.960	0.937
		0	1.000	0.988	0.965	0.942
	Heating	65.6/20			0.987	0.978
		32.8/10		0.996	0.987	0.978
		16.4/5	1.000	0.996	0.987	0.978
		0	1.000	0.996	0.987	0.978
Outdoor Upper than Indoor			24.6/7.5	32.8/10	65.6/20	98.4/30
Height difference H (m)	Cooling	0	1.000	0.988	0.965	0.942
		16.4/5	1.000	0.988	0.965	0.942
		32.8/10		0.988	0.965	0.942
		65.6/20			0.965	0.942
	Heating	0	1.000	0.996	0.987	0.978
		16.4/5	0.992	0.988	0.979	0.970
		32.8/10		0.980	0.971	0.962
		65.6/20			0.963	0.955

Capacity (Btu/h)	24k		Pipe Length (m)					
Indoor Upper than Outdoor			24.6/7.5	32.8/10	65.6/20	98.4/30	131.2/40	164/50
Height difference H (m)	Cooling	82.0/25				0.917	0.898	0.879
		65.6/20			0.946	0.926	0.907	0.887
		32.8/10		0.975	0.955	0.936	0.916	0.896
		16.4/5	0.995	0.985	0.965	0.945	0.925	0.905
		0	1.000	0.990	0.970	0.950	0.930	0.910
	Heating	82.0/25				0.984	0.978	0.972
		65.6/20			0.991	0.984	0.978	0.972
		32.8/10		0.997	0.991	0.984	0.978	0.972
		16.4/5	1.000	0.997	0.991	0.984	0.978	0.972
		0	1.000	0.997	0.991	0.984	0.978	0.972
Outdoor Upper than Indoor			24.6/7.5	32.8/10	65.6/20	98.4/30	131.2/40	164/50
Height difference H (m)	Cooling	0	1.000	0.990	0.970	0.950	0.930	0.910
		16.4/5	1.000	0.990	0.970	0.950	0.930	0.910
		32.8/10		0.990	0.970	0.950	0.930	0.910
		65.6/20			0.970	0.950	0.930	0.910
		82.0/25				0.950	0.930	0.910
	Heating	0	1.000	0.997	0.991	0.984	0.978	0.972
		16.4/5	0.992	0.989	0.983	0.977	0.970	0.964
		32.8/10		0.981	0.975	0.969	0.963	0.957
		65.6/20			0.967	0.961	0.955	0.949
		82.0/25				0.953	0.947	0.941

Capacity (Btu/h)	30k		Pipe Length (m)					
Indoor Upper than Outdoor			24.6/7.5	32.8/10	65.6/20	98.4/30	131.2/40	164/50
Height difference H (m)	Cooling	82.0/25				0.891	0.862	0.832
		65.6/20			0.930	0.900	0.871	0.841
		32.8/10		0.970	0.940	0.910	0.879	0.849
		16.4/5	0.995	0.980	0.949	0.919	0.888	0.858
		0	1.000	0.985	0.954	0.923	0.893	0.862
	Heating	82.0/25				0.961	0.945	0.929
		65.6/20			0.976	0.961	0.945	0.929
		32.8/10		0.992	0.976	0.961	0.945	0.929
		16.4/5	1.000	0.992	0.976	0.961	0.945	0.929
		0	1.000	0.992	0.976	0.961	0.945	0.929
Outdoor Upper than Indoor			24.6/7.5	32.8/10	65.6/20	98.4/30	131.2/40	164/50
Height difference H (m)	Cooling	0	1.000	0.985	0.954	0.923	0.893	0.862
		16.4/5	1.000	0.985	0.954	0.923	0.893	0.862
		32.8/10		0.985	0.954	0.923	0.893	0.862
		65.6/20			0.954	0.923	0.893	0.862
		82.0/25				0.923	0.893	0.862
	Heating	0	1.000	0.992	0.976	0.961	0.945	0.929
		16.4/5	0.992	0.984	0.969	0.953	0.937	0.922
		32.8/10		0.976	0.961	0.945	0.930	0.914
		65.6/20			0.953	0.938	0.922	0.907
		82.0/25				0.930	0.915	0.900

Capacity (Btu/h)	36k		Pipe Length (m)						
Indoor Upper than Outdoor			24.6/7.5	49.2/15	82.0/25	114.8/35	164/50	213.3/65	246.1/75
Height difference H (m)	Cooling	98.4/30				0.889	0.851	0.812	0.787
		65.6/20			0.924	0.898	0.859	0.821	0.795
		32.8/10		0.959	0.933	0.907	0.868	0.829	0.803
		16.4/5	0.995	0.969	0.942	0.916	0.877	0.837	0.811
		0	1.000	0.974	0.947	0.921	0.881	0.841	0.815
	Heating	98.4/30				0.964	0.945	0.927	0.915
		65.6/20			0.976	0.964	0.945	0.927	0.915
		32.8/10		0.988	0.976	0.964	0.945	0.927	0.915
		16.4/5	1.000	0.988	0.976	0.964	0.945	0.927	0.915
		0	1.000	0.988	0.976	0.964	0.945	0.927	0.915
Outdoor Upper than Indoor			24.6/7.5	49.2/15	82.0/25	114.8/35	164/50	213.3/65	246.1/75
Height difference H (m)	Cooling	0	1.000	0.974	0.947	0.921	0.881	0.841	0.815
		16.4/5	1.000	0.974	0.947	0.921	0.881	0.841	0.815
		32.8/10		0.974	0.947	0.921	0.881	0.841	0.815
		65.6/20			0.947	0.921	0.881	0.841	0.815
		98.4/30				0.921	0.881	0.841	0.815
	Heating	0	1.000	0.988	0.976	0.964	0.945	0.927	0.915
		16.4/5	0.992	0.980	0.968	0.956	0.938	0.920	0.908
		32.8/10		0.972	0.960	0.948	0.930	0.912	0.900
		65.6/20			0.952	0.941	0.923	0.905	0.893
		98.4/30				0.933	0.915	0.898	0.886


Capacity (Btu/h)	48k		Pipe Length (m)						
Indoor Upper than Outdoor			24.6/7.5	49.2/15	82.0/25	114.8/35	164/50	213.3/65	246.1/75
Height difference H (m)	Cooling	98.4/30				0.884	0.843	0.802	0.775
		65.6/20			0.920	0.893	0.852	0.811	0.783
		32.8/10		0.957	0.930	0.902	0.860	0.819	0.791
		16.4/5	0.995	0.967	0.939	0.911	0.869	0.827	0.799
		0	1.000	0.972	0.944	0.916	0.873	0.831	0.803
	Heating	98.4/30				0.958	0.936	0.915	0.901
		65.6/20			0.972	0.958	0.936	0.915	0.901
		32.8/10		0.986	0.972	0.958	0.936	0.915	0.901
		16.4/5	1.000	0.986	0.972	0.958	0.936	0.915	0.901
		0	1.000	0.986	0.972	0.958	0.936	0.915	0.901
Outdoor Upper than Indoor			24.6/7.5	49.2/15	82.0/25	114.8/35	164/50	213.3/65	246.1/75
Height difference H (m)	Cooling	0	1.000	0.972	0.944	0.916	0.873	0.831	0.803
		16.4/5	1.000	0.972	0.944	0.916	0.873	0.831	0.803
		32.8/10		0.972	0.944	0.916	0.873	0.831	0.803
		65.6/20			0.944	0.916	0.873	0.831	0.803
		98.4/30				0.916	0.873	0.831	0.803
	Heating	0	1.000	0.986	0.972	0.958	0.936	0.915	0.901
		16.4/5	0.992	0.978	0.964	0.950	0.929	0.908	0.894
		32.8/10		0.970	0.956	0.942	0.921	0.901	0.887
		65.6/20			0.949	0.935	0.914	0.893	0.880
		98.4/30				0.927	0.907	0.886	0.873



Capacity (Btu/h)	60k		Pipe Length (m)						
Indoor Upper than Outdoor			24.6/7.5	49.2/15	82.0/25	114.8/35	164/50	213.3/65	246.1/75
Height difference H (m)	Cooling	98.4/30				0.870	0.823	0.775	0.743
		65.6/20			0.911	0.879	0.831	0.783	0.751
		32.8/10		0.953	0.920	0.888	0.839	0.791	0.758
		16.4/5	0.995	0.962	0.930	0.897	0.848	0.799	0.766
		0	1.000	0.967	0.934	0.901	0.852	0.803	0.770
	Heating	98.4/30				0.955	0.932	0.909	0.894
		65.6/20			0.970	0.955	0.932	0.909	0.894
		32.8/10		0.985	0.970	0.955	0.932	0.909	0.894
		16.4/5	1.000	0.985	0.970	0.955	0.932	0.909	0.894
		0	1.000	0.985	0.970	0.955	0.932	0.909	0.894
Outdoor Upper than Indoor			24.6/7.5	49.2/15	82.0/25	114.8/35	164/50	213.3/65	246.1/75
Height difference H (m)	Cooling	0	1.000	0.967	0.934	0.901	0.852	0.803	0.770
		16.4/5	1.000	0.967	0.934	0.901	0.852	0.803	0.770
		32.8/10		0.967	0.934	0.901	0.852	0.803	0.770
		65.6/20			0.934	0.901	0.852	0.803	0.770
		98.4/30				0.901	0.852	0.803	0.770
	Heating	0	1.000	0.985	0.970	0.955	0.932	0.909	0.894
		16.4/5	0.992	0.977	0.962	0.947	0.924	0.902	0.887
		32.8/10		0.969	0.954	0.939	0.917	0.895	0.880
		65.6/20			0.947	0.932	0.910	0.887	0.873
		98.4/30				0.924	0.902	0.880	0.866

## 4. Noise Criterion Curves

Outdoor Unit

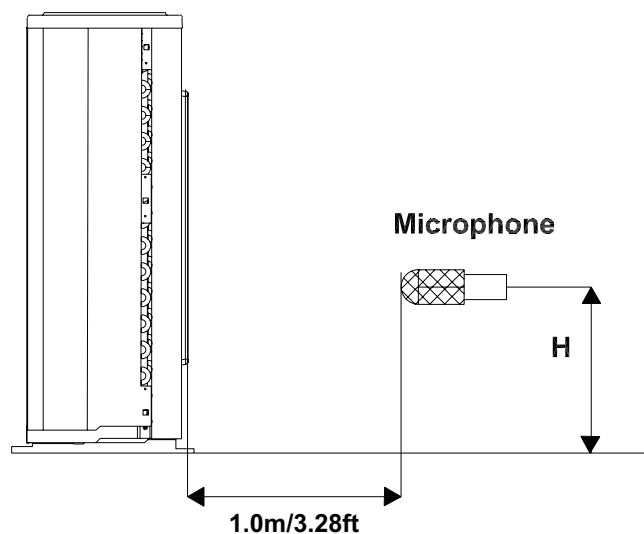


Note:  $H = 0.5 \times \text{height of outdoor unit}$


Notes:





- Sound measured at 1.0m/3.25ft away from the center of the unit.
- Data is valid at free field condition
- Data is valid at nominal operation condition
- Reference acoustic pressure  $OdB = 20\mu Pa$
- Sound level will vary depending on arrange off actors such as the construction (acoustic absorption coefficient) of particular room in which the equipment is installed.
- The operating conditions are assumed to be standard.

ACiQ-09ZS-HP230C

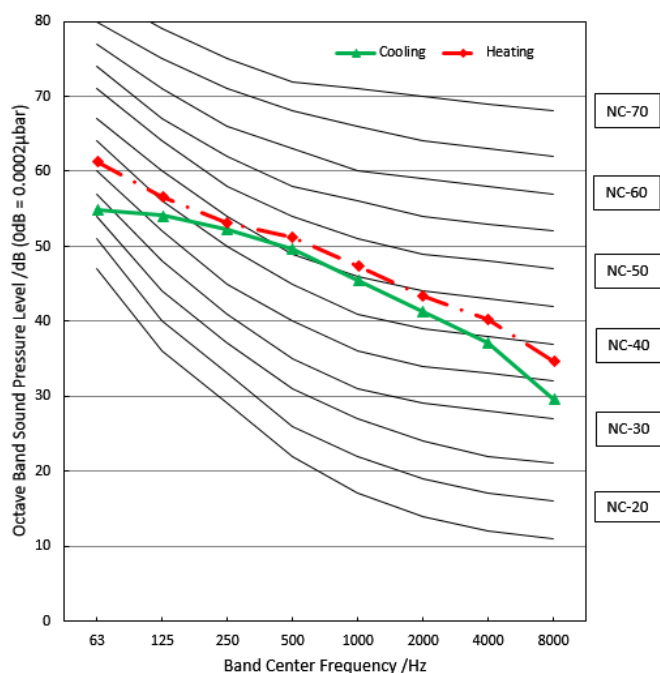


ACiQ-12ZS-HP230C

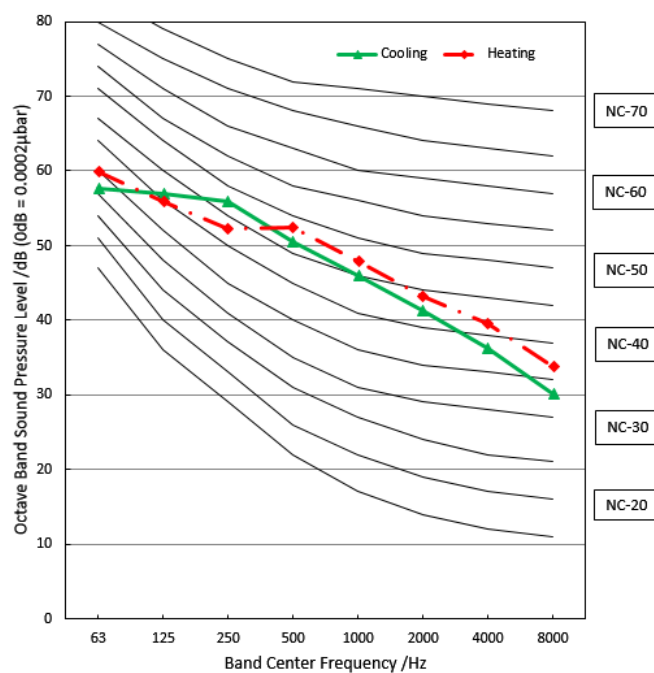


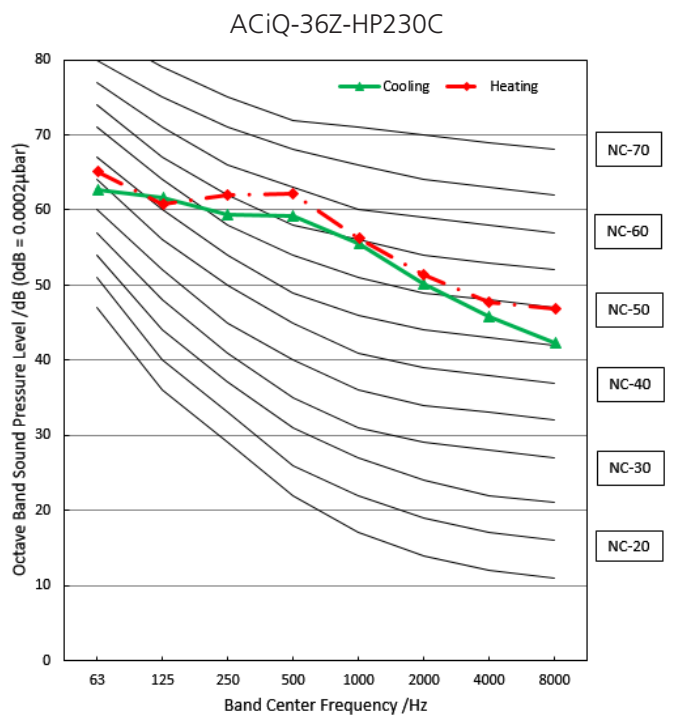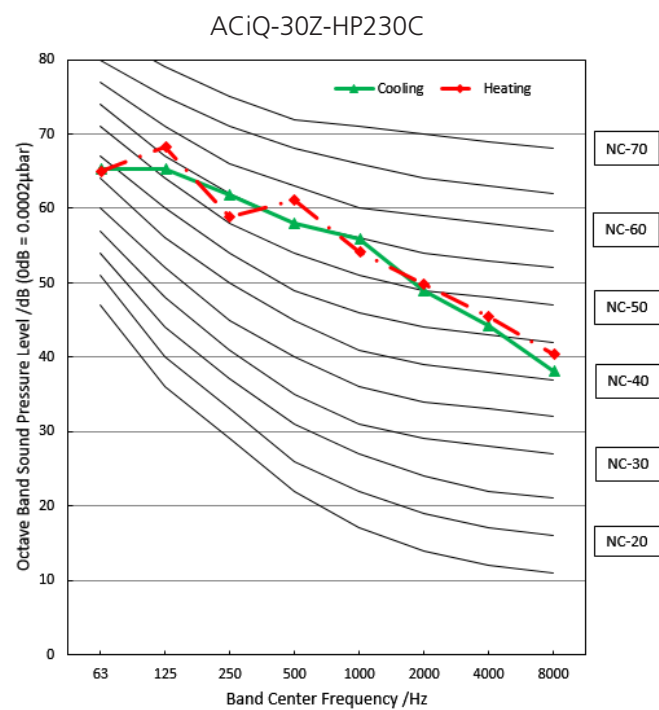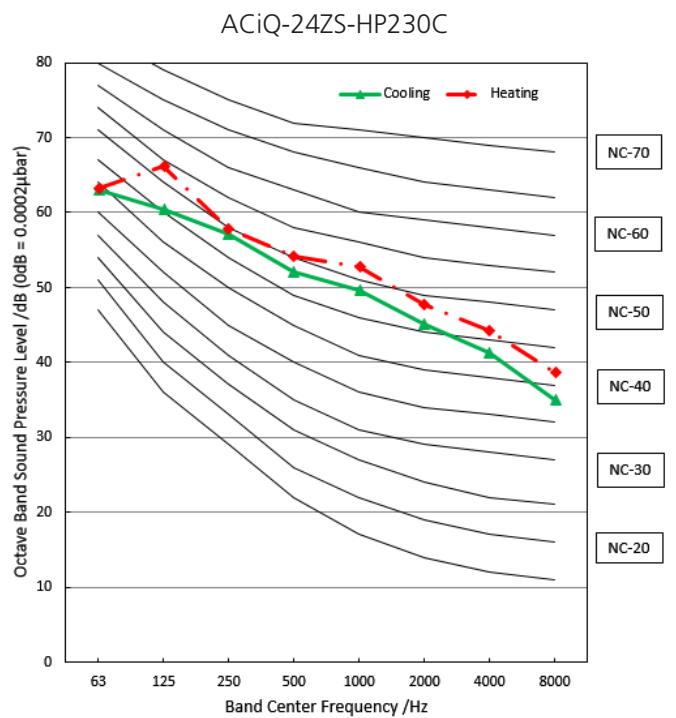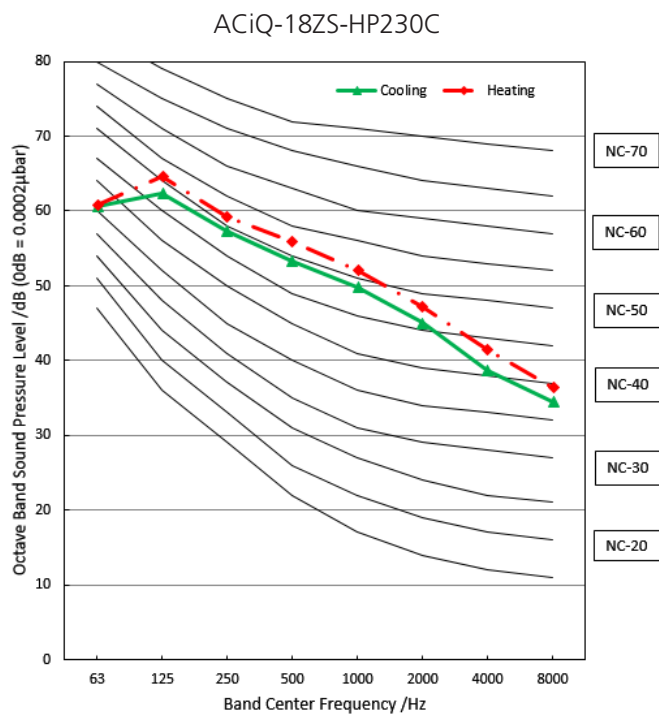


ACiQ-06ZPL-HP230C

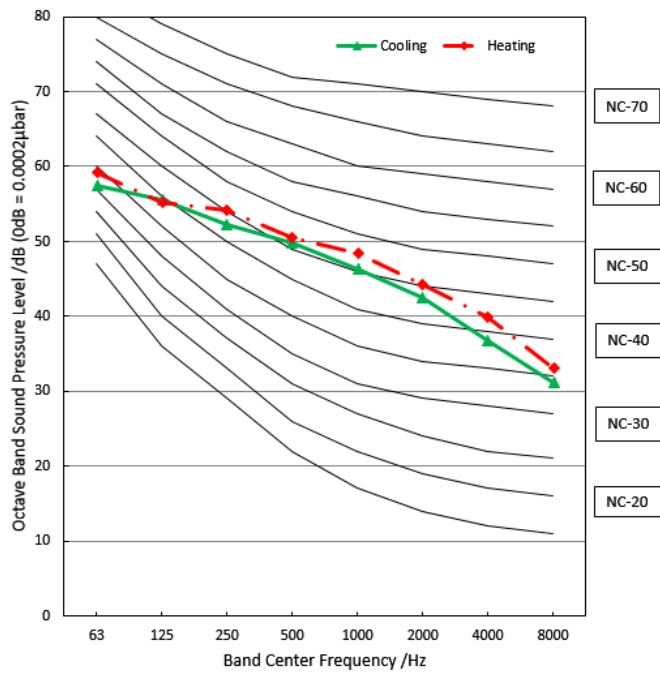


ACiQ-09ZPL-HP230C




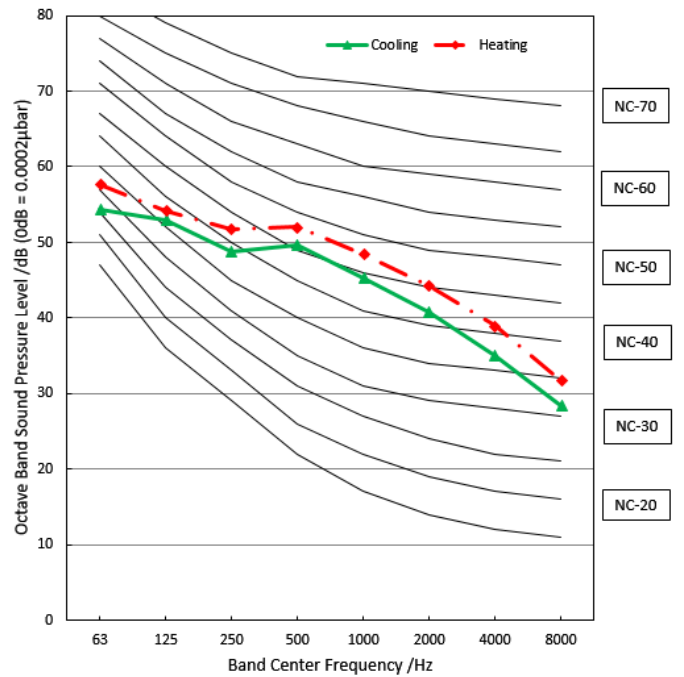


ACiQ-12ZPL-HP230C

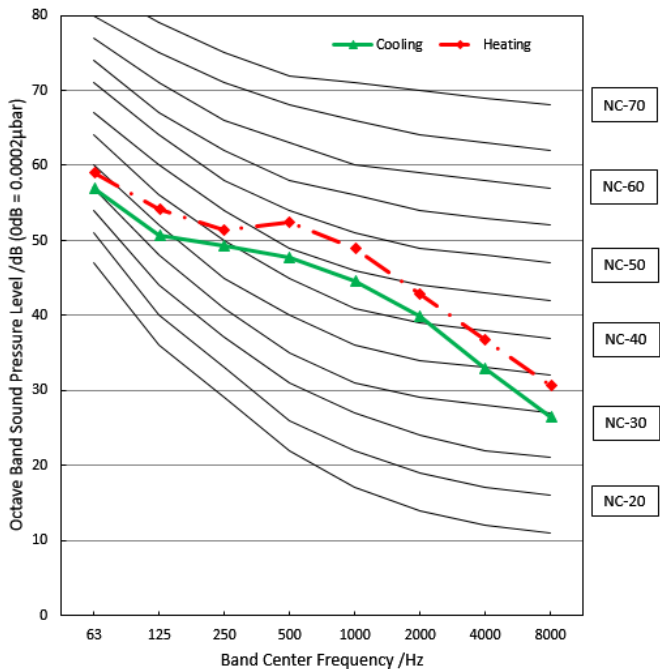


ACiQ-18ZPL-HP230C

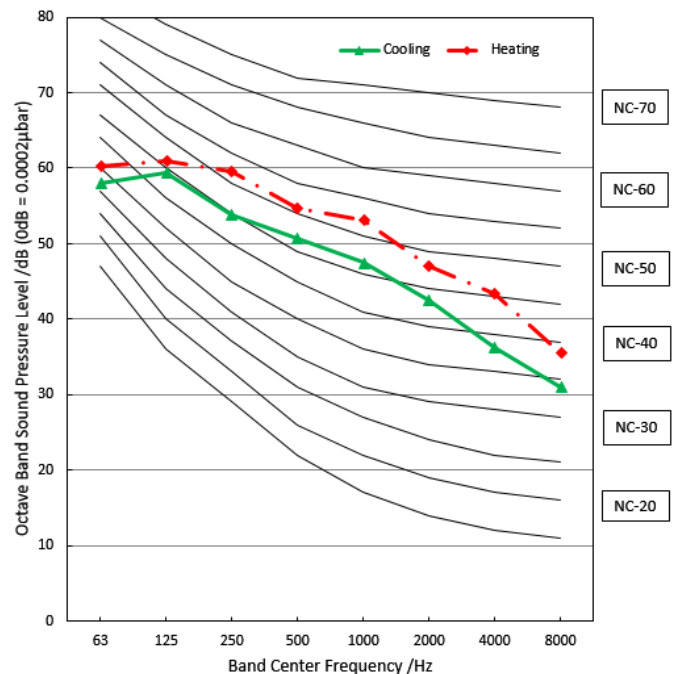

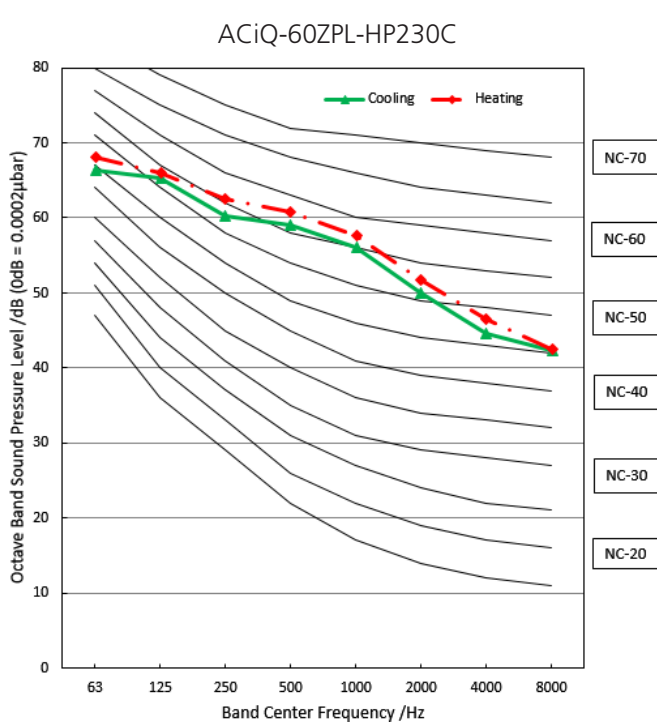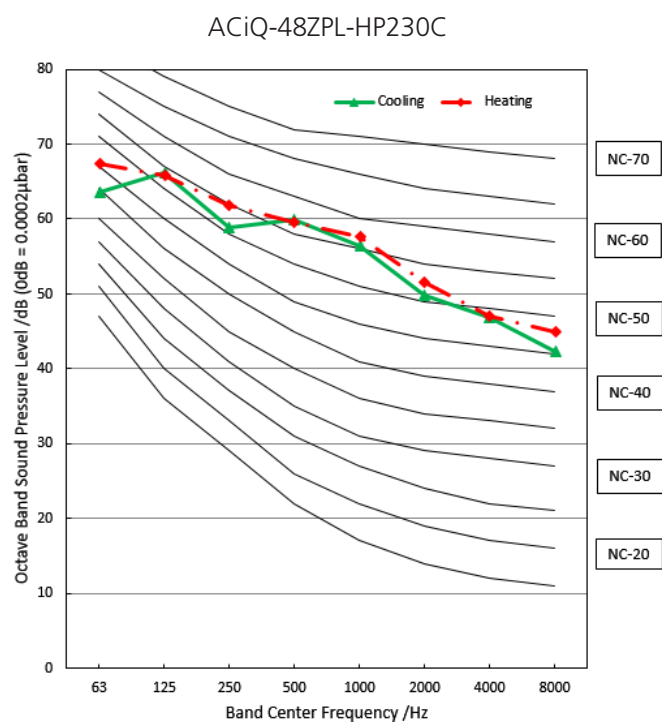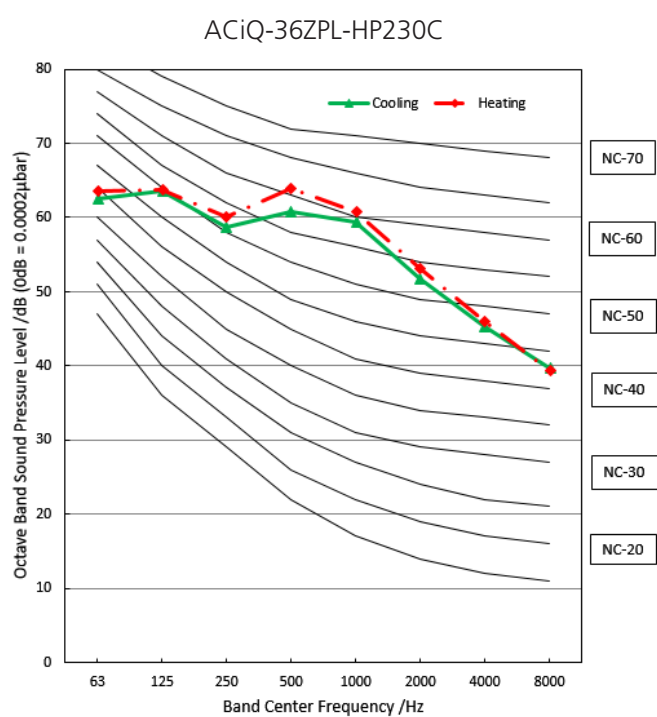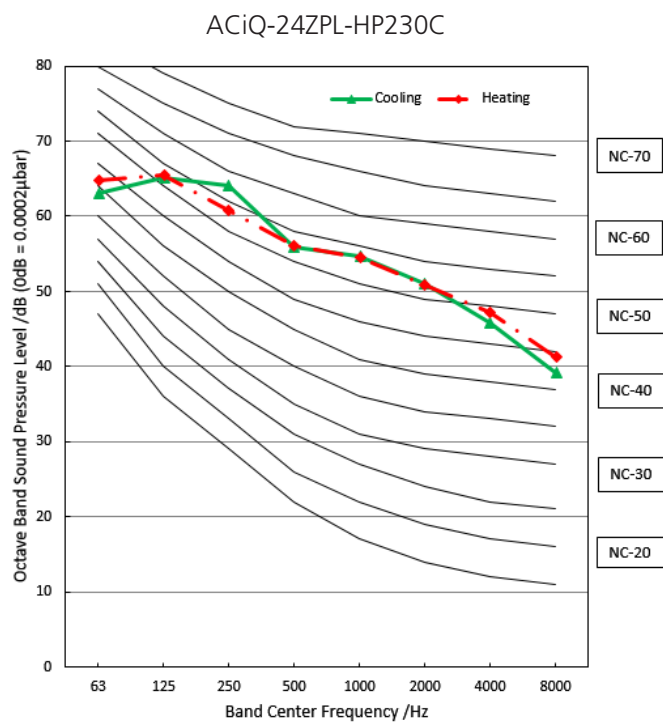




## 5. Refrigerant Cycle Diagrams

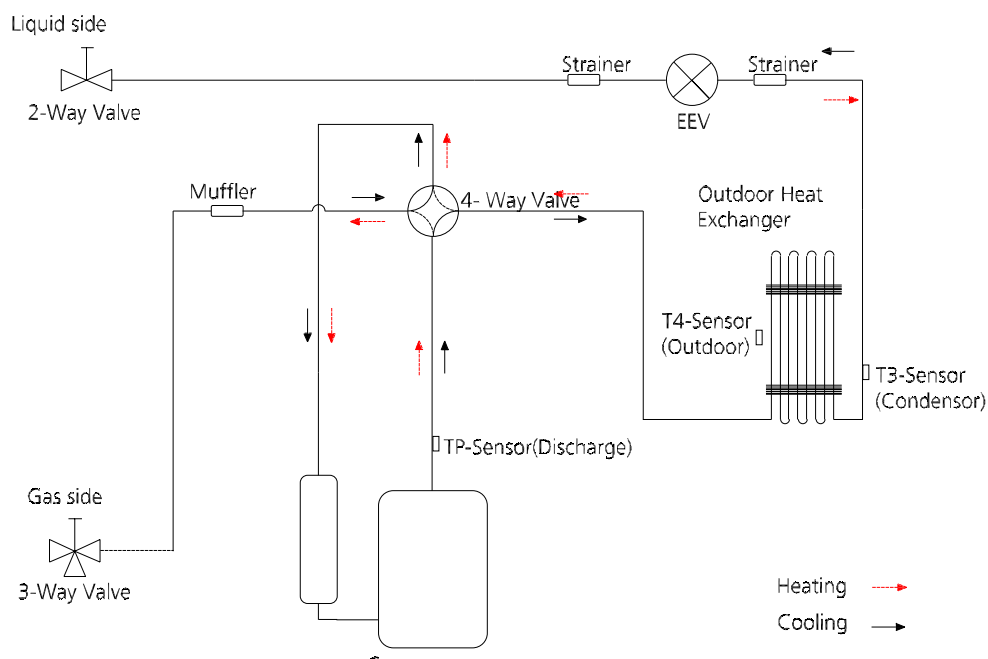


Model No.	Pipe Size (Diameter:ø) inch(mm)		Piping length (ft/m)		Elevation (ft/m)		Additional Refrigerant
	Gas	Liquid	Rated	Max.	Rated	Max.	
ACiQ-06ZPL-HP230C	3/8(9.52)	1/4(6.35)	24.6/7.5	82/25	0	49.2/15	0.16oz/ft (15g/m)
ACiQ-09ZS-HP230C							
ACiQ-09ZPL-HP230C							
ACiQ-12ZS-HP230C							
ACiQ-12ZPL-HP230C							

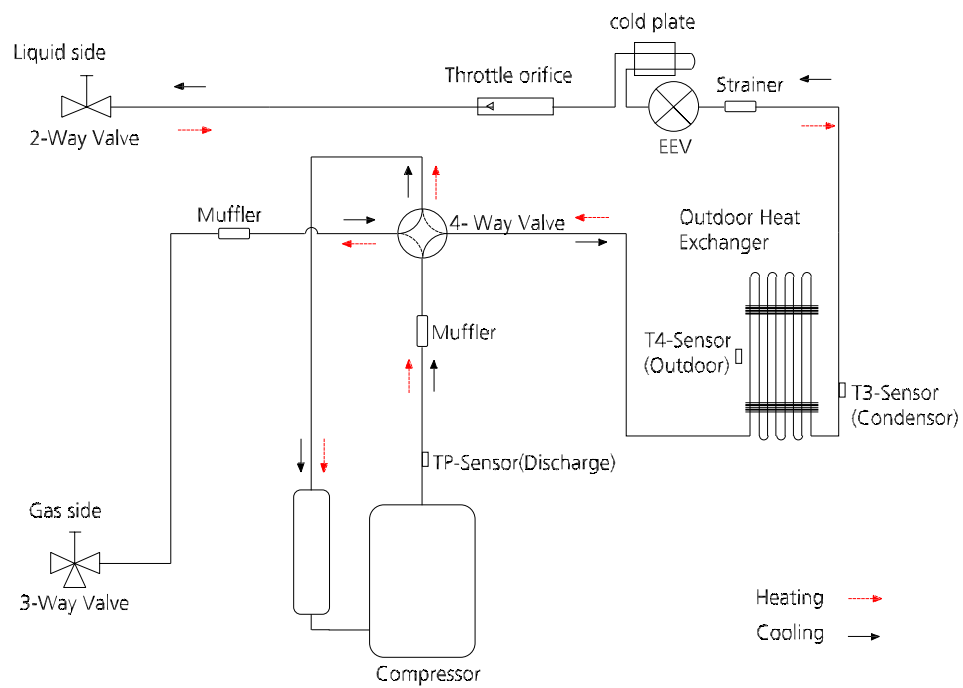


Model No.	Pipe Size (Diameter:ø) inch(mm)		Piping length (ft/m)		Elevation (ft/m)		Additional Refrigerant
	Gas	Liquid	Rated	Max.	Rated	Max.	
ACiQ-18ZS-HP230C	1/2(12.7)	1/4(6.35)	24.6/7.5	98.4/30	0	65.6/20	0.16oz/ft (15g/m)
ACiQ-18ZPL-HP230C							




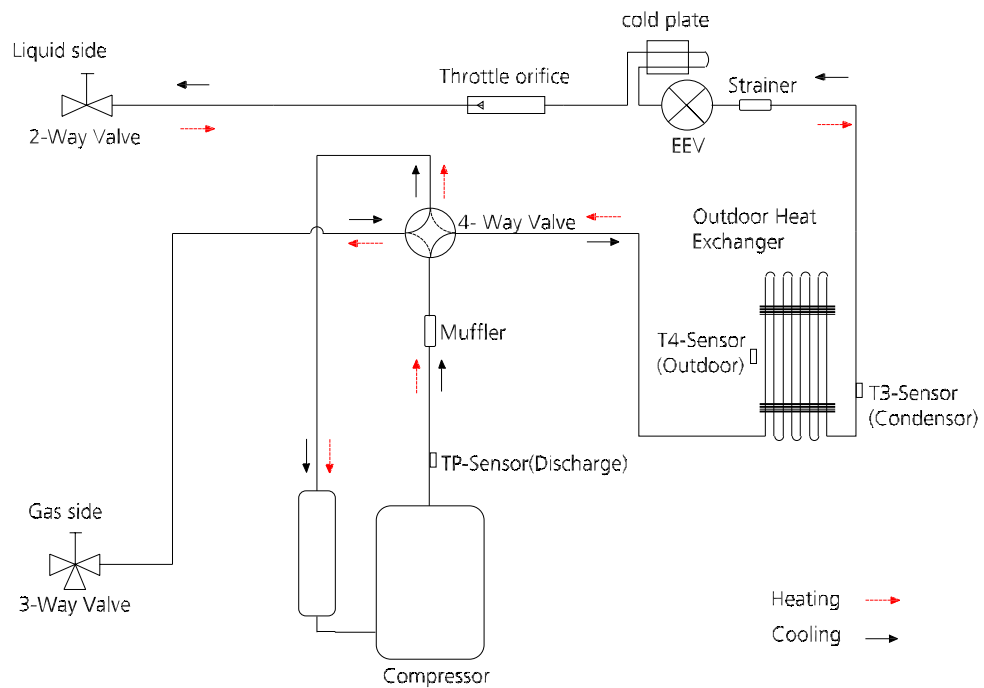


Model No.	Pipe Size (Diameter:ø) inch(mm)		Piping length (ft/m)		Elevation (ft/m)		Additional Refrigerant
	Gas	Liquid	Rated	Max.	Rated	Max.	
ACiQ-24ZS-HP230C	5/8(16)	3/8(9.52)	24.6/7.5	164/50	0	82/25	0.32oz/ft (30g/m)

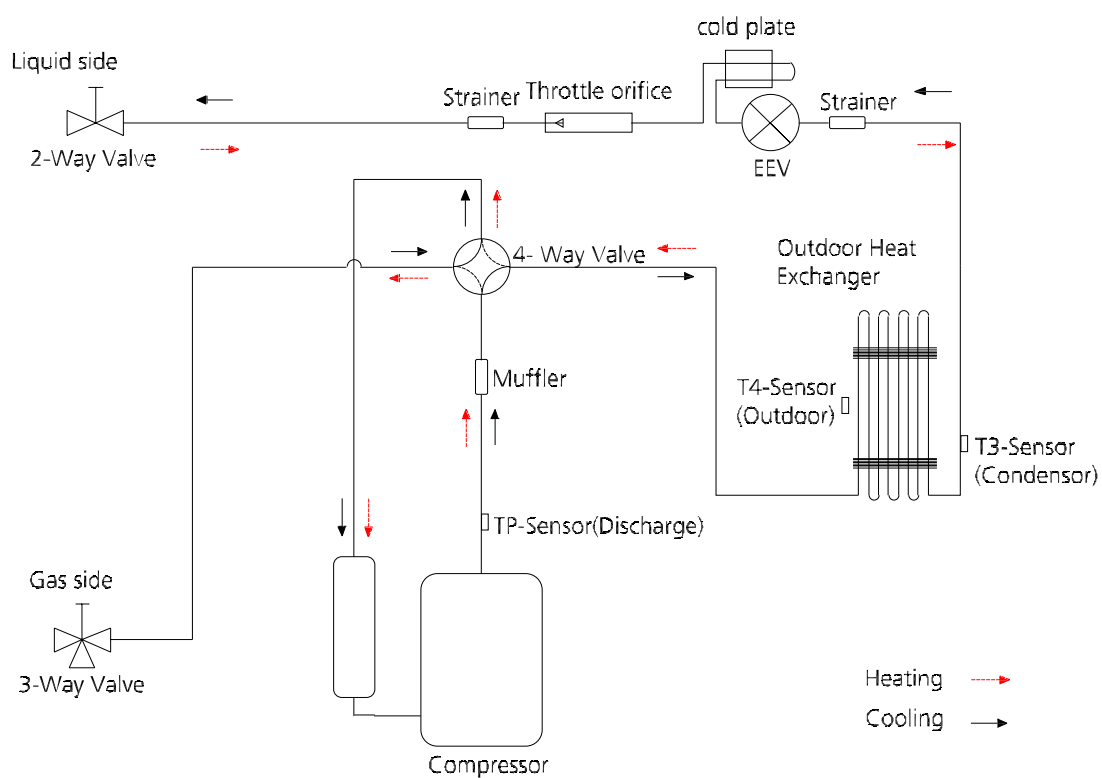

Model No.	Pipe Size (Diameter:ø) inch(mm)		Piping length (ft/m)		Elevation (ft/m)		Additional Refrigerant
	Gas	Liquid	Rated	Max.	Rated	Max.	
ACiQ-24ZPL-HP230C	5/8(16)	3/8(9.52)	24.6/7.5	164/50	0	82/25	0.32oz/ft (30g/m)
ACiQ-30Z-HP230C							

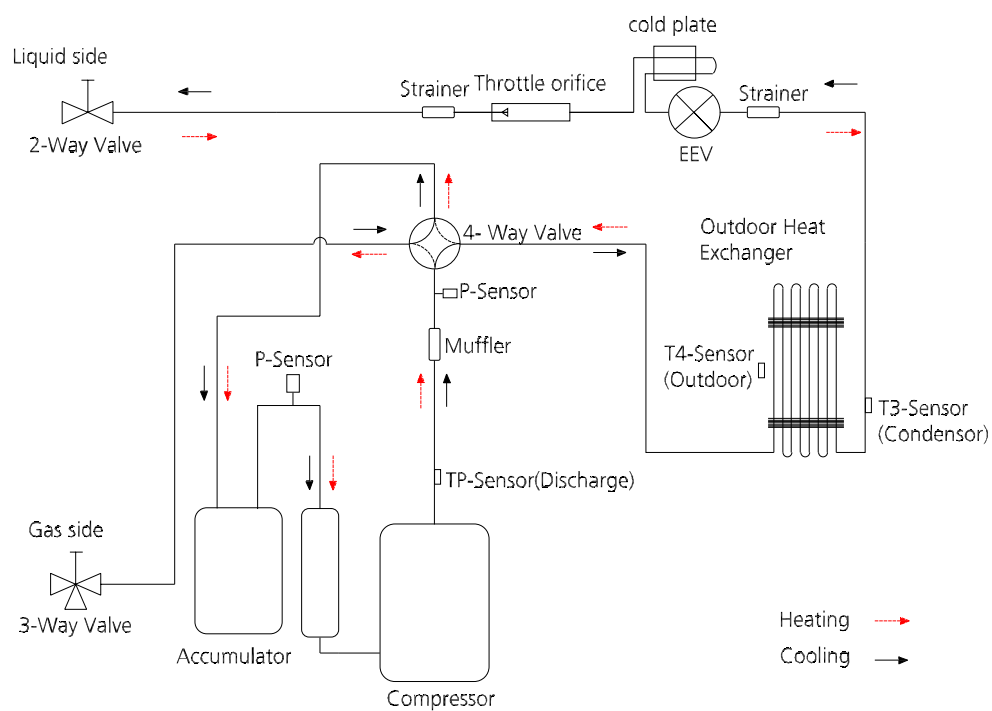

Model No.	Pipe Size (Diameter:ø) inch(mm)		Piping length (ft/m)		Elevation (ft/m)		Additional Refrigerant
	Gas	Liquid	Rated	Max.	Rated	Max.	
ACiQ-36Z-HP230C	5/8(16)	3/8(9.52)	24.6/7.5	246/75	0	98.4/30	0.32oz/ft (30g/m)

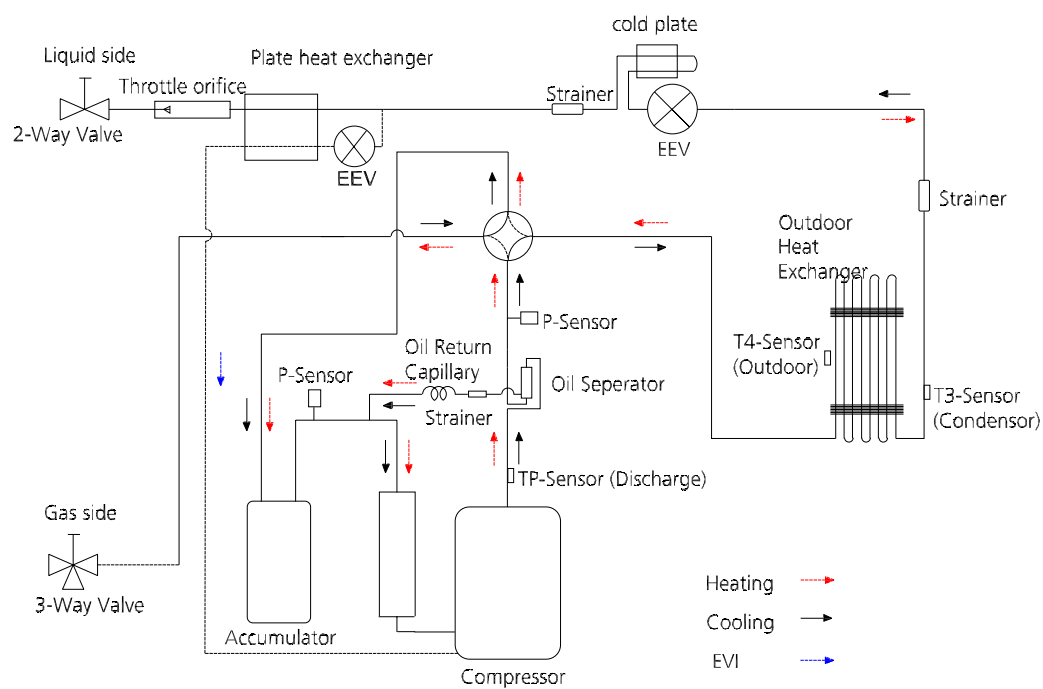


Model No.	Pipe Size (Diameter:ø) inch(mm)		Piping length (ft/m)		Elevation (ft/m)		Additional Refrigerant
	Gas	Liquid	Rated	Max.	Rated	Max.	
ACiQ-36ZPL-HP230C	3/4(19)	3/8(9.52)	24.6/7.5	246/75	0	98.4/30	0.32oz/ft (30g/m)
ACiQ-48ZPL-HP230C							
ACiQ-60ZPL-HP230C							

## 6. Electrical Wiring Diagrams

ODU Model	ODU Wiring Diagram	ODU Main Printed Circuit Board
ACiQ-06ZPL-HP230C	16022000040311	17122000057661
ACiQ-09ZS-HP230C		
ACiQ-09ZPL-HP230C		
ACiQ-12ZS-HP230C		
ACiQ-12ZPL-HP230C		
ACiQ-18ZS-HP230C	16022000040313	17122000048066
ACiQ-18ZPL-HP230C		17122000048064
ACiQ-24ZS-HP230C		
ACiQ-24ZPL-HP230C	16022000040331	17122300007152
ACiQ-30Z-HP230C		
ACiQ-36Z-HP230C	16022000040650	
ACiQ-36ZPL-HP230C	16022000040733	
ACiQ-48ZPL-HP230C	16022000040730	
ACiQ-60ZPL-HP230C		



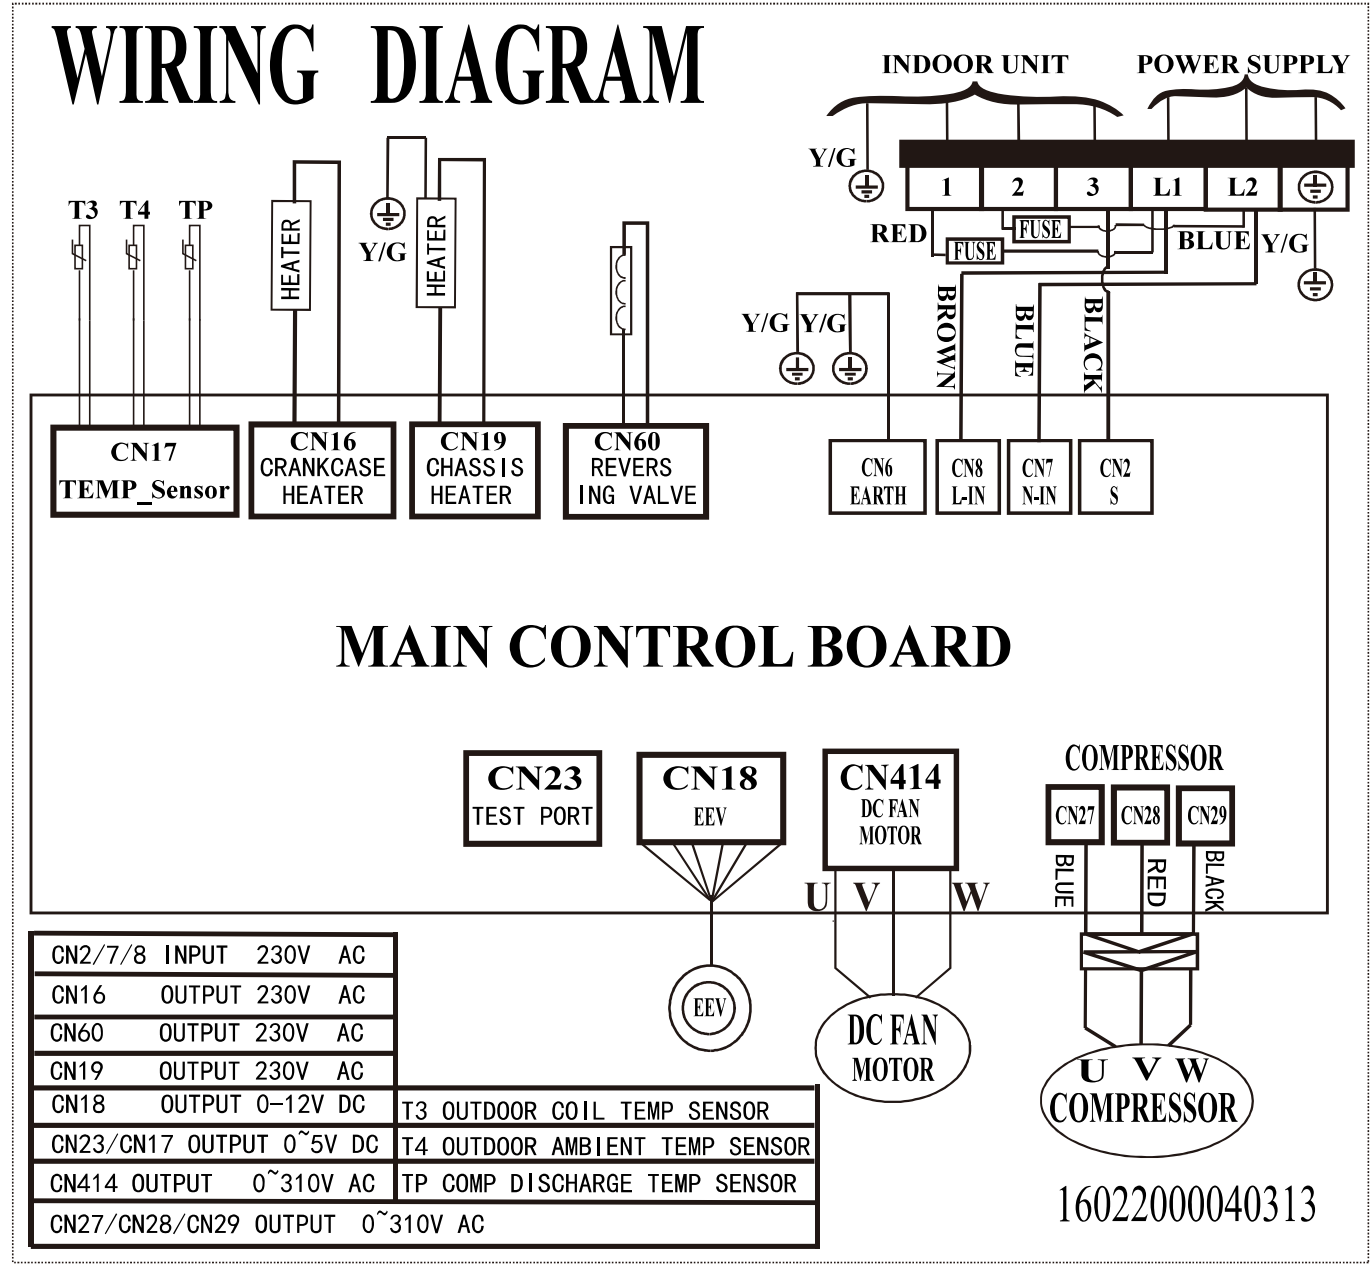

The diagram illustrates the wiring for the Main Control Board. Key components and their connections include:

- Heaters:** CN24 (Chassis Heater) connected to WHITE; CN38 (Crankcase Heater) connected to RED; CN37 (Reversing Valve) connected to BLUE.
- Compressor:** W, V, U terminals connected to BLACK, RED, and BLUE wires respectively. A Y/G ground is also shown.
- Fan Motor:** CN32 (DC Fan Motor) connected to a 3-wire terminal block, which is then connected to the DC Fan Motor.
- Sensors:** CN26 (Temp Sensor) connected to a 6-wire terminal block, which is then connected to T3, T4, and TP sensors.
- Expansion Valve:** CN53 (EEV) connected to a 6-wire terminal block, which is then connected to the EEV.
- Test Port:** CN1 (Test Port) connected to a 2-wire terminal block, which is then connected to the Test Port.
- Power Supply:** A terminal block with 6 terminals (1, 2, 3, L1, L2, and ground) connected to the power supply. Wires include WHITE, BROWN, BLUE, and Y/G.
- Indoor Unit:** A terminal block with 6 terminals (1, 2, 3, L1, L2, and ground) connected to the indoor unit. Wires include WHITE, BROWN, BLUE, and Y/G.


CN4/CN11/CN12	INPUT 230V AC		
CN38	OUTPUT 230V AC		
CN24	OUTPUT 230V AC		
CN37	OUTPUT 230V AC		
CN53	OUTPUT 0~12V DC	EEV	ELECTRONIC EXPANSION VALVE
CN26/CN27/CN3	OUTPUT 0~5V DC	T3	OUTDOOR COIL TEMP SENSOR
CN1	INPUT 0~5V DC	T4	OUTDOOR AMBIENT TEMP SENSOR
CN32/U/V/W	OUTPUT 0~310V AC	TP	COMP DISCHARGE TEMP SENSOR

CN4/CN11/CN12	INPUT 230V AC		
CN38	OUTPUT 230V AC		
CN24	OUTPUT 230V AC		
CN37	OUTPUT 230V AC		
CN53	OUTPUT 0~12V DC	EEV	ELECTRONIC EXPANSION VALVE
CN26/CN27/CN3	OUTPUT 0~5V DC	T3	OUTDOOR COIL TEMP SENSOR
CN1	INPUT 0~5V DC	T4	OUTDOOR AMBIENT TEMP SENSOR
CN32/U/V/W	OUTPUT 0~310V AC	TP	COMP DISCHARGE TEMP SENSOR

16022000040331




Outdoor unit wiring diagram: 16022000040650

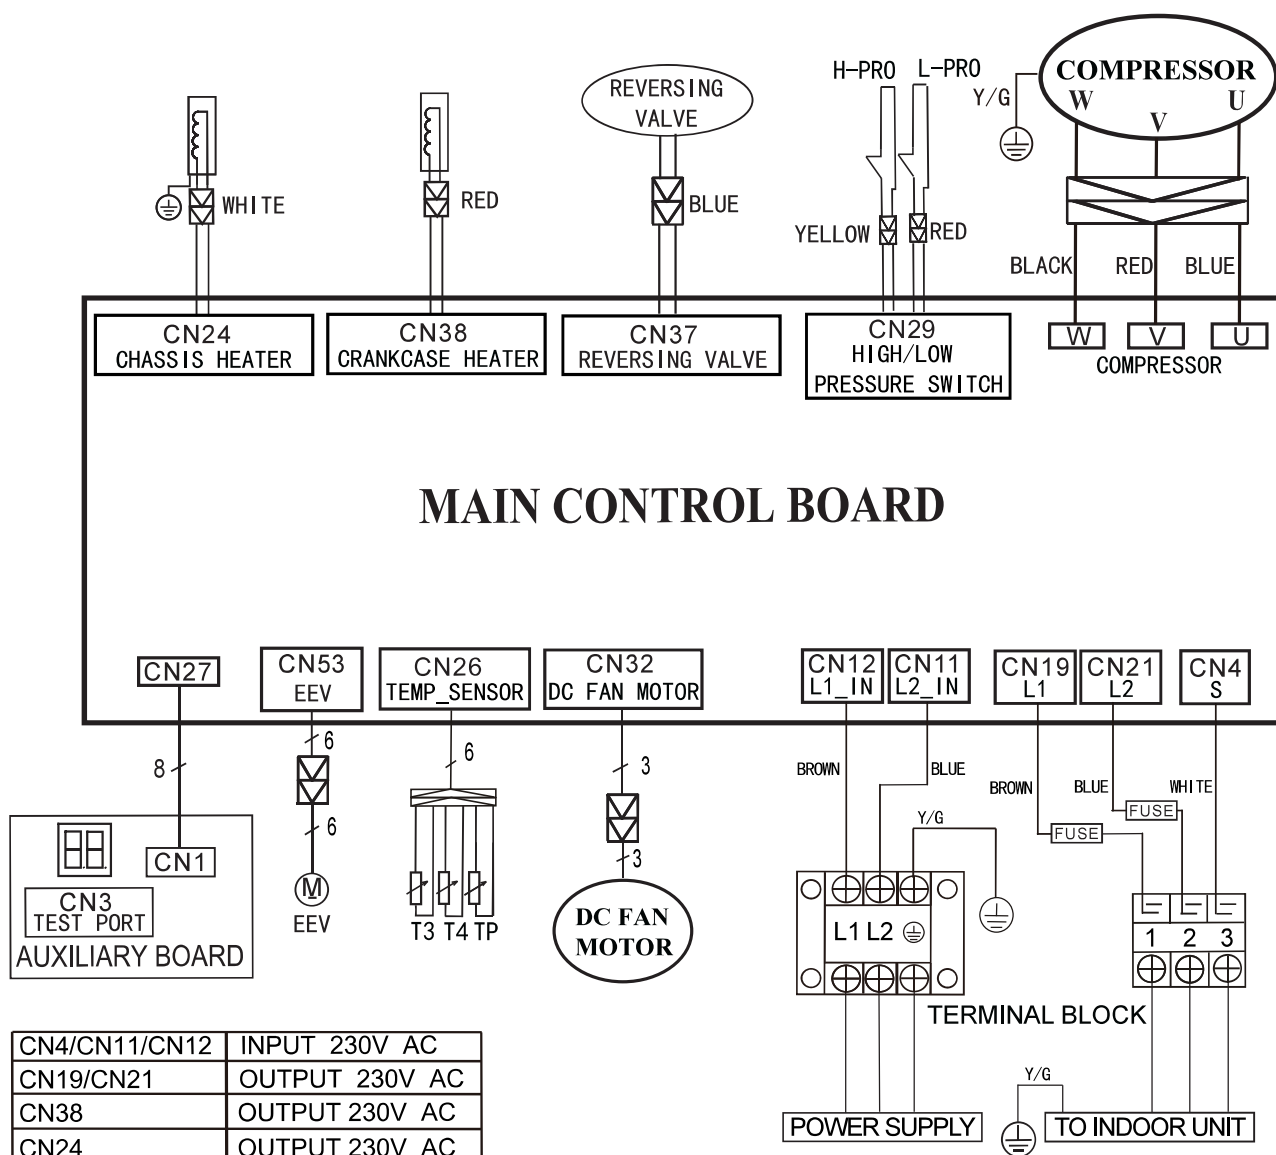


CN4/CN11/CN12	INPUT 230V AC		
CN19/CN21	OUTPUT 230V AC		
CN38	OUTPUT 230V AC		
CN24	OUTPUT 230V AC		
CN37	OUTPUT 230V AC		
CN53	OUTPUT 0-12V DC		
CN3	OUTPUT 0~5V DC	EEV	ELECTRONIC EXPANSION VALVE
CN26/CN27/CN29	OUTPUT 0~5V DC	T3	OUTDOOR COIL TEMP SENSOR
CN1	INPUT 0~5V DC	T4	OUTDOOR AMBIENT TEMP SENSOR
CN32/U/V/W	OUTPUT 0~310V AC	TP	COMP DISCHARGE TEMP SENSOR

16022000040650


Outdoor unit wiring diagram:16022000040733

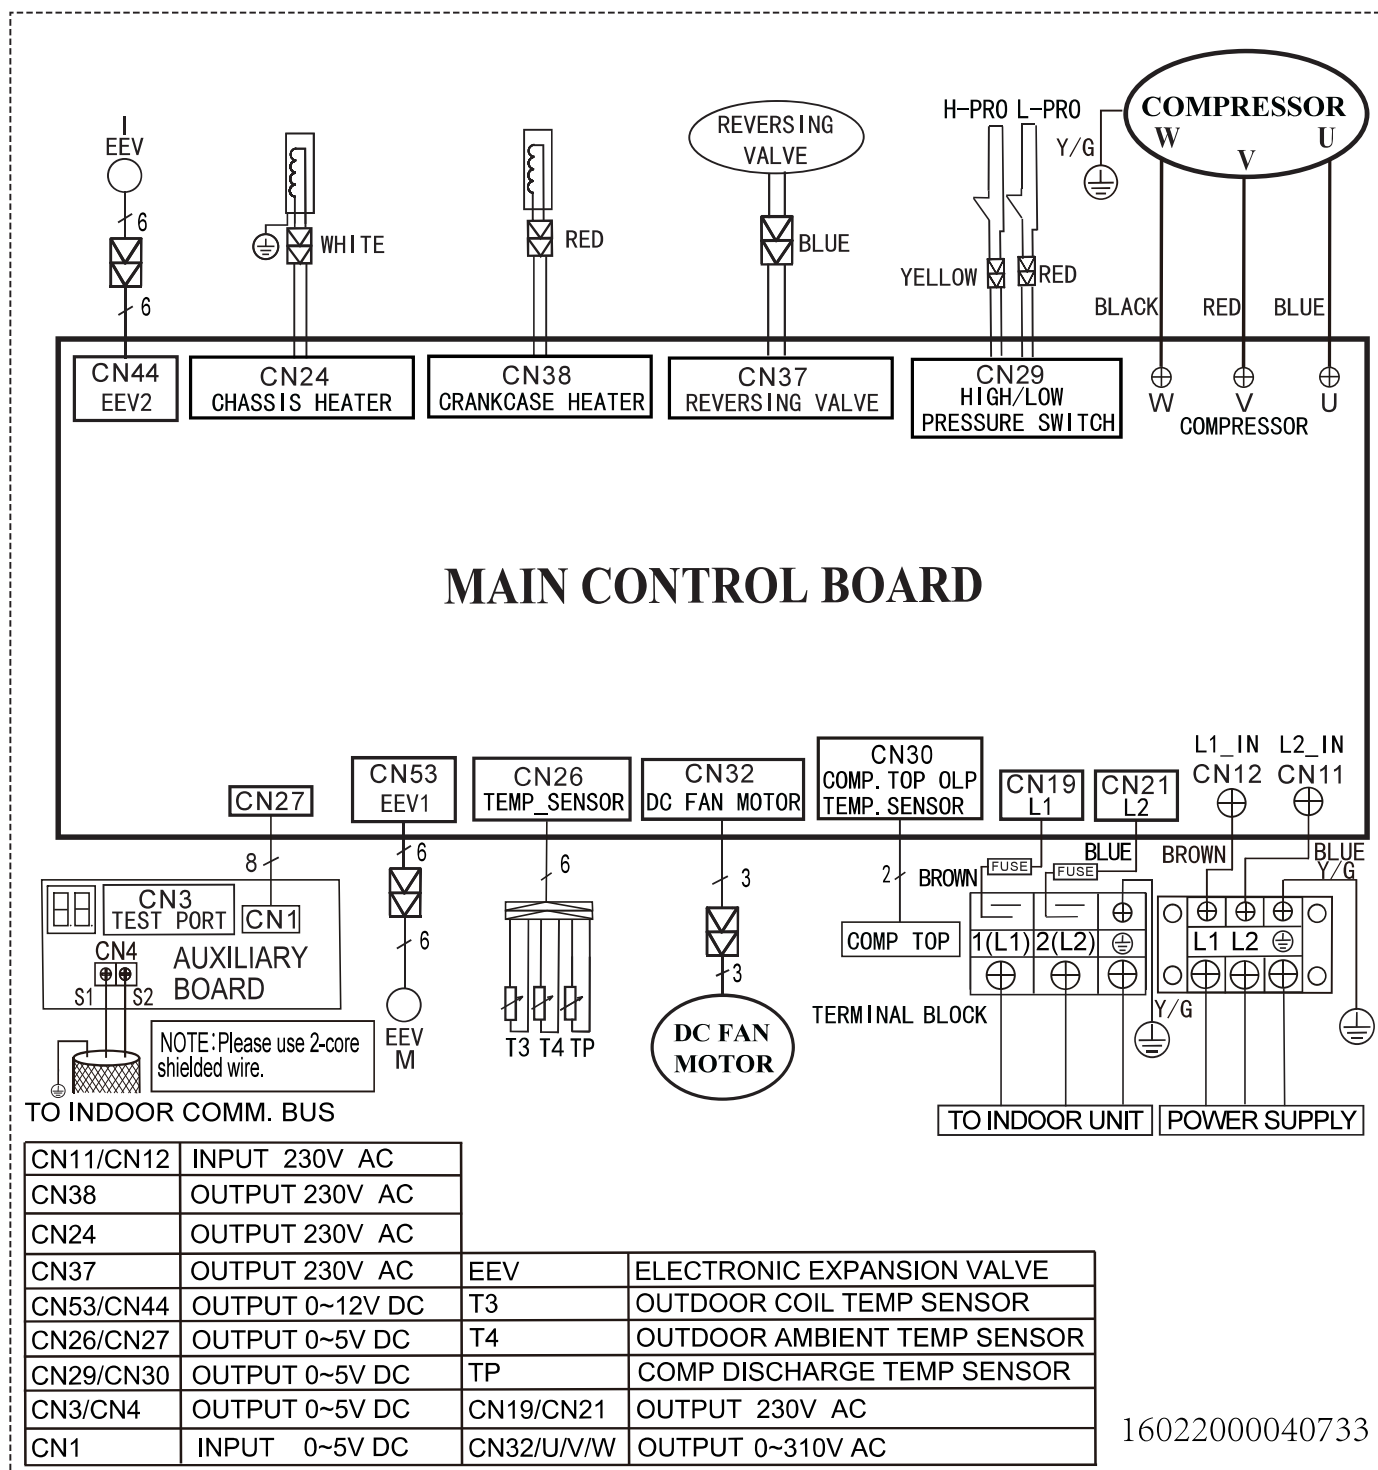

# Outdoor unit wiring diagram:16022000040730

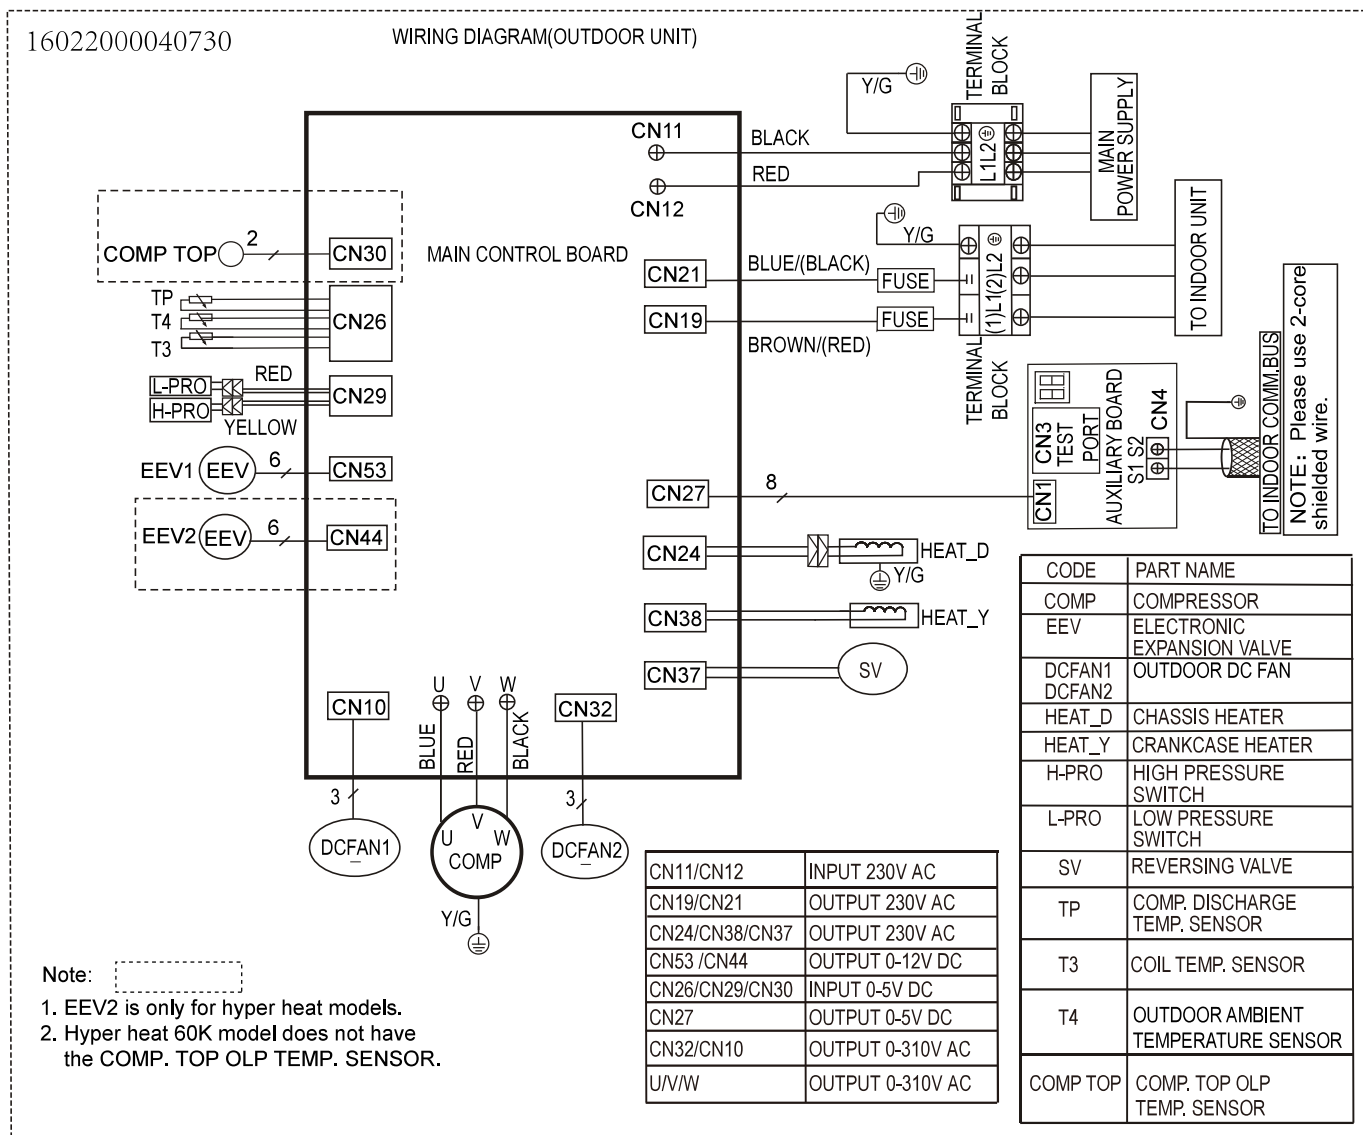

Outdoor unit printed circuit board diagram: 17122000057661

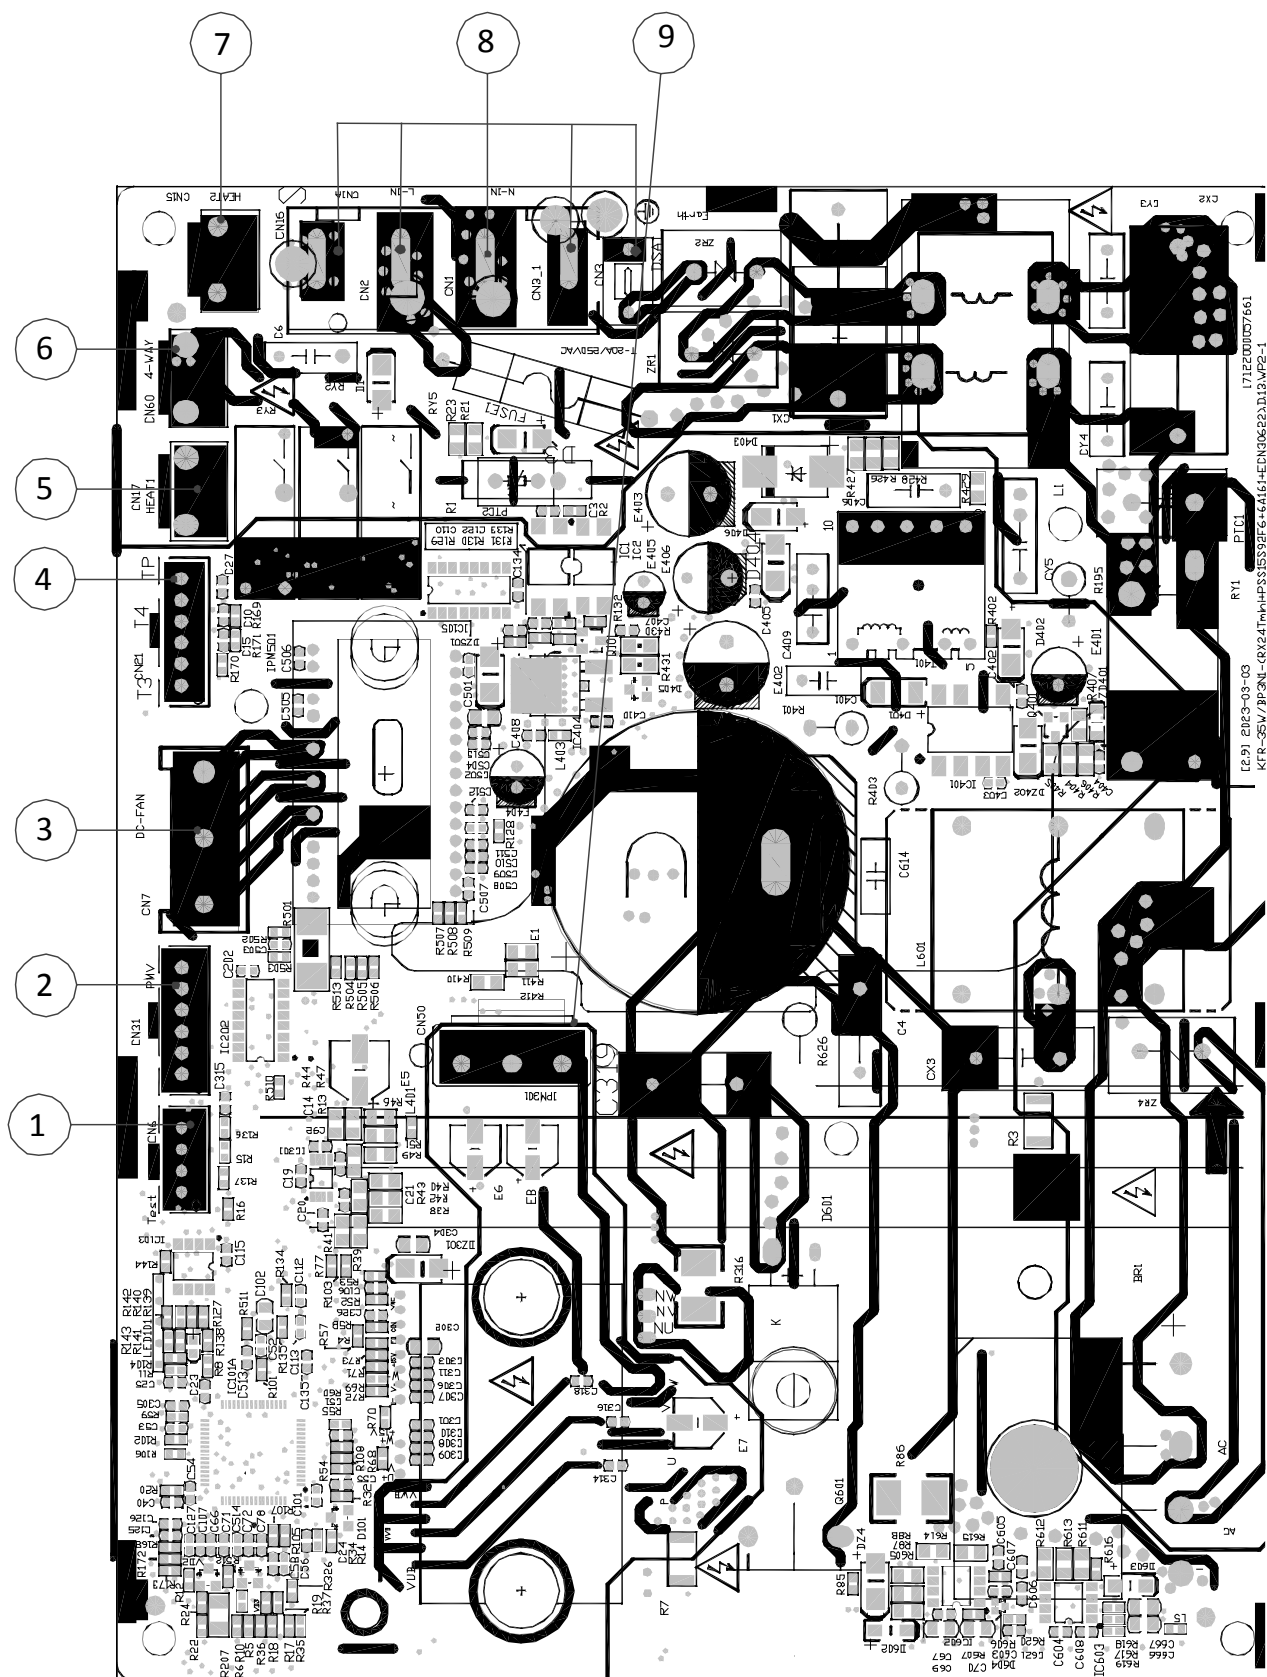

No.	Name	CN#	Meaning
1	TESTPORT	CN6	used for testing
2	PMV	CN31	connect to electric expansion valve (Output:0~2V DC)
3	DC-FAN	CN7	connect to DC fan (Output: 0~310V AC).
4	TP T4 T3	CN21	connect to pipe temp. sensor T3, ambient temp. sensor T4, exhaust temp. sensor TP (Output: 0~5V DC)
5	HEAT1	CN17	connect to compressor heater (Output: 230V AC).
6	4-WAY	CN60	connect to 4 way valve (Output: 230V AC)
7	HEAT2	CN15	connect to chassis heater (Output: 230V AC)
8	CN1A	CN16	S: connect to indoor unit communication
		CN2	L_in: connect to L-line (230V AC input)
		CN1	N_in: connect to N-line (230V AC input)
		CN3	Earth
9	CN50	W	connect to compressor (Output: 0-310V AC)
		V	
		U	

**Note: This section is for reference only. Please take practicality as standard.**




No.	Name	CN#	Meaning
1	Power Supply	CN6	Earth: connect to Ground
		CN7	N_in: connect to N-line (230V AC input)
		CN8	L_in: connect to L-line (230V AC input)
2	S	CN2	S: connect to indoor unit communication(230V AC input)
3	4-WAY	CN60	connect to 4 way valve(Output: 230V AC)
4	AC-FAN	CN5	connect to AC fan
5	HEAT2	CN19	connect to chassis heater(Output: 230V AC)
6	TP T4 T3	CN17	connect to pipe temp. sensor T3, ambient temp. sensor T4, exhaust temp. sensor TP(Output: 0~5V DC)
7	PMV	CN18	connect to Electric Expansion Valve
8	HEAT1	CN16	connect to compressor heater(Output: 230V AC)
9	DC-FAN	CN414	connect to DC fan(Output: 0~310V AC)
10	TESTPORT	CN23	used for testing
11	FAN_IPM	IPM501	IPM for DC fan
12	COMP_IPM	IPM1	IPM for compressor
13	U	CN27	connect to compressor(Output: 0~310V AC)
	V	CN28	
	W	CN29	
14	EE_PORT	CN505	EEPROM programer port

**Note: This section is for reference only. Please take practicality as standard.**



Outdoor unit printed circuit board diagram: 17122300007152

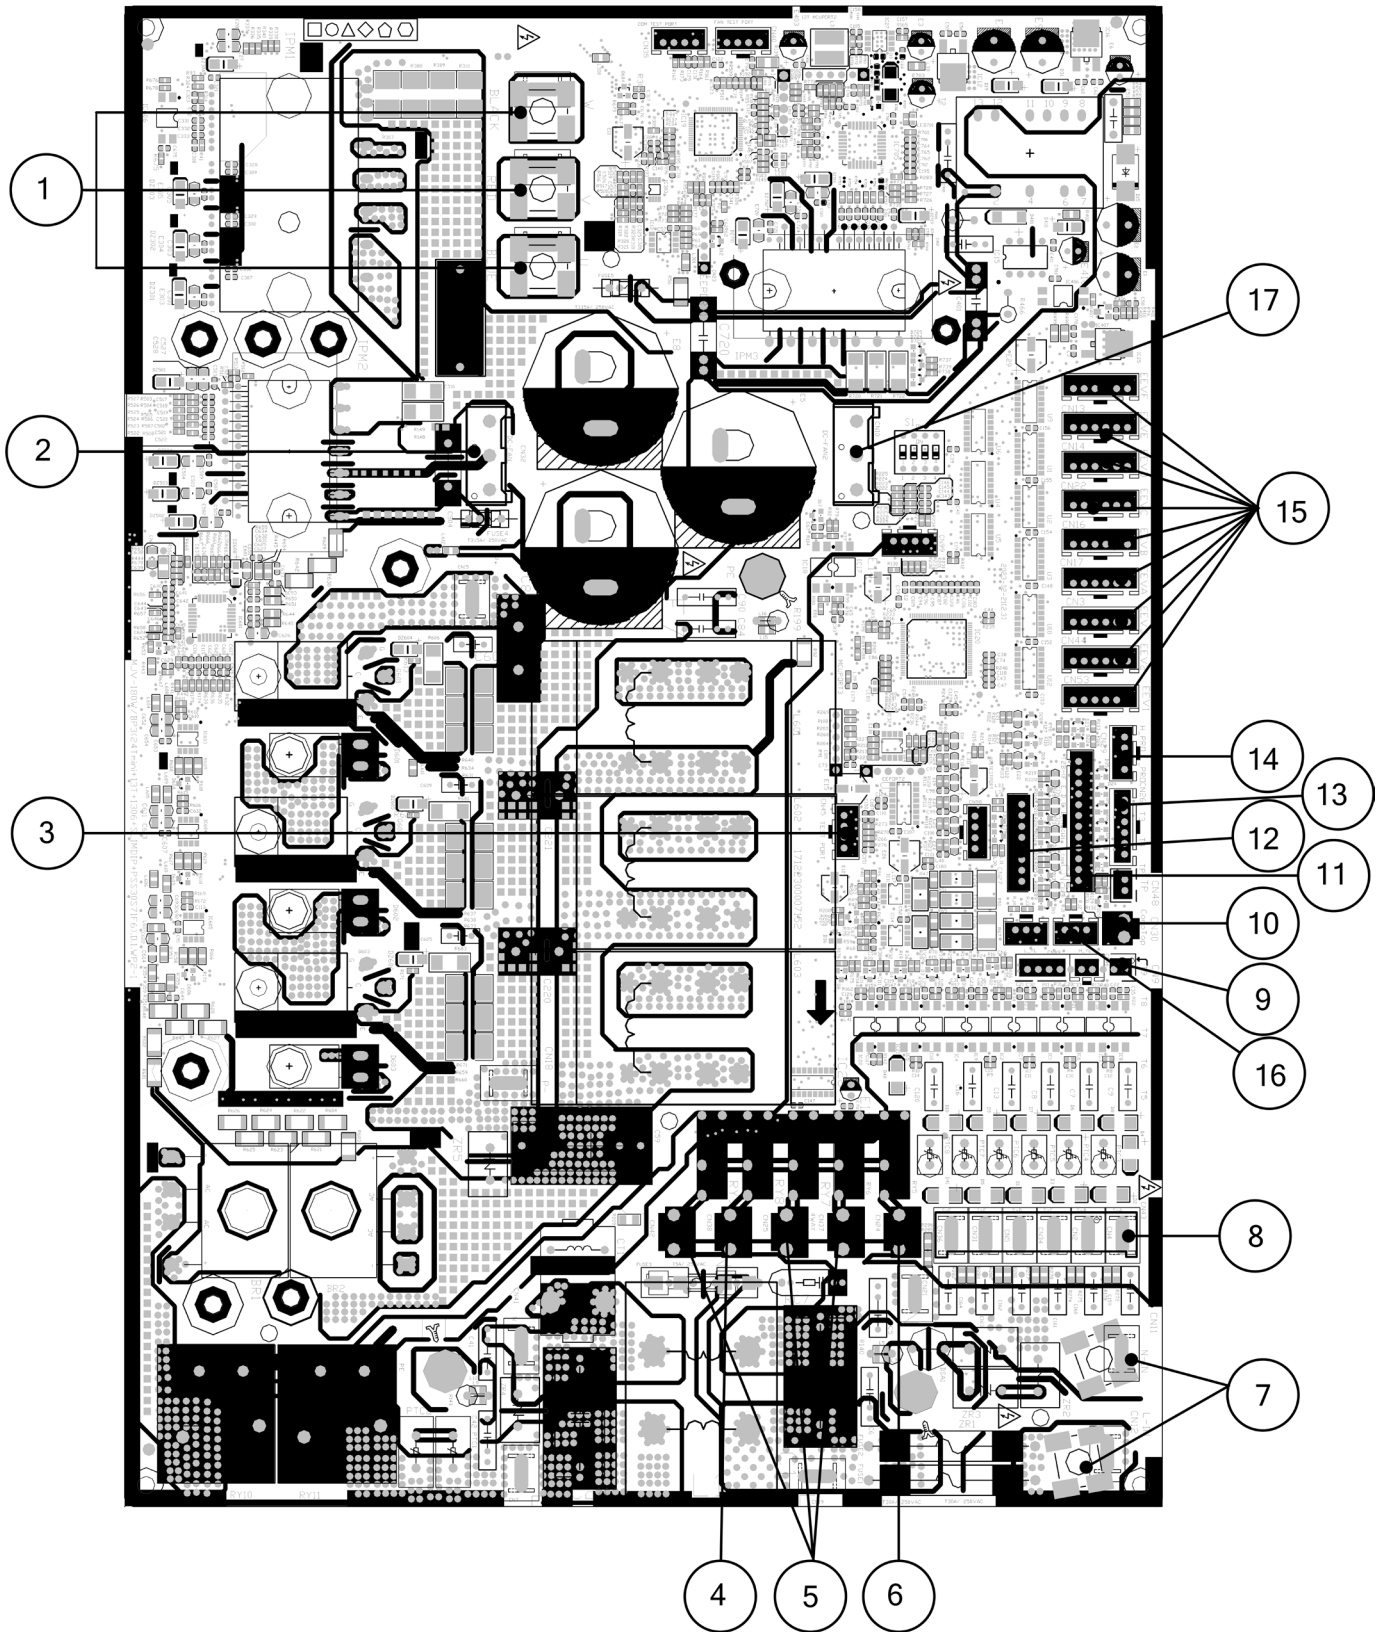



No.	Name	CN#	Meaning
1	COMPRESSOR	W	connect to compressor(Output: 0~310V AC)
		V	
		U	
2	DC-FAN1	CN32	connect to DC fan(Output: 0~310V AC)
3	TESTPORT	CN45	used for testing
4	HEAT_Y	CN38	connect to compressor heater(Output: 230V AC)
5	4-WAY	CN37	connect to 4 way valve 1(Output: 230V AC)
		CN25	connect to 4 way valve 2(Output: 230V AC)
		CN42	connect to 4 way valve 3(Output: 230V AC)
6	HEAT_D	CN24	connect to chassis heater(Output: 230V AC)
7	Power Supply	CN11	N_in: connect to N-line (230V AC input)
		CN12	L_in: connect to L-line (230V AC input)
8	S-A	CN43	S: connect to indoor unit communication(230V AC input)
	S-B		
	S-C		
	S-D		
	S-E		
	S-F		
9	TBH-IN TBH-OUT T3B TF	CN9	connect to cold plate inlet temp. sensor TBH-IN, cold plate outlet temp. sensor TBH-OUT, condenser coil middle temp. sensor T3B, refrigerant tube inlet temp. sensor TF
10	OLP TEMP. SENSOR	CN30	connect to compressor top temp. sensor (Output: 0~5V DC)
11	T2B	CN28	connect to evaporator coil outlet temperature sensor T2B
12	/	CN27	connect to key board CN1
13	T3 T4 TP	CN26	connect to condenser coil temp. sensor T3, ambient temp. sensor T4, exhaust temp. sensor TP(Output: 0~5V DC)
14	H-PRO,L-RPO	CN29	connect to high and low pressure switch(pin1-pin2&pin3-pin4:5VDC pulse wave)

No.	Name	CN#	Meaning
15	EEVA	CN17	connect to electric expansion valve(Output: 0~12V DC)
	EEVB	CN16	
	EEVC	CN22	
	EEVD	CN14	
	EEVE	CN13	
	EEVF	CN1	
	EEV1	CN53	
	EEV2	CN44	
	EEV3	CN3	
16	H_YL	CN49	connect to high pressure sensor
17	DC-FAN2	CN10	connect to DC fan(Output: 0~310V AC)

**Note: This section is for reference only. Please take practicality as standard.**



---

# Installation

## Contents

1. **Accessories**
2. **Location Selection**
3. **Outdoor Unit Installation**
4. **Refrigerant Pipe Installation**
5. **Vacuum Drying and Leakage Checking**
6. **Additional Refrigerant Charge**
7. **Engineering of Insulation**
8. **Engineering of Electrical Wiring**
9. **Test Operation**

## 1. Accessories

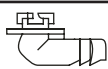Name	Shape	Quantity
Drain joint		1
Seal		1


## 2. Location selection

**2.1 Unit location selection can refer to installation manual.**

**2.2 DO NOT install the unit in the following locations:**

- Near an obstacle that will block air inlets and outlets.
- Near a public street, crowded areas, or where noise from the unit will disturb others..
- Near animals or plants that will be harmed by hot air discharge.
- Near any source of combustible gas.
- In a location that is exposed to large amounts of dust
- In a location exposed to a excessive amounts of salty air.


**2.3 Meets all spatial requirements shown in Installation Clearance Requirements below.**

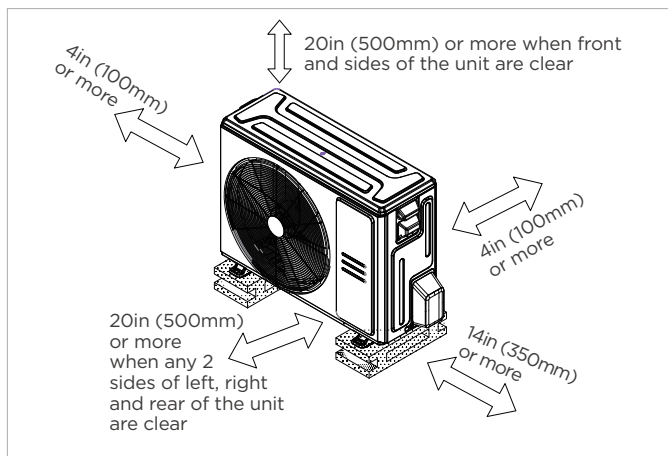

## 2.4 Rows of series installation

The relations between H, A and L are as follows.

	L	A
$L \leq H$	$L \leq 1/2H$	9.8in (25cm) or more
	$1/2H < L \leq H$	11.8in (30cm) or more
$L > H$	Can not be installed	

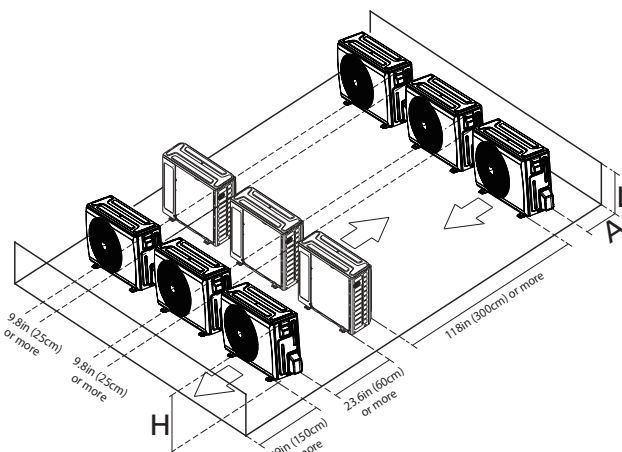

NOTE



H: Unit height

L: Height of the wall behind the unit

A: Distance between unit and wall


## 2.5 If the unit is exposed to heavy wind:

- Install unit so that air outlet fan is at a 90° angle to the direction of the wind. If needed, build a barrier in front of the unit to protect it from extremely heavy winds.

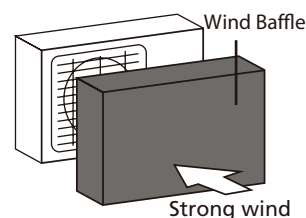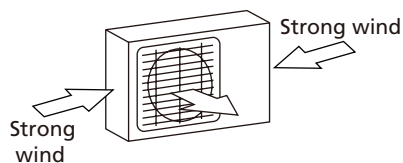

## 2.6 If the unit is frequently exposed to heavy rain or snow:

Build a shelter above the unit to protect it from the rain or snow. Be careful not to obstruct air flow around the unit.

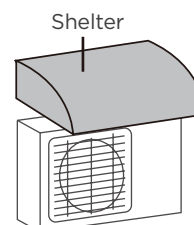

## 2.7 If the unit is frequently exposed to salty air (seaside):

Use outdoor unit that is specially designed to resist corrosion.

## 3. Outdoor unit installation

### 3.1 Install drain joint(Heat pump unit only)

Before bolting the outdoor unit in place, you must install the drain joint at the bottom of the unit.


Note that there are two different types of drain joints depending on the type of outdoor unit.

If the drain joint comes with a rubber seal(see Fig. A ), do the following:

1. Fit the rubber seal on the end of the drain joint that will connect to the outdoor unit.
2. Insert the drain joint into the hole in the base pan of the unit.
3. Rotate the drain joint 90° until it clicks in place facing the front of the unit. **For some panel plates, you need to use tool.**
4. Connect a drain hose extension (not included) to the drain joint to redirect water from the unit during heating mode.

If the drain joint doesn't come with a rubber seal (see Fig. B ), do the following:


1. Insert the drain joint into the hole in the base pan of the unit. The drain joint will click in place.
2. Connect a drain hose extension (not included) to the drain joint to redirect water from the unit during heating mode.

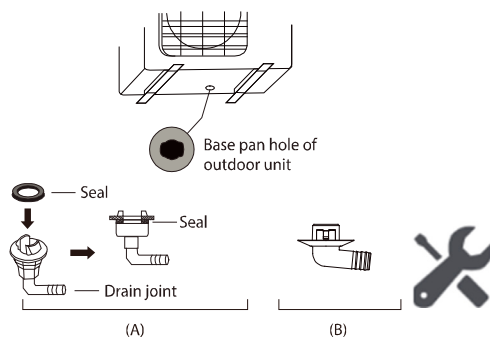

### 3.3 Anchor Outdoor Unit

The outdoor unit can be anchored to the ground or to a wall-mounted bracket with bolt(M10). Prepare the installation base of the unit according to the dimensions below.

The following is a list of different outdoor unit sizes and the distance between their mounting feet.

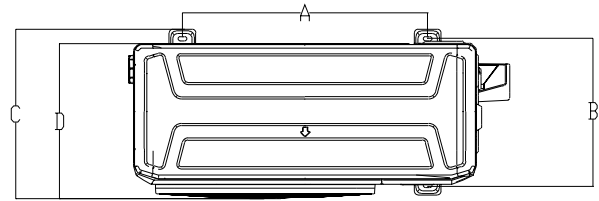

Panel Plate	Unit	D	A	B	C
X2	inch	11.93	17.80	11.26	12.36
	mm	303	452	286	314
X3	inch	12.99	20.12	12.48	13.62
	mm	330	511	317	346
X4	inch	13.46	26.1	13.94	15.5
	mm	342	663	354	394
X6	inch	14.76	24.2	15.6	17.3
	mm	375	615	397	440
D30	inch	16.14	26.50	15.87	17.9
	mm	410	673	403	455
E30	inch	16.34	24.96	15.9	17.99
	mm	415	634	404	457

## 4. Refrigerant Pipe Installation

### 4.1 Maximum length and drop height

Ensure that the length of the refrigerant pipe, the number of bends, and the drop height between the indoor and outdoor units meets the requirements shown in the following table.

#### Current Loop

Capacity (kBtu/h)	Max. Length (ft/m)	Max. Elevation (ft/m)
6k/9k/12k	82/25	49.2/15
18	98.4/30	65.6/20
24~33	164/50	82/25
36	213.3/65	98.4/30

#### RS485

Capacity (kBtu/h)	Max. Length (ft/m)	Max. Elevation (ft/m)
36~60	246/75	98.4/30

#### Caution:


1. The capacity test is based on the standard length and the maximum permissible length is based on the system reliability.

#### 2. Oil traps

-If oil flows back into the outdoor unit's compressor, this might cause liquid compression or deterioration of oil return. Oil traps in the rising gas piping can prevent this.


-An oil trap should be installed every 20ft(6m) of vertical suction line riser (<36kBtu/h unit).

-An oil trap should be installed every 32.8ft(10m) of vertical suction line riser (≥36kBtu/h unit).

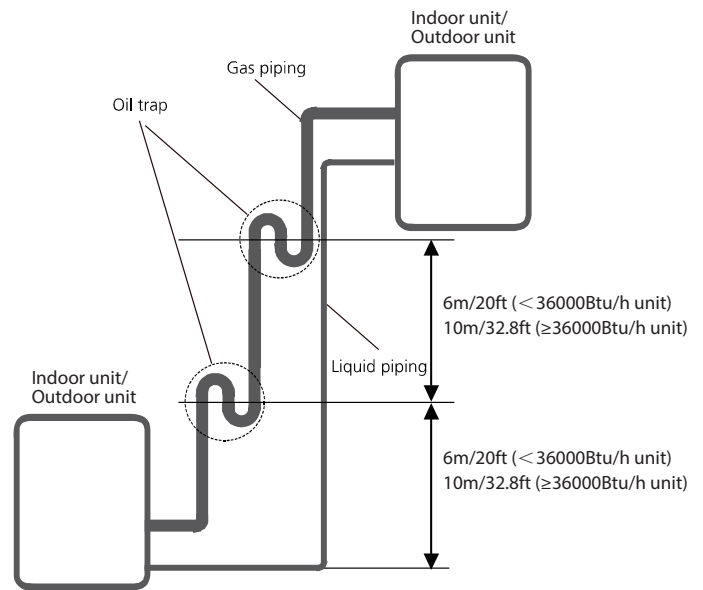


### 4.2 The procedure of connecting pipes

1. Choose the pipe size according to the specification table.
2. Confirm the cross way of the pipes.
3. Measure the necessary pipe length.
4. Cut the selected pipe with pipe cutter
  - Make the section flat and smooth.

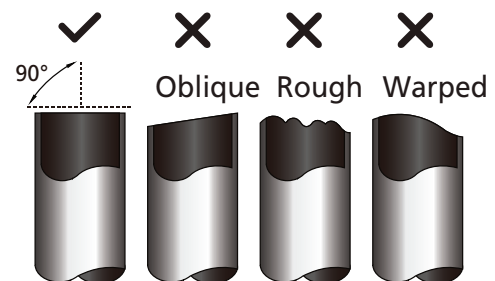

5. Insulate the copper pipe
  - Before test operation, the joint parts should not be heat insulated.
6. Flare the pipe
  - Insert a flare nut into the pipe before flaring the pipe
  - According to the following table to flare the pipe.

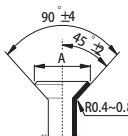Pipe diameter (inch(mm))	Flare dimension A (inch/mm)		Flare shape
	Min	Max	
Ø1/4 (Ø6.35)	0.33/8.4	0.34/8.7	
Ø3/8 (Ø9.52)	0.52/13.2	0.53/13.5	
Ø1/2 (Ø12.7)	0.64/16.2	0.65/16.5	
Ø5/8 (Ø15.9)	0.76/19.2	0.78/19.7	
Ø3/4 (Ø19)	0.91/23.2	0.93/23.7	
Ø7/8 (Ø22)	1.04/26.4	1.06/26.9	

- After flared the pipe, the opening part must be seal by end cover or adhesive tape to avoid duct or exogenous impurity come into the pipe.

7. Drill holes if the pipes need to pass the wall.

8. According to the field condition to bend the pipes so that it can pass the wall smoothly.

9. Bind and wrap the wire together with the insulated pipe if necessary.

10. Set the wall conduit


11. Set the supporter for the pipe.

12. Locate the pipe and fix it by supporter

- For horizontal refrigerant pipe, the distance between supporters should not be exceed 1m.
- For vertical refrigerant pipe, the distance between supporters should not be exceed 1.5m.

13. Connect the pipe to indoor unit and outdoor unit by using two spanners.

- Be sure to use two spanners and proper torque to fasten the nut, too large torque will damage the bell mouth, and too small torque may cause leakage. Refer the following table for different pipe connection.

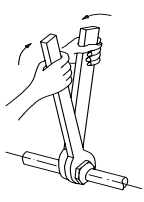Pipe diameter (inch(mm))	Torque	Sketch map
	N.m(lb.ft)	
Ø1/4 (Ø6.35)	18~20 (13.3~14.8)	
Ø3/8 (Ø9.52)	32~39 (23.6~28.8)	
Ø1/2 (Ø12.7)	49~59 (36.1~43.5)	
Ø5/8 (Ø15.9)	57~71 (42~52.4)	
Ø3/4 (Ø19)	67~101 (49.4~74.5)	
Ø7/8 (Ø22)	85~110 (62.7~81.1)	

## 5. Vacuum Drying and Leakage Checking

### 5.1 Purpose of vacuum drying

- Eliminating moisture in system to prevent the phenomena of ice-blockage and copper oxidation. Ice-blockage shall cause abnormal operation of system, while copper oxide shall damage compressor.
- Eliminating the non-condensable gas (air) in system to prevent the components oxidizing, pressure fluctuation and bad heat exchange during the operation of system.

### 5.2 Selection of vacuum pump

- The ultimate vacuum degree of vacuum pump shall be -756mmHg or above.
- Precision of vacuum pump shall reach 0.02mmHg or above.

### 5.3 Operation procedure for vacuum drying

Due to different construction environment, two kinds of vacuum drying ways could be chosen, namely ordinary vacuum drying and special vacuum drying.

#### 5.3.1 Ordinary vacuum drying

- When conduct first vacuum drying, connect pressure gauge to the infusing mouth of gas pipe and liquid pipe, and keep vacuum pump running for 1 hour (vacuum degree of vacuum pump shall be reached -755mmHg).
- If the vacuum degree of vacuum pump could not reach -755mmHg after 1 hour of drying, it indicates that there is moisture or leakage in pipeline system and need to go on with drying for half an hour.
- If the vacuum degree of vacuum pump still could not reach -755mmHg after 1.5 hours of drying, check whether there is leakage source.
- Leakage test: After the vacuum degree reaches -755mmHg, stop vacuum drying and keep the pressure for 1 hour. If the indicator of vacuum gauge does not go up, it is qualified. If going up, it indicates that there is moisture or leak source.

#### 5.3.2 Special vacuum drying

The special vacuum drying method shall be adopted when:

- Finding moisture during flushing refrigerant pipe.
- Conducting construction on rainy day, because rain water might penetrated into pipeline.
- Construction period is long, and rain water might penetrated into pipeline.

4. Rain water might penetrate into pipeline during construction.

Procedures of special vacuum drying are as follows:

1. Vacuum drying for 1 hour.
2. Vacuum damage, filling nitrogen to reach 0.5Kgf/cm<sup>2</sup> .

Because nitrogen is dry gas, vacuum damage could achieve the effect of vacuum drying, but this method could not achieve drying thoroughly when there is too much moisture. Therefore, special attention shall be drawn to prevent the entering of water and the formation of condensate water.

3. Vacuum drying again for half an hour.

If the pressure reached -755mmHg, start to pressure leakage test. If it cannot reached the value, repeat vacuum damage and vacuum drying again for 1 hour.

4. Leakage test: After the vacuum degree reaches -755mmHg, stop vacuum drying and keep the pressure for 1 hour. If the indicator of vacuum gauge does not go up, it is qualified. If going up, it indicates that there is moisture or leak source.

## 6. Additional Refrigerant Charge

- After the vacuum drying process is carried out, the additional refrigerant charge process need to be performed.
- The outdoor unit is factory charged with refrigerant. The additional refrigerant charge volume is decided by the diameter and length of the liquid pipe between indoor and outdoor unit. Refer the following formula to calculate the charge volume.

	Diameter of liquid pipe (inch(mm))	Formula
R454B	Ø1/4 (Ø6.35)	$V=0.16(15)\text{oz/ft(g/m)} \times (L - \text{standard pipe length})$
	Ø3/8 (Ø9.52)	$V=0.32(30)\text{oz/ft(g/m)} \times (L - \text{standard pipe length})$

**V:** Additional refrigerant charge volume.

**L :** The length of the liquid pipe.

Note:

- Refrigerant may only be charged after performed the vacuum drying process.
- Always use gloves and glasses to protect your hands and eyes during the charge work.
- Use electronic scale or fluid infusion apparatus to weight refrigerant to be recharged. Be sure to avoid extra refrigerant charged, it may cause liquid hammer of the compressor or protections.
- Use supplementing flexible pipe to connect refrigerant cylinder, pressure gauge and outdoor unit. And The refrigerant should be charged in liquid state. Before recharging, The air in the flexible pipe and manifold gauge should be exhausted.
- After finished refrigerant recharge process, check whether there is refrigerant leakage at the connection joint part.(Using gas leakage detector or soap water to detect).



---

## 7 . Engineering of Insulation

### 7.1 Insulation of refrigerant pipe

#### 1. Operational procedure of refrigerant pipe insulation

Cut the suitable pipe → insulation (except joint section) → flare the pipe → piping layout and connection → vacuum drying → insulate the joint parts

#### 2. Purpose of refrigerant pipe insulation


- During operation, temperature of gas pipe and liquid pipe shall be over-heating or over-cooling extremely. Therefore, it is necessary to carry out insulation; otherwise it shall debase the performance of unit and burn compressor.
- Gas pipe temperature is very low during cooling. If insulation is not enough, it shall form dew and cause leakage.
- Temperature of gas pipe is very high (generally 50-100 °C) during heating. Insulation work must be carried out to prevent hurt by carelessness touching.

#### 3. Insulation material selection for refrigerant pipe

- The burning performance should over 120 °C
- According to the local law to choose insulation materials
- The thickness of insulation layer shall be above 10mm. If in hot or wet environment place, the layer of insulation should be thicker accordingly.

#### 4. Installation highlights of insulation construction

- Gas pipe and liquid pipe shall be insulated separately, if the gas pipe and liquid pipe were insulated together; it will decrease the performance of air conditioner.

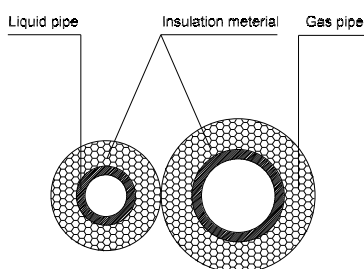

- The insulation material at the joint pipe shall be 5~10cm longer than the gap of the insulation material.
- The insulation material at the joint pipe shall be inserted into the gap of the insulation material.
- The insulation material at the joint pipe shall be banded to the gap pipe and liquid pipe tightly.
- The linking part should be use glue to paste together
- Be sure not bind the insulation material over-tight, it may extrude out the air in the material to cause bad insulation and cause easy aging of the material.

## 8. Engineering of Electrical Wring

### 1. Highlights of electrical wiring installation

- All wiring must comply with local and national electrical codes, regulations and must be installed by a licensed electrician.
- All electrical connections must be made according to the Electrical Connection Diagram located on the panels of the indoor and outdoor units.
- If there is a serious safety issue with the power supply, stop work immediately. Explain your reasoning to the client, and refuse to install the unit until the safety issue is properly resolved.
- Power voltage should be within 90-110% of rated voltage. Insufcient power supply can cause malfunction, electrical shock, or fire.
- Installation of an external surge suppressor at the outdoor disconnect is recommended.
- If connecting power to fixed wiring, a switch or circuit breaker that disconnects all poles and has a contact separation of at least 1/8in (3mm) must be incorporated in the fixed wiring. The qualified technician must use an approved circuit breaker or switch.
- Only connect the unit to an individual branch circuit. Do not connect another appliance to that outlet.
- Make sure to properly ground the air conditioner.
- Every wire must be firmly connected. Loose wiring can cause the terminal to overheat, resulting in product malfunction and possible fire.
- Do not let wires touch or rest against refrigerant tubing, the compressor, or any moving parts within the unit.
- If the unit has an auxiliary electric heater, it must be installed at least 40in (1 m) away from any combustible materials.
- To avoid getting an electric shock, never touch the electrical components soon after the power supply has been turned off. After turning of the power, always wait 10 minutes or more before you touch the electrical components.
- Make sure that you do not cross your electrical wiring with your signal wiring.
- This may cause distortion, interference or possibly damage to circuit boards.
- No other equipment should be connected to the same power circuit.
- Connect the outdoor wires before connecting the indoor wires.

Table: Minimum Cross-Sectional Area able of Power and Signal Cables

Rated Current of Appliance (A)	AWG
≤ 6	18
6 - 10	16
10 - 16	14
16 - 25	12
25 - 32	10

## 2. Outdoor Unit Wiring

### WARNING:

Before performing any electrical or wiring work, turn off the main power to the system.

1. Prepare the cable for connection

a. You must first choose the right cable size.

Choose the cable type according to the local electrical codes and regulations.

b. The size of the power supply cable, signal cable, fuse, and switch needed is determined by the Minimum Circuit Ampacity of the unit. The Minimum Circuit Ampacity is indicated on the nameplate located on the side panel of the unit. Refer to this nameplate to choose the right cable, fuse, or switch.

c. Using wire strippers, strip the rubber jacket from both ends of the signal cable to reveal approximately 5.9in (150mm) of wire.

d. Strip the insulation from the ends.

e. Using a wire crimper, crimp u-lugs on the ends.

NOTE: When connecting the wires, strictly follow the wiring diagram found inside the electrical box cover.

2. Remove the 2 screws fixed the front right panel, then take it down to perform wire connection. (for double fan outdoor units)

Unscrew the big handle and remove it. (for single fan outdoor units)

3. Connect the u-lugs to the terminals Match the wire colors/labels with the labels on the terminal block. Firmly screw the u-lug of each wire to its corresponding terminal.

4. Clamp down the cable with the cable clamp.

5. Insulate unused wires with electrical tape.

Keep them away from any electrical or metal parts.

6. Reinstall the cover of the electric control box.

## 9. Test Operation

**1. The test operation must be carried out after the entire installation has been completed.**

**2. Please confirm the following points before the test operation.**

- The indoor unit and outdoor unit are installed properly.
- Piping and wiring are properly connected.
- Ensure that there are no obstacles near the inlet and outlet of the unit that might cause poor performance or product malfunction.
- The refrigeration system does not leak.
- The drainage system is unimpeded and draining to a safe location.
- The heating insulation is properly installed.
- The grounding wires are properly connected
- The length of the piping and the added refrigerant stow capacity have been recorded.
- Power voltage is the correct voltage for the air conditioner.

CAUTION: Failure to perform the test run may result in unit damage, property damage or personal injury.

### 3. Test Run Instructions

1. Open both the liquid and gas stop valves.

2. Turn on the main power switch and allow the unit to warm up.

3. Set the air conditioner to COOL mode, and check the following points.

#### Indoor unit

- Double check to see if the room temperature is being registered correctly.
- Ensure the manual buttons on the indoor unit works properly.
- Check to see that the drainage system is unimpeded and draining smoothly.
- Ensure there is no vibration or abnormal noise during operation.

#### Outdoor unit

- Check to see if the refrigeration system is leaking.
- Make sure there is no vibration or abnormal noise during operation.
- Ensure the wind, noise, and water generated by the unit do not disturb your neighbors or pose a safety hazard.

### 4. Drainage Test

a. Ensure the drainpipe flows smoothly. New buildings should perform this test before finishing the ceiling.

- 
- b. Turn on the main power switch and run the air conditioner in COOL mode.
  - c. Check to see that the water is discharged. It may take up to one minute before the unit begins to drain depending on the drainpipe.
  - d. Make sure that there are no leaks in any of the piping.
  - e. Stop the air conditioner. Turn off the main power switch and reinstall the test cover.

---

# Basic Functions

## Contents

<b>1. Basic Functions.....</b>	<b>2</b>
1.1 Abbreviation .....	2
1.2 Fan Mode .....	2
1.3 Cooling Mode.....	2
1.4 Heating Mode(Heat Pump Units).....	2

## 1. Basic Functions

### 1.1 Abbreviation

Unit element abbreviations

Abbreviation	Element
T1	Indoor room temperature
T2	Coil temperature of evaporator
T3	Coil temperature of condenser
T4	Outdoor ambient temperature
TP	Compressor discharge temperature
Tsc	Adjusted setting temperature
CDIFTEMP	Cooling shutdown temperature
HDIFTEMP2	Heating shutdown temperature
TCDE1	Exit defrost temperature1
TCDE2	Exit defrost temperature2 (maintain for a period of time )
TIMING_DEFROST_TIME	Enter defrost time

In this manual, such as CDIFTEMP, HDIFTEMP2, TCDE1, TCDE2, TIMING\_DEFROST\_TIME...etc., they are well-setting parameter of EEPROM.

### 1.2 Fan Mode

When fan mode is activated:

- The outdoor fan and compressor are stopped.

### 1.3 Cooling Mode

#### 1.3.1 Compressor Control

Reach the configured temperature:

- 1) When the compressor runs continuously for less than 120 minutes.
  - If the following conditions are satisfied, the compressor ceases operation.
    - Calculated frequency(fb) is less than minimum limit frequency(FminC).
    - Compressor runs at FminC more than ten minutes.
    - Indoor room temperature(T1) is lower than or equal to (Tsc-CDIFTEMP-0.5°C/1°F)
- 2) When the compressor runs continuously for more than 120 minutes.
  - If the following conditions are satisfied, the compressor ceases operation.
    - Calculated frequency(fb) is less than minimum limit frequency(FminC).
    - Compressor runs at FminC more than 10 minutes.

- When indoor room temperature(T1) is lower than or equal to (Tsc-CDIFTEMP).

Note: CDIFTEMP is EEPROM setting parameter. It is 2°C(4°F) usually.


- 3) If one of the following conditions is satisfied, not judge protective time.

- Compressor running frequency is more than test frequency.
- When compressor running frequency is equal to test frequency, outdoor ambient temperature(T4) is more than 15°C(59°F) or outdoor ambient sensor(T4) fault.
- Change setting temperature.
- Turning on/off turbo or sleep function
- Various frequency limit shutdown occurs.

#### 1.3.2 Outdoor Fan Control

- The outdoor unit will be run at different fan speed according to outdoor ambient temperature(T4) and compressor frequency.
- For different outdoor units, the fan speeds are different.

#### 1.3.3 Condenser Temperature Protection

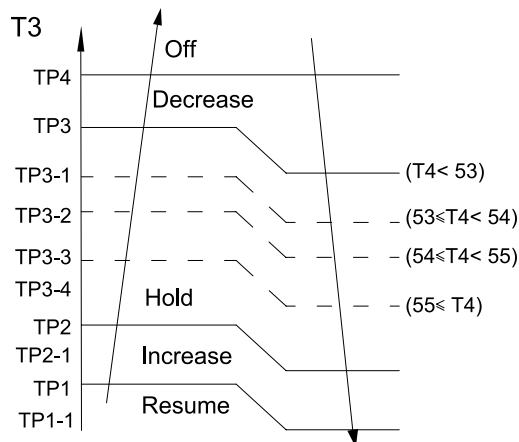

When the condenser temperature exceeds a configured value, the compressor ceases operation.

### 1.4 Heating Mode(Heat Pump Units)

#### 1.4.1 Compressor Control

- 1) Reach the configured temperature
  - If the following conditions are satisfied, the compressor ceases operation.
    - Calculated frequency(fb) is less than minimum limit frequency(FminH).
    - Compressor runs at FminH more than 10 minutes.
    - T1 is higher than or equal to Tsc+ HDIFTEMP2.

Note: HDIFTEMP2 is EEPROM setting parameter. It is

---

2°C(4°F) usually.

- If one of the following conditions is satisfied, not judge protective time.
  - Compressor running frequency is more than test frequency.
  - Compressor running frequency is equal to test frequency, outdoor ambient temperature(T4) is more than 15°C(59°F) or Outdoor ambient sensor(T4) fault.
  - Change setting temperature.
  - Turning on/off turbo or sleep function
- 2) When the current is higher than the predefined safe value, surge protection is activated, causing the compressor to cease operations.

#### 1.4.2 Outdoor Fan Control:

- The outdoor unit will be run at different fan speed according to outdoor ambient temperature(T4) and compressor frequency.
- For different outdoor units, the fan speeds are different.

#### 1.4.3 Defrosting mode

- The unit enters defrosting mode according to the temperature value of condenser temperature(T3) and outdoor ambient temperature(T4) as well as the compressor running time.
- In defrosting mode, the compressor continues to run, the indoor and outdoor motor will cease operation, the defrost light of the indoor unit will turn on, and the "df" symbol is displayed.
- If any one of the following conditions is satisfied, defrosting ends and the machine switches to normal heating mode:
  - Condenser temperature(T3) rises above TCDE1.
  - Condenser temperature(T3) maintained above TCDE2 for 80 seconds.
  - Unit runs for 15 minutes consecutively in defrosting mode.
- If Outdoor ambient temperature(T4) is lower than or equal to -22°C(-8 °F) and compressor running time is more than TIMING\_DEFROST\_TIME, if any one of the following conditions is satisfied, defrosting ends and the machine switches to normal heating mode:
  - Unit runs for 10 minutes consecutively in defrosting mode.
  - Condenser temperature(T3) rises above 10°C/50°F..
- If any one of the following conditions is satisfied, the unit enters defrosting mode
  - If condenser temperature(T3) or outdoor ambient temperature(T4) is lower than -3°C for 30 seconds, Ts-T1 is lower than 5°C and compressor running time is more than EE\_TIME\_DEFROST7.

- If condenser temperature(T3) or outdoor ambient temperature(T4) is lower than -3°C for 30 seconds and compressor running time is more than EE\_TIME\_DEFROST7+30 minutes.
- If any one of the following conditions is satisfied, defrosting ends and the machine switches to normal heating mode:
  - Condenser temperature(T3) rises above TCDE1+4°C/7°F.
  - Condenser temperature(T3) maintained above TCDE2+4°C/7°F for 80 seconds.
  - Unit runs for 15 minutes consecutively in defrosting mode.

# Troubleshooting

## Contents

<b>1. Safety Caution .....</b>	<b>3</b>
<b>2. General Troubleshooting.....</b>	<b>4</b>
2.1 Error Display(For models with auxiliary boards) .....	4
<b>3. Outdoor Unit Point Check Function .....</b>	<b>6</b>
<b>4. Quick Maintenance by Error Code.....</b>	<b>8</b>
<b>5. Troubleshooting by Error Code.....</b>	<b>10</b>
5.1 EC51 (ODU EEPROM parameter error diagnosis and solution) .....	10
5.2 EL01(IDU & ODU communication error diagnosis and solution) .....	11
5.3 EC07 (ODU fan speed out of control)/EC71(Over Current Failure of Outdoor DC Fan Motor) Diagnosis and Solution .....	14
5.4 EC52/EC53/EC54/EC56/EC57/EC50 (Open circuit or short circuit of temperature sensor diagnosis and solution) .....	16
5.5 PC08(Current overload protection)/PC42(Compressor start failure of outdoor unit)/PC44(ODU zero speed protection) /PC46(Compressor speed has been out of control)/PC49(Compressor overcurrent failure) .....	17
5.6 PC00(IPM malfunction diagnosis and solution) .....	19
5.7 PC01(Over voltage or too low voltage protection)/PC10(ODU low AC voltage protection)/PC11(ODU main control board DC bus high voltage protection)/PC12(ODU main control board DC bus low voltage protection /341 MCE error) Diagnosis and Solution .....	21
5.8 PC40(Communication error between ODU main chip and compressor driven chip diagnosis and solution) .....	23
5.9 PC0F(PFC module protection diagnosis and solution) .....	24
5.10 PC06(Discharge temperature protection of compressor diagnosis and solution) .....	25
5.11 PC0A(High temperature protection of condenser diagnosis and solution) .....	26

---

# Troubleshooting

## Contents

5.12	PC02/LC06 (Compressor top(or IPM) temp. protection/Refrigerant sensor error diagnosis and solution) .....	27
5.13	PC30 (System high pressure protection diagnosis and solution) .....	29
5.14	PC31 (System low pressure protection diagnosis and solution) .....	31
5.15	EC72 (Lack phase failure of outdoor DC fan motor diagnosis and solution) .....	33
5.16	PC43 (ODU compressor lack phase protection diagnosis and solution).....	34
5.17	PC45 (ODU IR chip drive failure diagnosis and solution).....	35
5.18	EC55(ODU IPM module temperature sensor malfunction diagnosis and solution) .....	36
5.19	PH90(High temperature protection of evaporator diagnosis and solution).....	37
5.20	PH91(Low temperature protection of evaporator diagnosis and solution) .....	38

## **6. Check Procedures**



## 1. Safety Caution


### WARNING

Be sure to turn off all power supplies or disconnect all wires to avoid electric shock. While checking indoor/outdoor PCB, please equip oneself with antistatic gloves or wrist strap to avoid damage to the board.

### WARNING

Electricity remains in capacitors even when the power supply is off. Ensure the capacitors are fully discharged before troubleshooting.

**NOTE:** If using the inverter test tool maintenance, remove the big handle, take out the detection cable, take out female end of the cable and connect the inverter test tool. After the maintenance is completed, insert the female end back into the port.

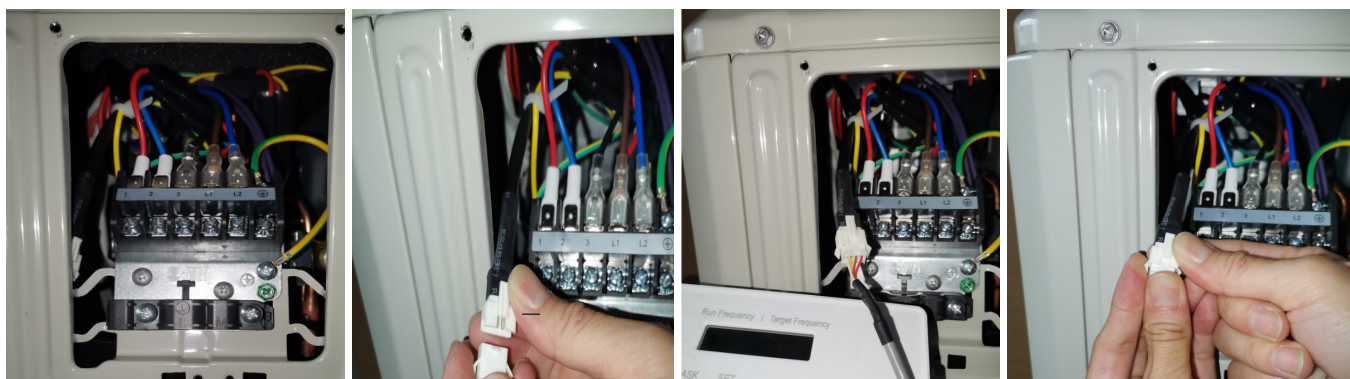

Note: This picture is for reference only. Actual appearance may vary.

## 2. General Troubleshooting

### 2.1 Error Display(For models with auxiliary boards)

Display	Malfunction or Protection	Solution
dF	Defrosting	Normal Display, not error code
FC	Forced cooling	
EC07	ODU fan speed out of control	TS14
EC71	Over current failure of outdoor DC fan motor	TS14
EC72	Lack phase failure of outdoor DC fan motor	TS34
EC50	ODU temp. sensor error(T3,T4.TP)	TS16
EC51	ODU EEPROM parameter error	TS10
EC52	ODU coil temp. sensor(T3) error	TS16
EC53	ODU ambient temp. sensor(T4) error	TS16
EC54	COMP. discharge temp. sensor(TP) error	TS16
EC55	ODU IPM module temperature sensor malfunction	TS36
EC56	IDU coil outlet temp. sensor(T2B) error	TS16
EC57	Refrigerant pipe temperature sensor error	TS16
EL01	IDU & ODU communication error	TS11
PC00	IPM module protection	TS19
PC02	Compressor top(or IPM) temp. protection/Refrigerant sensor error	TS27
PC06	Discharge temperature protection of compressor	TS25
PC08	Outdoor overcurrent protection	TS18
PC09	High temperature protection of condenser	TS26
PC0F	PFC module protection	TS24
PC0L	Low ambient temperature protection	--
PC10	ODU low AC voltage protection	TS21
PC11	ODU main control board DC bus high voltage protection	TS21
PC12	ODU main control board DC bus low voltage protection /341 MCE error	TS21
PC30	System high pressure protection	TS29

---

PC31	System low pressure protection	TS31
PC40	Communication error between ODU main chip and compressor driven chip	TS23
PC42	Compressor start failure of outdoor unit	TS17
PC43	ODU compressor lack phase protection	TS34
PC44	ODU zero speed protection	TS17
PC45	ODU IR chip drive failure	TS35
PC46	Compressor speed has been out of control	TS17
PC49	Compressor overcurrent failure	TS17
LC06	High temperature protection of Inverter module (IPM)	TS28
PH90	High temperature protection of evaporator	TS37
PH91	Low temperature protection of evaporator	TS38

### 3. Outdoor Unit Point Check Function

- A check switch is included on the auxiliary PCB.
- Push SW1 to check the unit's status while running. The digital display shows the following codes each time the SW1 is pushed.

Number of Presses	Display	Remark
00	Normal display	Displays running frequency, running state, or malfunction code
01	Indoor unit capacity demand code	Actual data*HP*10  If capacity demand code is higher than 99, the digital display tube will show single digit and tens digit. (For example, the digital display tube show "5.0", it means the capacity demand is 15. the digital display tube show "60", it means the capacity demand is 6.0)  S communication, the digital display tube will show: "--"
02	Amendatory capacity demand code	
03	The frequency after the capacity requirement transfer	
04	The frequency after the frequency limit	
05	The frequency of sending to 341 chip	
06	Indoor unit evaporator temperature (T2)	If the temp. is lower than -9°C, the digital display tube will show "-9". If the temp. is higher than 70°C, the digital display tube will show "70". If the indoor unit is not connected, the digital display tube will show: "--"
07	Condenser pipe temp.(T3)	
08	Outdoor ambient temp.(T4)	
09	Compressor discharge temp.(Tp)	The display value is between 0~199°C. If the temp. is lower than 0°C, the digital display tube will show "0". If the temp. is higher than 99°C, the digital display tube will show single digit and tens digit. ( For example, If the display shows 0.5, so 0.5 multiplied by 10 to become 5, then added to 100 to become 105°C.)
10	AD value of current	The display value is a hex number.
11	AD value of voltage	For example, the digital display tube shows "Cd", so $C*16^1+d*16^0=12*16+13=205$ , it means AD value is 205.  AD value is detected by the chip.
12	Indoor unit running mode code	S communication: Standby:0, Cooling:1, Heating:2, Fan only 3, Drying:4, Forced cooling:6, Defrosting: 7,  485 communication: Standby:0, Fan only 1, Cooling:2, Heating:3, Forced cooling:4, Drying:6, Self clean:8
13	Outdoor unit running mode code	
14	EXV open angle	Actual data/4.  If the value is higher than 99, the digital display shows single and double digits.  For example, if the digital display shows "2.0", so 2.0 multiplied by 10 to become 20, then added to 100 to become 120, the EXV open angle is $120 \times 4 = 480p$ .

15	Frequency limit symbol	Bit7	Frequency limit caused by IGBT radiator	The display value is a hexadecimal number. For example, the digital display show 2A, then Bit5=1, Bit3=1, and Bit1=1.  This means that a frequency limit may be caused by T2, T3, or the current.
		Bit6	Frequency limit caused by PFC	
		Bit5	Frequency limit caused by high temperature of T2.	
		Bit4	Frequency limit caused by low temperature of T2.	
		Bit3	Frequency limit caused by T3.	
		Bit2	Frequency limit caused by Tp.	
		Bit1	Frequency limit caused by current	
		Bit0	Frequency limit caused by voltage	
16	Outdoor unit fan motor state	Off: 0, Turbo:1 High speed:2, Med speed: 3, Low speed: 4, Breeze:5, Super breeze: 6 other speed:7		
17	IGBT radiator temp.	The display value is between 0~130°C. If the temp. is higher than 99°C, the digital display tube will show single digit and tens digit. (For example, the digital display tube show "0.5",it means the IGBT radiator temp. is 105°C. the digital display tube show "1.6",it means the IGBT radiator temp. is 116°C)		
18	Indoor unit number	The indoor unit can communicate with outdoor unit well. General:1, Twins:2		
19	Evaporator pipe temp. T2 of 1# indoor unit	If the temp. is lower than 0°C, the digital display tube will show "0".If the temp. is higher than 70°C, the digital display tube will show "70". If the indoor unit is not connected, the digital display tube will show: "--"(heating T2, cooling T2B)		
20	Evaporator pipe temp. T2 of 2# indoor unit			
21	Reserved			
22	1# Indoor unit capacity demand code	S communication, the digital display tube will show: "--"		
23	2# Indoor unit capacity demand code	Actual data*HP*10		
24	Reserved	If capacity demand code is higher than 99, the digital display tube will show single digit and tens digit. (For example, the digital display tube show "5.0",it means the capacity demand is 15. the digital display tube show "60",it means the capacity demand is 6.0). If the indoor unit is not connected, the digital display tube will show: "--"  S communication, the digital display tube will show: "--"		
25	Room temp. T1 of 1# indoor unit	If the temp. is lower than -9°C, the digital display tube will show "-9". If the temp. is higher than 70°C, the digital display tube will show "70". If the indoor unit is not connected, the digital display tube will show: "--"  S communication, the digital display tube will show: "--"		
26	Room temp. T1 of 2# indoor unit	If the temp. is lower than 0°C, the digital display tube will show "0".If the temp. is higher than 70°C, the digital display tube will show "70". If the indoor unit is not connected, the digital display tube will show: "--"  S communication, the digital display tube will show: "--"		
27	Average room temp. T1	If the temp. is lower than 0°C, the digital display tube will show "0".If the temp. is higher than 70°C, the digital display tube will show "70".		
28	Reason of stop			
29	Evaporator pipe temp. T2B of 1# indoor unit	If the temp. is lower than -9 °C, the digital display tube will show "-9".If the temp. is higher than 70°C, the digital display tube will show "70". If the indoor unit is not connected, the digital display tube will show: "--"  S communication, the digital display tube will show: "--"		
30	Evaporator pipe temp. T2B of 2# indoor unit	If the temp. is lower than 0 °C, the digital display tube will show "0". If the temp. is higher than 70°C, the digital display tube will show "70". If the indoor unit is not connected, the digital display tube will show: "--"  S communication. the digital display tube will show: "--"		

## 4. Quick Maintenance by Error Code

If you do not have the time to test which specific parts are faulty, you can directly change the required parts according to the error code. You can find the parts to replace by error code in the following table.

Part requiring replacement	Error Code								
	ELO1	EC50	EC51	EC52	EC53	EC54	EC55	EC56	EC57
Indoor PCB	✓	x	x	x	x	x	x	x	x
Outdoor PCB	✓	✓	✓	✓	✓	✓	✓	✓	✓
ODU coil temp. sensor	x	✓	x	✓	x	x	x	x	x
ODU ambient temp. sensor	x	✓	x	x	✓	x	x	x	x
COMP. discharge temp. sensor	x	✓	x	x	x	✓	x	x	x
IPM module temperature sensor	x	x	x	x	x	x	✓	x	x
IDU coil outlet temp. sensor	x	x	x	x	x	x	x	✓	x
Refrigerant pipe temperature sensor	x	x	x	x	x	x	x	x	✓
Condenser temperature sensor	x	x	x	x	x	x	x	x	x
Reactor	✓	x	x	x	x	x	x	x	x
IPM module board	✓	x	x	x	x	x	x	x	x

Part requiring replacement	Error Code							
	EC07/EC71	PC00	PC01/PC10/ PC11/PC12	PC02	PC08/PC42/ PC44/ PC46/PC49	PC0F	PH90	PH91
Outdoor PCB	✓	✓	✓	✓	✓	✓	x	x
Outdoor fan motor	✓	✓	x	x	✓	x	x	x
Reactor or inductance	x	✓	✓	x	✓	✓	x	x
Compressor	x	✓	x	x	x	x	x	x
IPM module board	x	✓	✓	x	✓	x	x	x
Bridge rectifier	x	✓	✓	x	✓	x	x	x
Evaporator coil temperature sensor	x	x	x	x	x	x	✓	✓
PFC module	x	x	x	x	x	✓	x	x
Additional refrigerant	x	x	x	x	x	x	x	x
Over load protector	x	x	x	✓	x	x	x	x
ODU ambient temp. sensor	x	x	x	x	x	x	x	x
Refrigerant pipe temperature sensor	x	x	x	x	x	x	x	x
Indoor fan	x	x	x	x	x	x	✓	x
Indoor PCB	x	x	x	x	x	x	✓	✓

Part requiring replacement	Error Code							
	PC40	EC72	PC43	PC45	PC06	PC08	PC30	PC31
Outdoor PCB	✓	✓	✓	x	✓	✓	✓	✓
Outdoor fan motor	x	✓	x	x	x	✓	✓	✓
ODU coil temp. sensor	x	x	x	x	x	✓	x	x
COMP. discharge temp. sensor	x	x	x	x	✓	x	x	x
Compressor	x	x	✓	x	x	x	x	x
IPM module board	x	x	x	✓	x	x	x	x
Additional refrigerant	x	x	x	x	✓	✓	x	✓
Electric control box	✓	x	x	x	x	x	x	x
High pressure switch	x	x	x	x	x	x	✓	x
Low pressure switch	x	x	x	x	x	x	x	✓

## 5. Troubleshooting by Error Code


### 5.1 EC51 (ODU EEPROM parameter error diagnosis and solution)

**Description:** Indoor or outdoor PCB main chip does not receive feedback from EEPROM chip.

**Recommended parts to prepare:**

- Indoor PCB
- Outdoor PCB


**Troubleshooting and repair:**

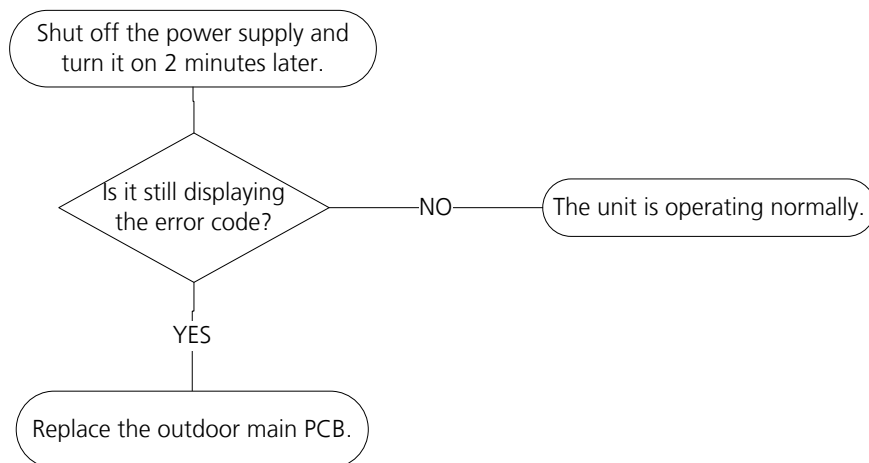

**Remarks:**

**EEPROM:** A read-only memory whose contents can be erased and reprogrammed using a pulsed voltage.

The location of the EEPROM chip on the outdoor PCB is shown in the following image:

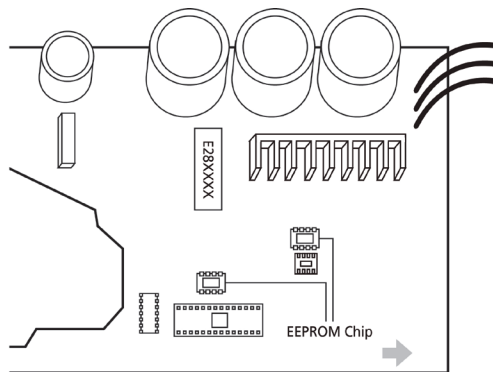

This pictures are only for reference, actual appearance may vary.



## 5.2 EL01(IDU & ODU communication error diagnosis and solution)


**Description:** Indoor unit can not communicate with outdoor unit

**Recommended parts to prepare:**

- Indoor PCB
- Outdoor PCB
- Reactor


**Troubleshooting and repair:**

**Current loop Communication(S Communication):**

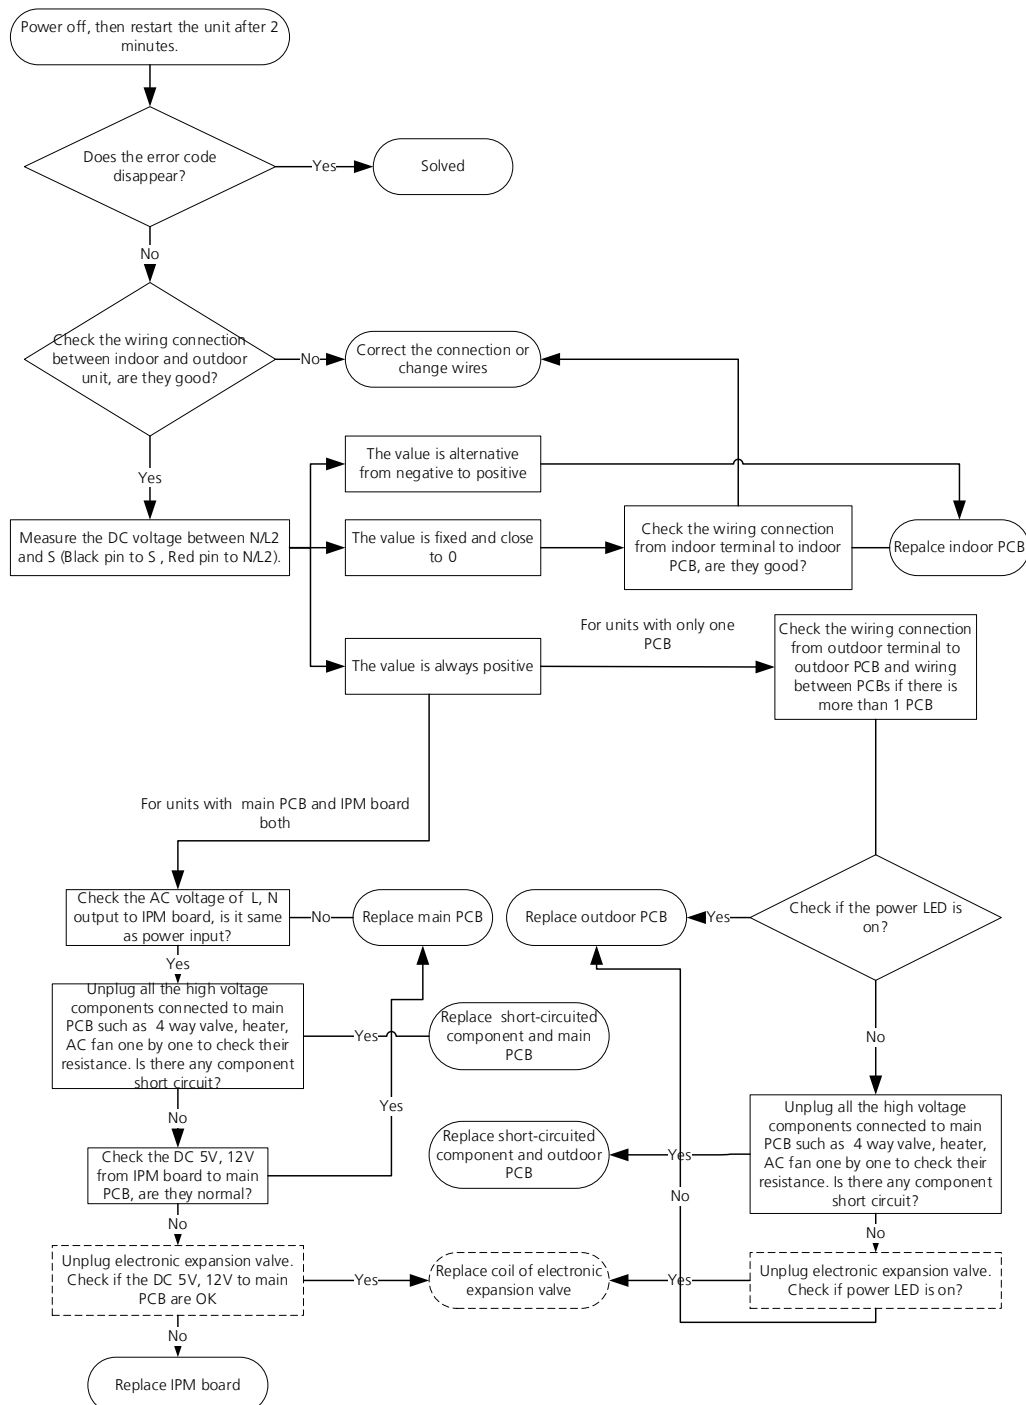


### Remarks:

- Use a multimeter to test the DC voltage between 2 port(or S or L2 port) and 3 port(or N or S port) of outdoor unit.  
The red pin of multimeter connects with 2 port(or S or L2 port) while the black pin is for 3 port(or N or S port) .
- When AC is operating normally, the voltage is moving alternately as positive values and negative values
- If the outdoor unit has malfunction, the voltage has always been the positive value.
- While if the indoor unit has malfunction, the voltage has always been a certain value.

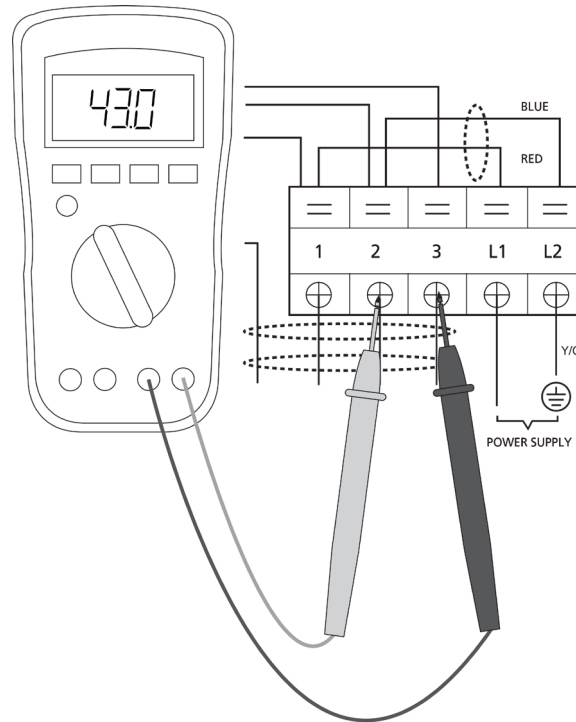

**S and N  
or  
L2 and S  
or  
2 and 3**

- Use a multimeter to test the resistance of the reactor which does not connect with capacitor.
- The normal value should be around zero ohm. Otherwise, the reactor must have malfunction.

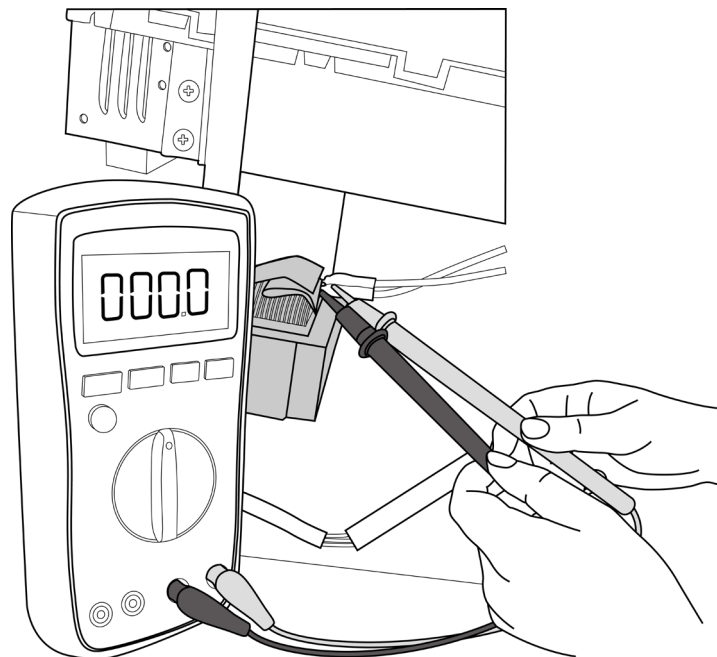


**Note:** The picture and the value are only for reference, actual condition and specific value may vary.

## 485 Communication(S1,S2 Communication):

### Recommended parts to prepare:

- Signal wires
- Magnet ring
- Indoor PCB
- Outdoor PCB

### Troubleshooting and repair:

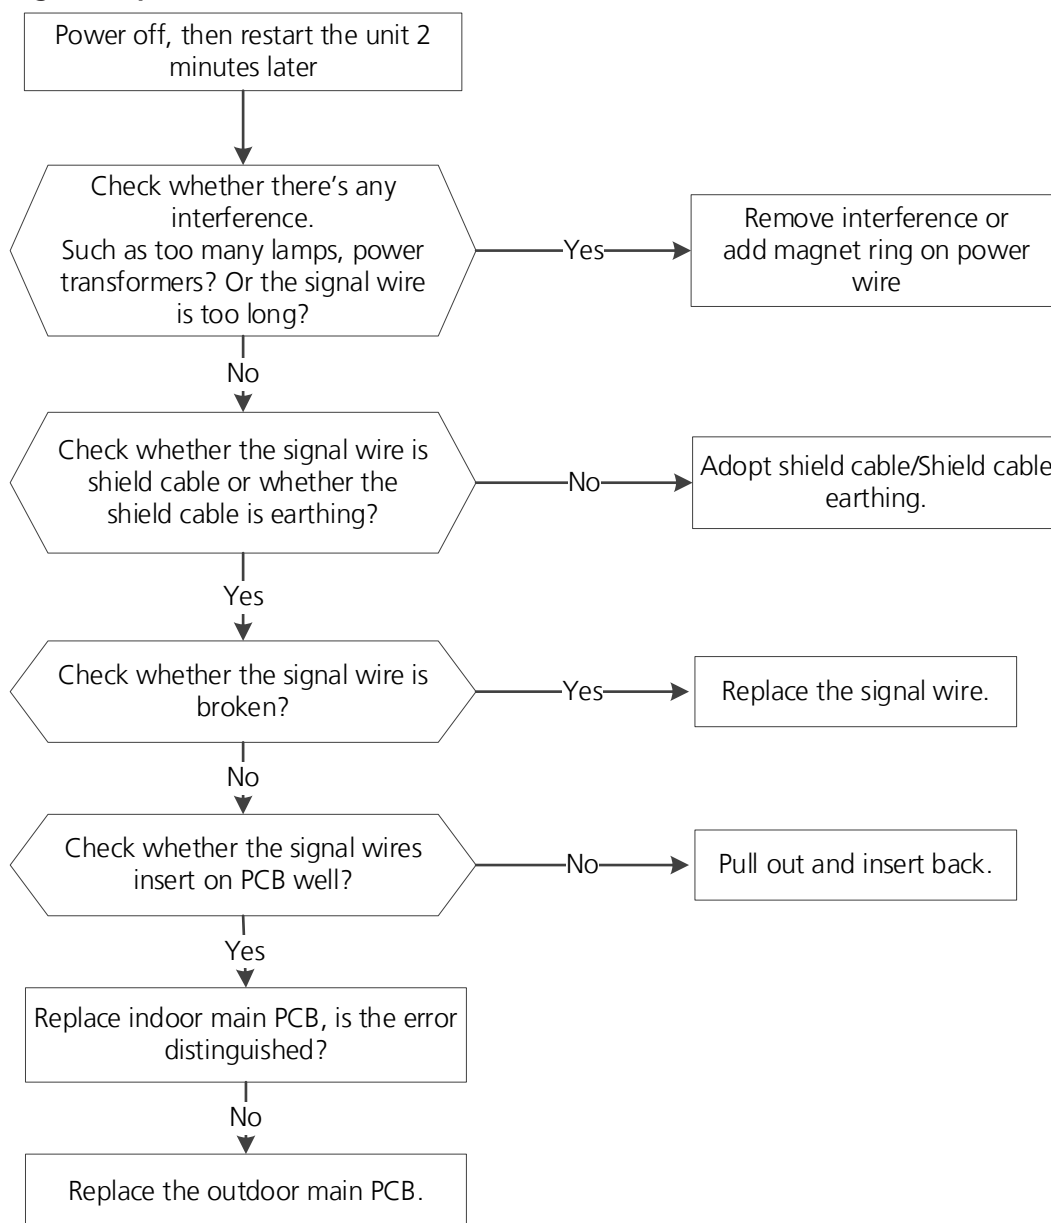


### 5.3 EC07 (ODU fan speed out of control)/EC71(Over Current Failure of Outdoor DC Fan Motor) Diagnosis and Solution

**Description:** When indoor / outdoor fan speed keeps too low or too high for a certain time, the LED displays the failure code and the AC turns off.

#### Recommended parts to prepare:

- Connection wires
- Fan assembly
- Fan motor
- PCB

#### Troubleshooting and repair:

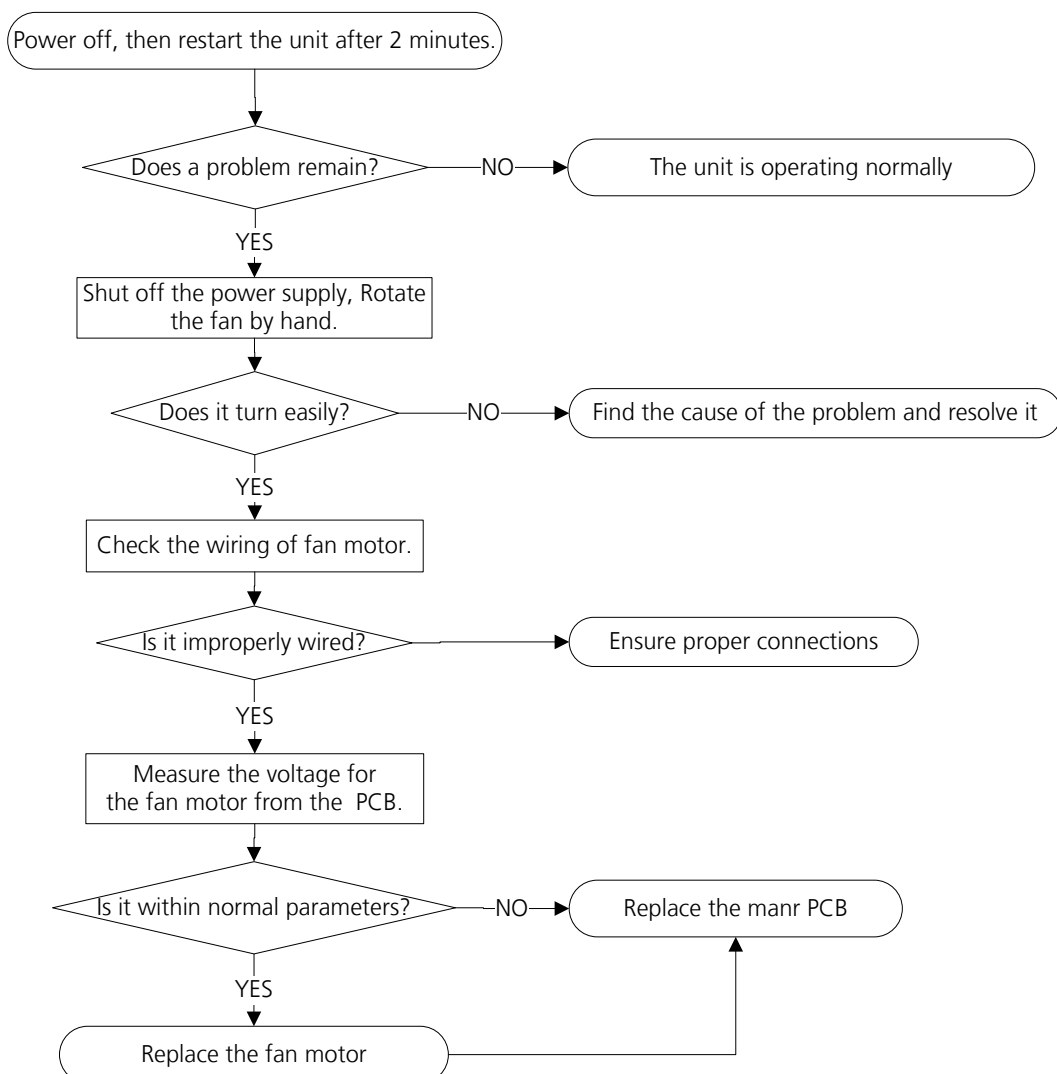


## Index:

### 1. Outdoor DC Fan Motor(control chip is in fan motor)

Power on and when the unit is in standby, measure the voltage of pin1-pin3, pin4-pin3 in fan motor connector. If the value of the voltage is not in the range showing in below table, the PCB must has problems and need to be replaced.


- DC motor voltage input and output (voltage: 220-240V~):

No.	Color	Signal	Voltage
1	Red	Vs/Vm	192V~380V
2	---	---	---
3	Black	GND	0V
4	White	Vcc	13.5-16.5V
5	Yellow	Vsp	0~6.5V
6	Blue	FG	13.5-16.5V

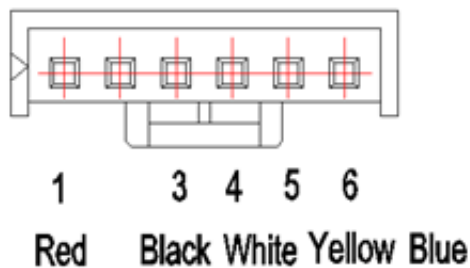

### 2. Outdoor DC Fan Motor (control chip is in outdoor PCB)

Release the UVW connector. Measure the resistance of U-V, U-W, V-W. If the resistance is not equal to each other, the fan motor must has problems and need to be replaced. otherwise the PCB must has problems and need to be replaced.

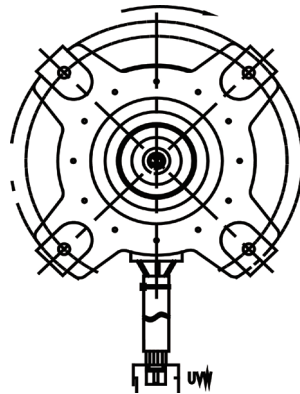



## 5.4 EC52/EC53/EC54/EC56/EC57/EC50 (Open circuit or short circuit of temperature sensor diagnosis and solution)

**Description:** If the sampling voltage is lower than 0.06V or higher than 4.94V, the LED displays the failure code.

**Recommended parts to prepare:**

- Connection wires
- Sensors
- Outdoor PCB

**Troubleshooting and repair:**

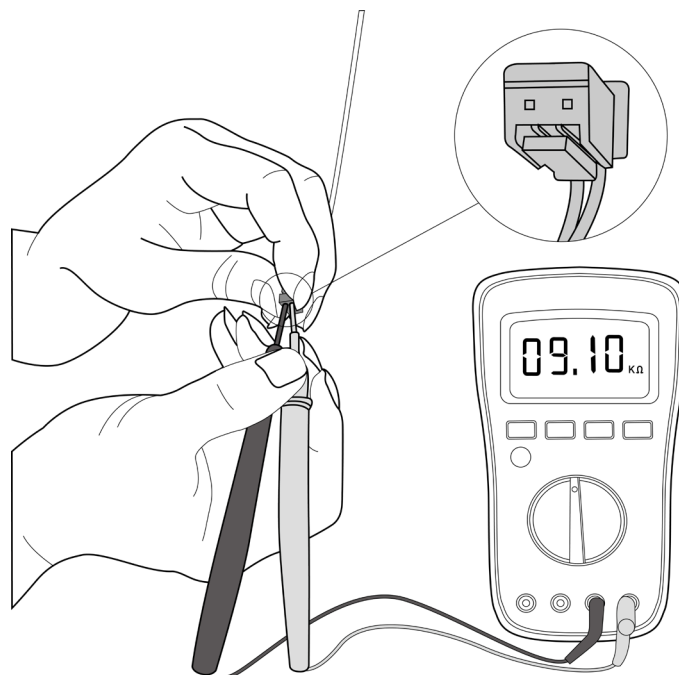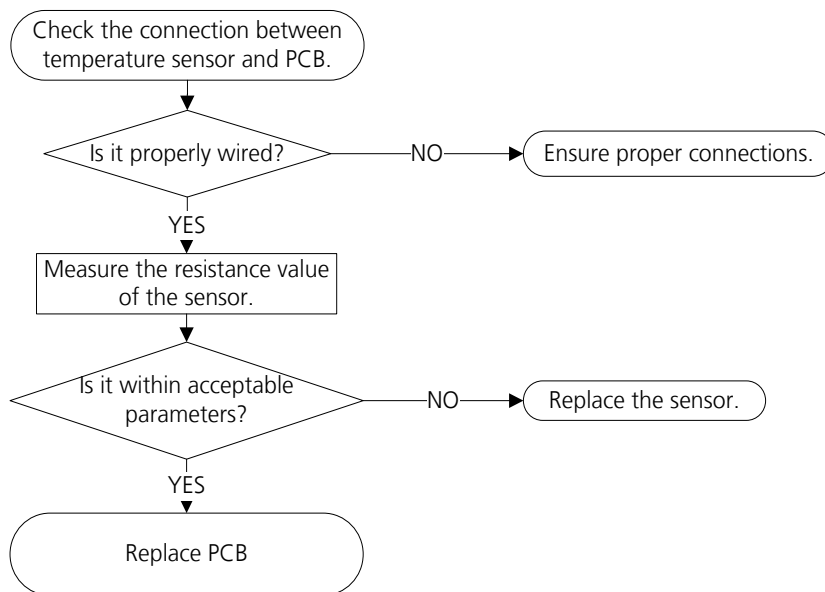

This picture and the value are only for reference, actual appearance and value may vary

---


## 5.5 PC08(Current overload protection)/PC42(Compressor start failure of outdoor unit)/PC44(ODU zero speed protection) /PC46(Compressor speed has been out of control)/PC49(Compressor overcurrent failure)

**Description:** An abnormal current rise is detected by checking the specified current detection circuit.

**Recommended parts to prepare:**

- Outdoor PCB
- Connection wires
- Bridge rectifier
- PFC circuit or reactor
- Refrigeration piping system
- Pressure switch
- Outdoor fan
- IPM module board

**Troubleshooting and repair:**

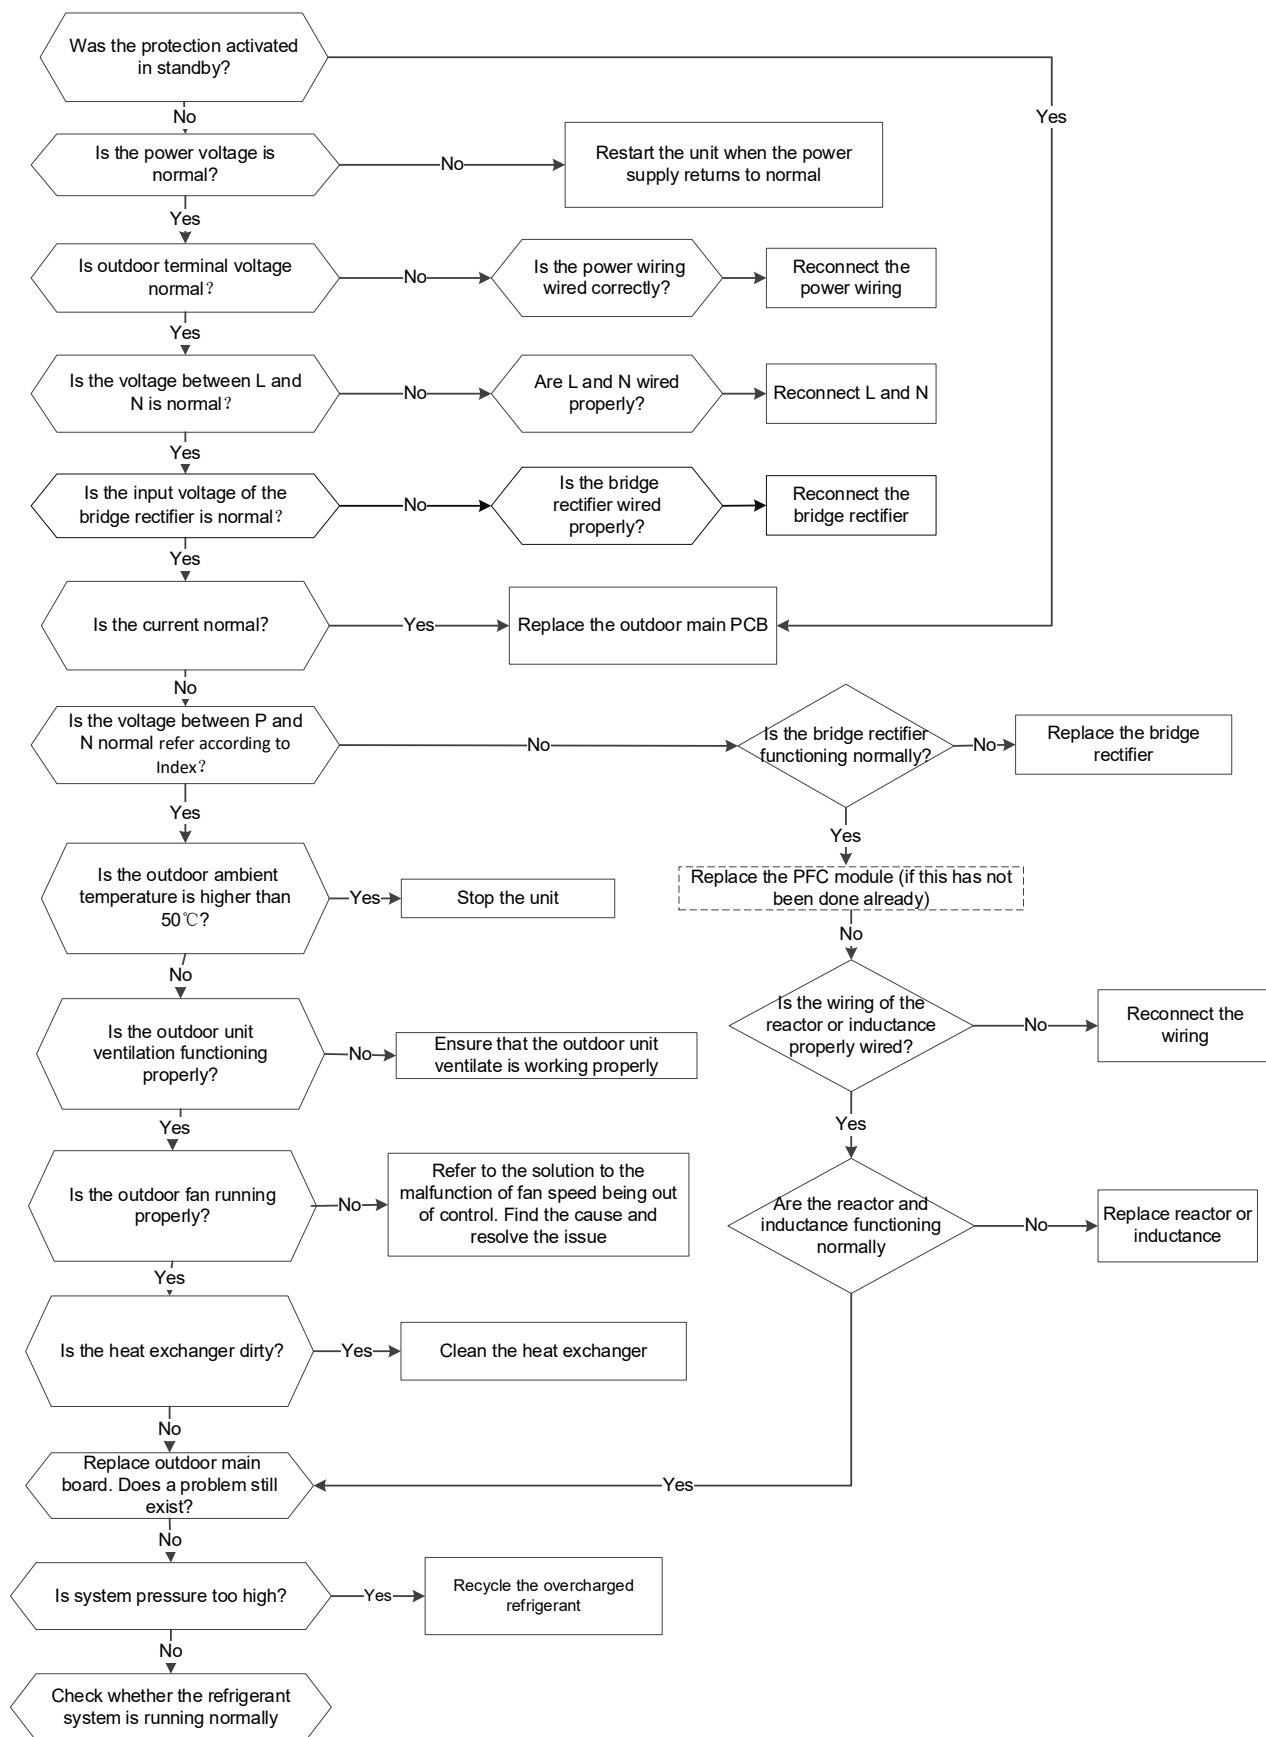



---

## 5.6 PC00(IPM malfunction diagnosis and solution)

**Description:** When the voltage signal the IPM sends to the compressor drive chip is abnormal, the LED displays the failure code and the AC turns off.

### Recommended parts to prepare:

- Connection wires
- IPM module board
- Outdoor fan assembly
- Compressor
- Outdoor PCB
- Reactor or inductance
- Bridge rectifier

### Troubleshooting and repair:

At first test the resistance between every two ports of U, V, W of IPM and P, N. If any result of them is 0 or close to 0, the IPM is defective. Otherwise, please follow the procedure below:



---


## 5.7 PC01(Over voltage or too low voltage protection)/PC10(ODU low AC voltage protection)/PC11(ODU main control board DC bus high voltage protection)/PC12(ODU main control board DC bus low voltage protection /341 MCE error) Diagnosis and Solution

**Description:** Abnormal increases or decreases in voltage are detected by checking the specified voltage detection circuit.

### Recommended parts to prepare:

- Power supply wires
- IPM module board
- Outdoor PCB
- Bridge rectifier
- PFC circuit or reactor

### Troubleshooting and repair:

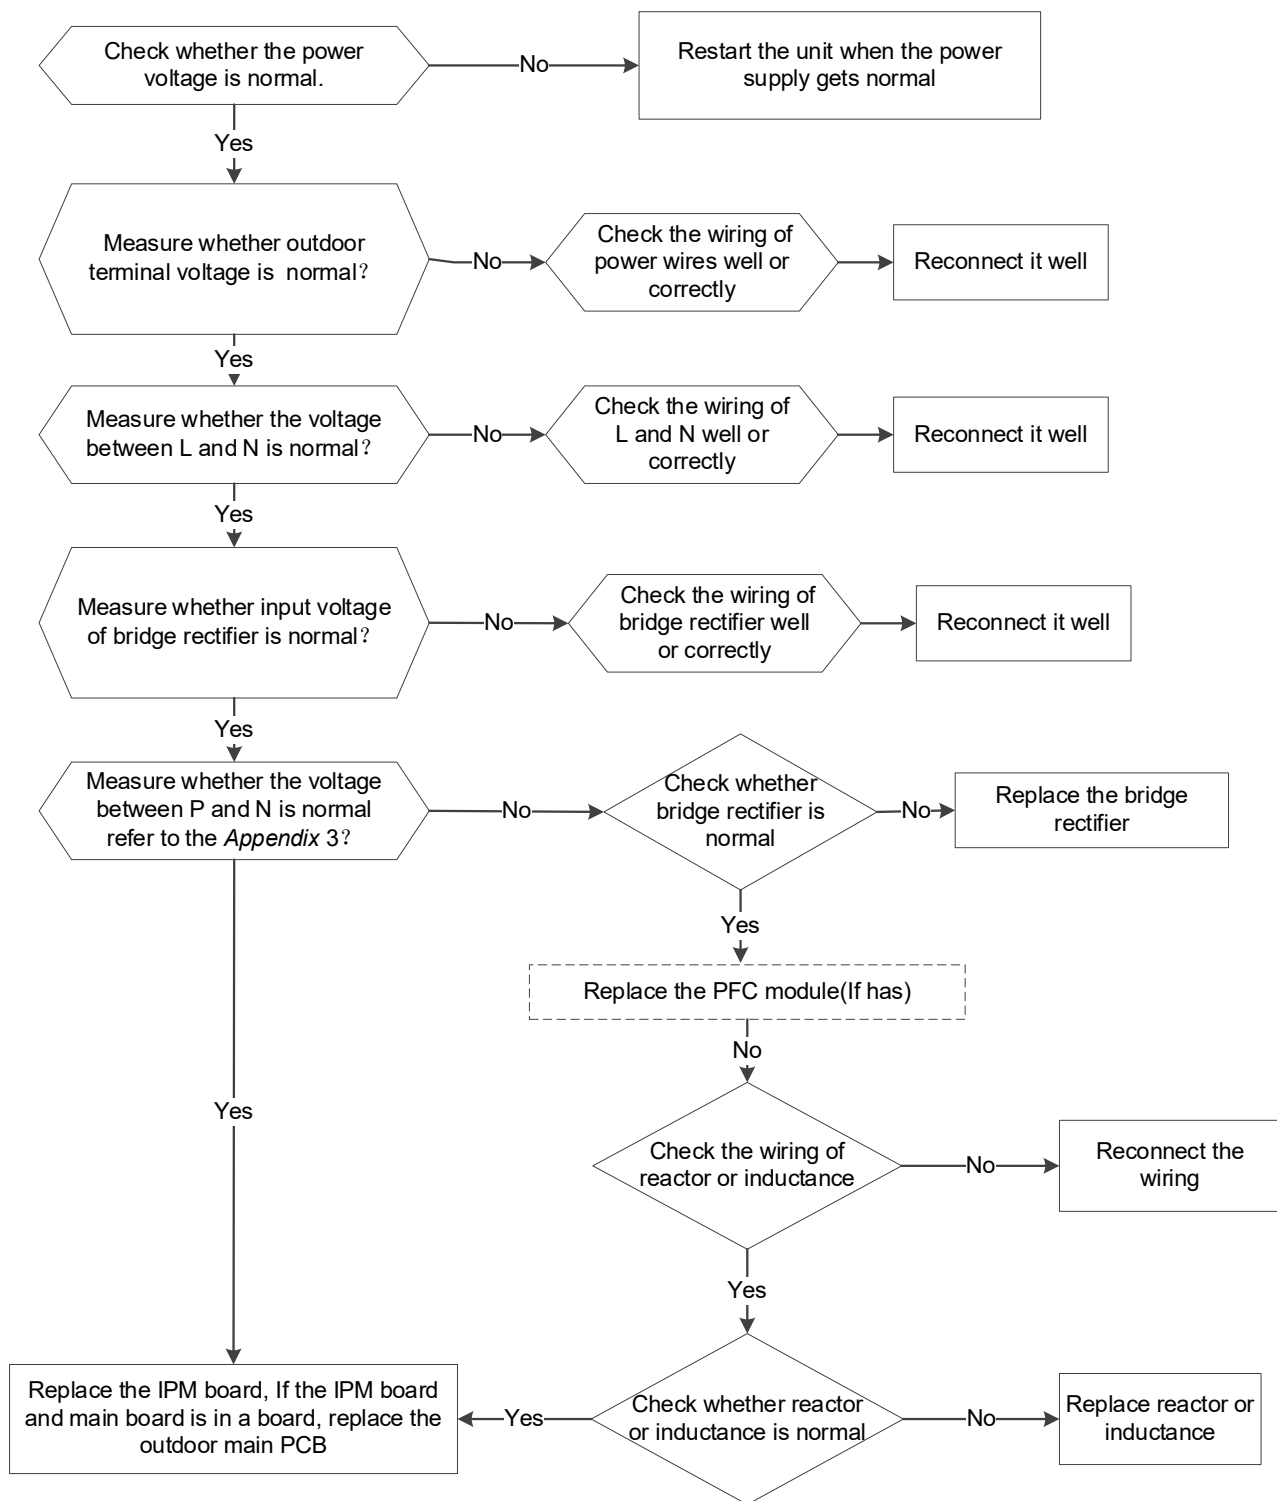


## 5.8 PC40(Communication error between ODU main chip and compressor driven chip diagnosis and solution)

**Description:** The main PCB cannot detect the IPM board.

**Recommended parts to prepare:**

- Connection wires
- Outdoor PCB
- IPM module board
- Electric control box

**Troubleshooting and repair:**

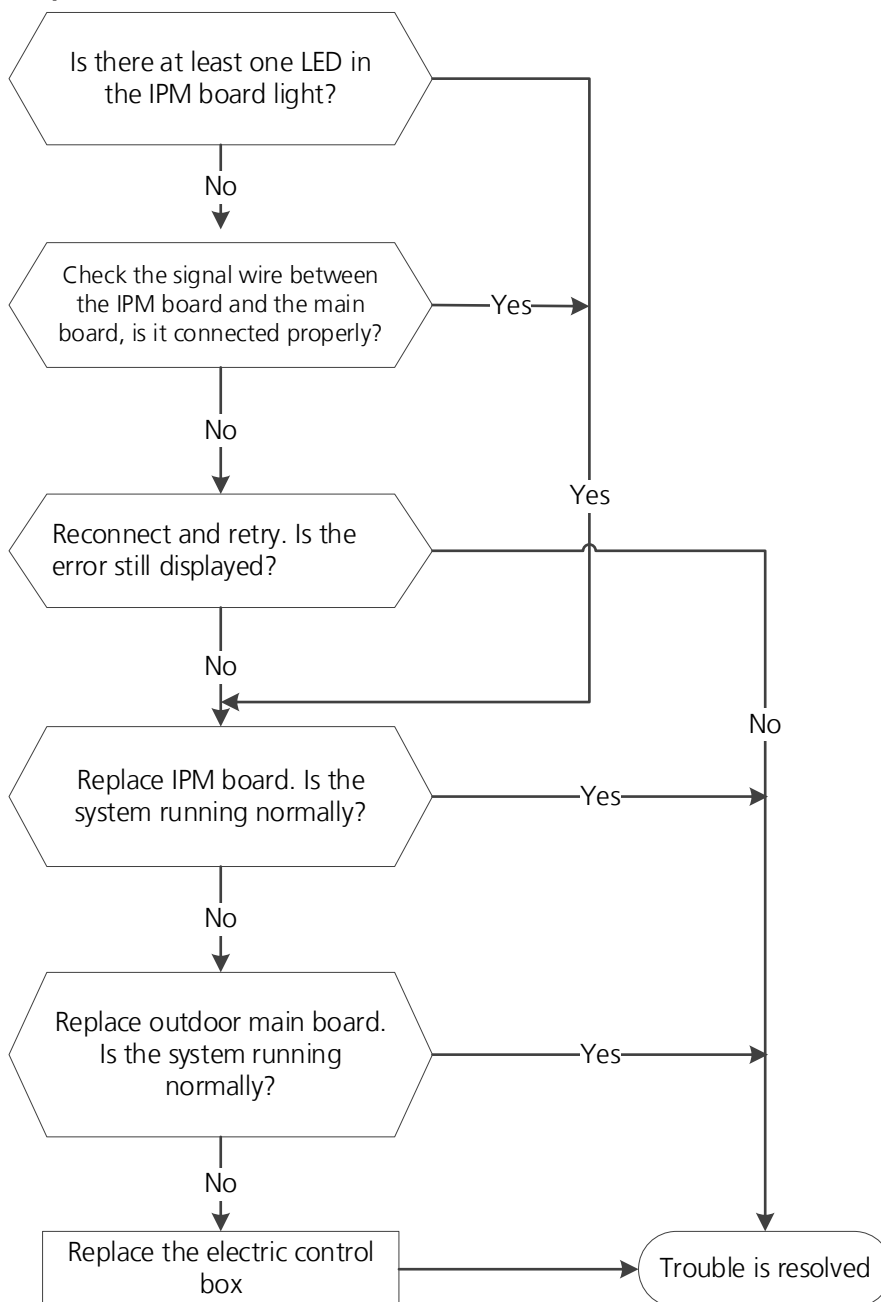


## 5.9 PC0F(PFC module protection diagnosis and solution)

**Description:** Outdoor PCB detects PFC signal is low voltage or DC voltage is lower than 340V for 6s when quick check.

**Recommended parts to prepare:**

- Connection wires
- Outdoor PCB
- Inductance
- PFC circuit or IPM module board

**Troubleshooting and repair:**

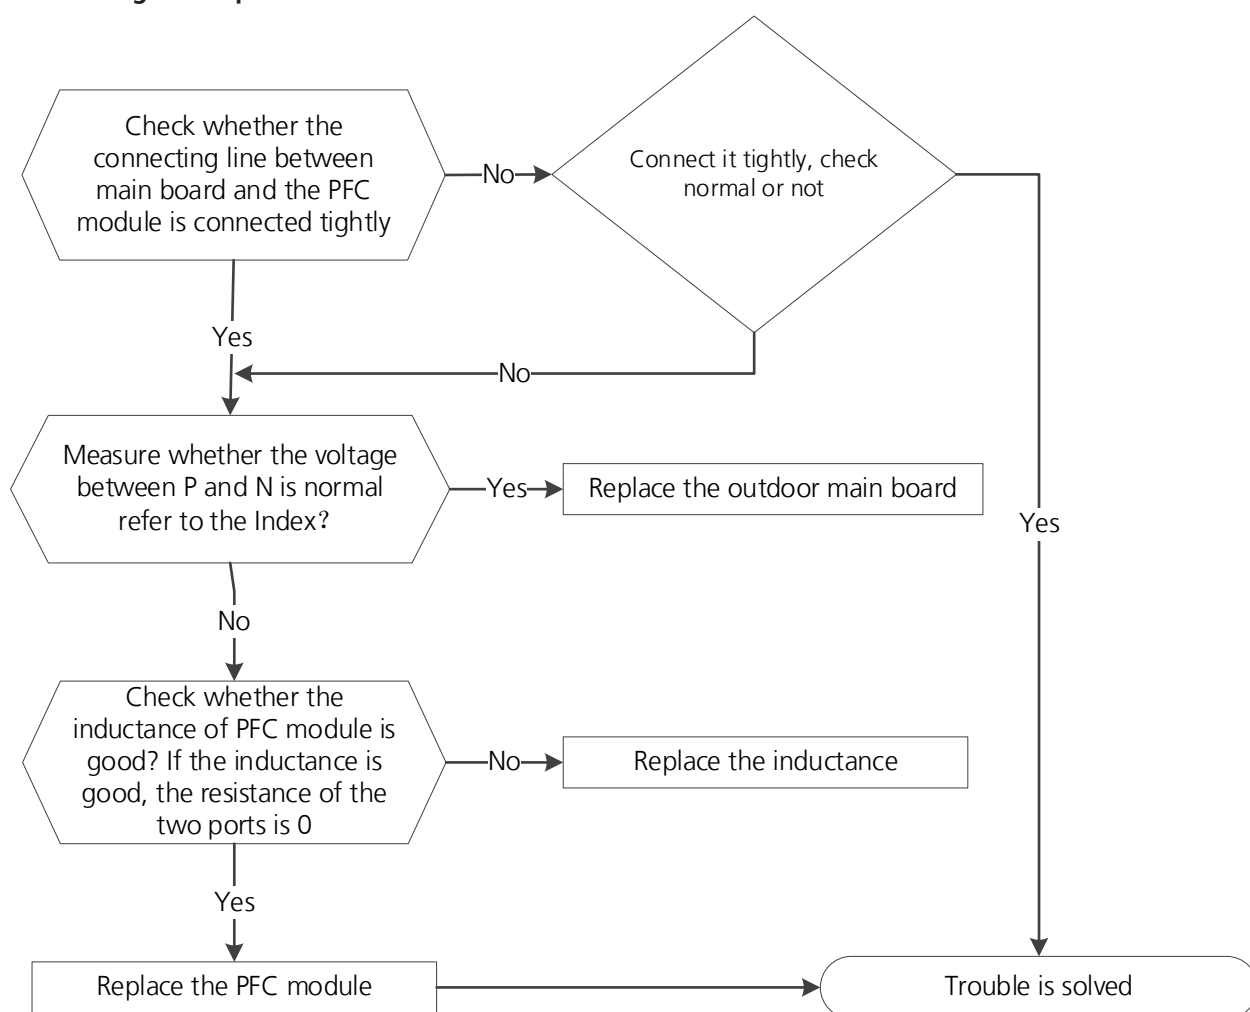


## 5.10 PC06(Discharge temperature protection of compressor diagnosis and solution)

**Description:** When the compressor discharge temperature (TP) is more than 115°C for 10 seconds, the compressor ceases operation and does not restart until TP is less than 90°C

### Recommended parts to prepare:

- Connection wires
- Outdoor PCB
- Discharge temperature sensor
- Refrigerant

### Troubleshooting and repair:

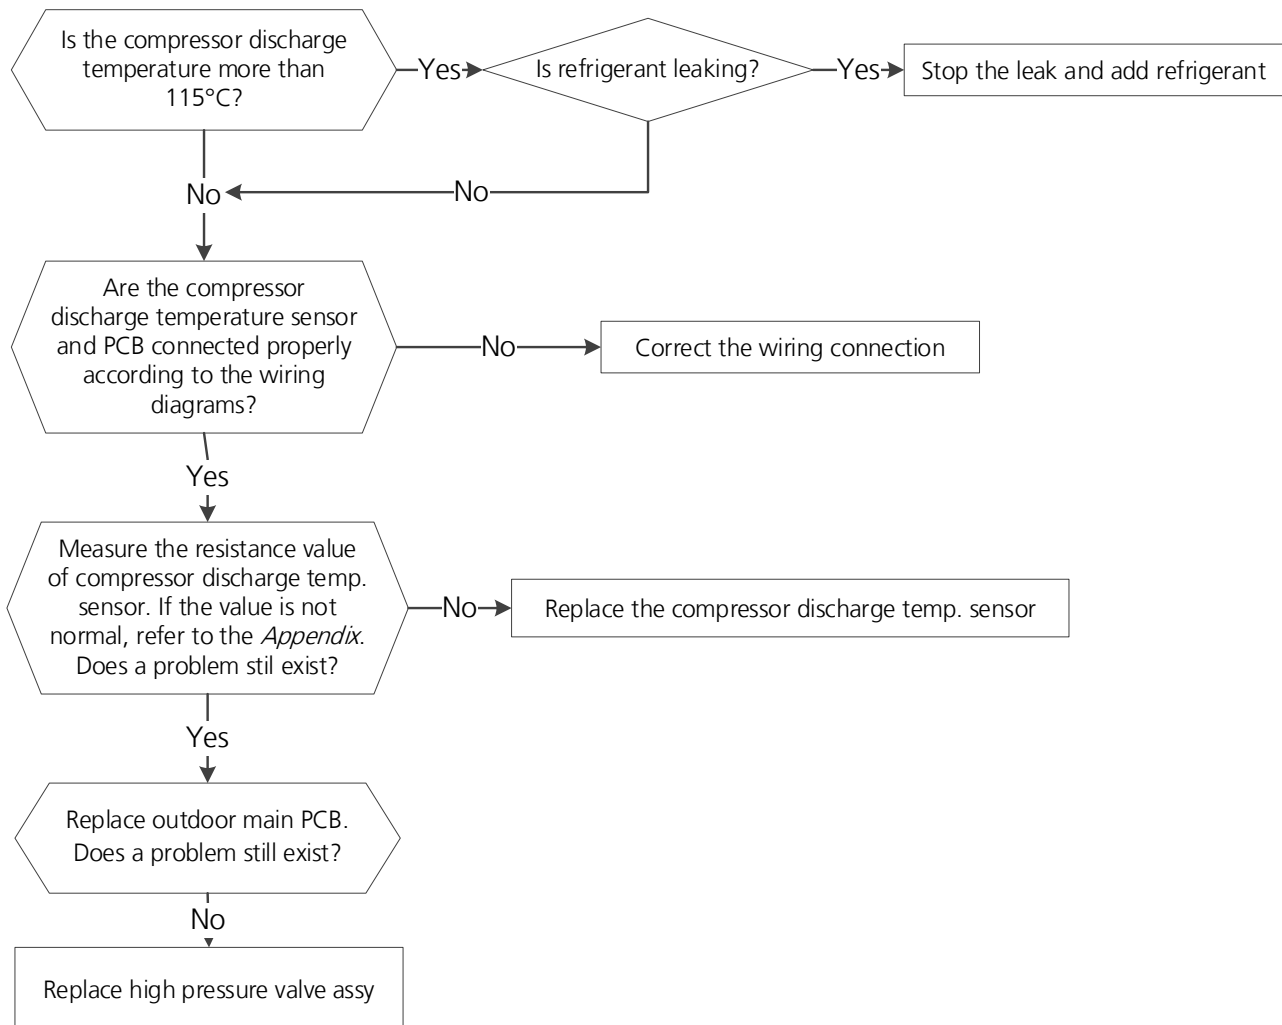


## 5.11 PC0A(High temperature protection of condenser diagnosis and solution)

**Description:** The unit will stop when condenser temperature is higher than 65°C, and runs again when it is less than 52°C

### Recommended parts to prepare:

- Connection wires
- Condenser temperature sensor
- Outdoor fan
- Outdoor main PCB
- Refrigerant

### Troubleshooting and repair:

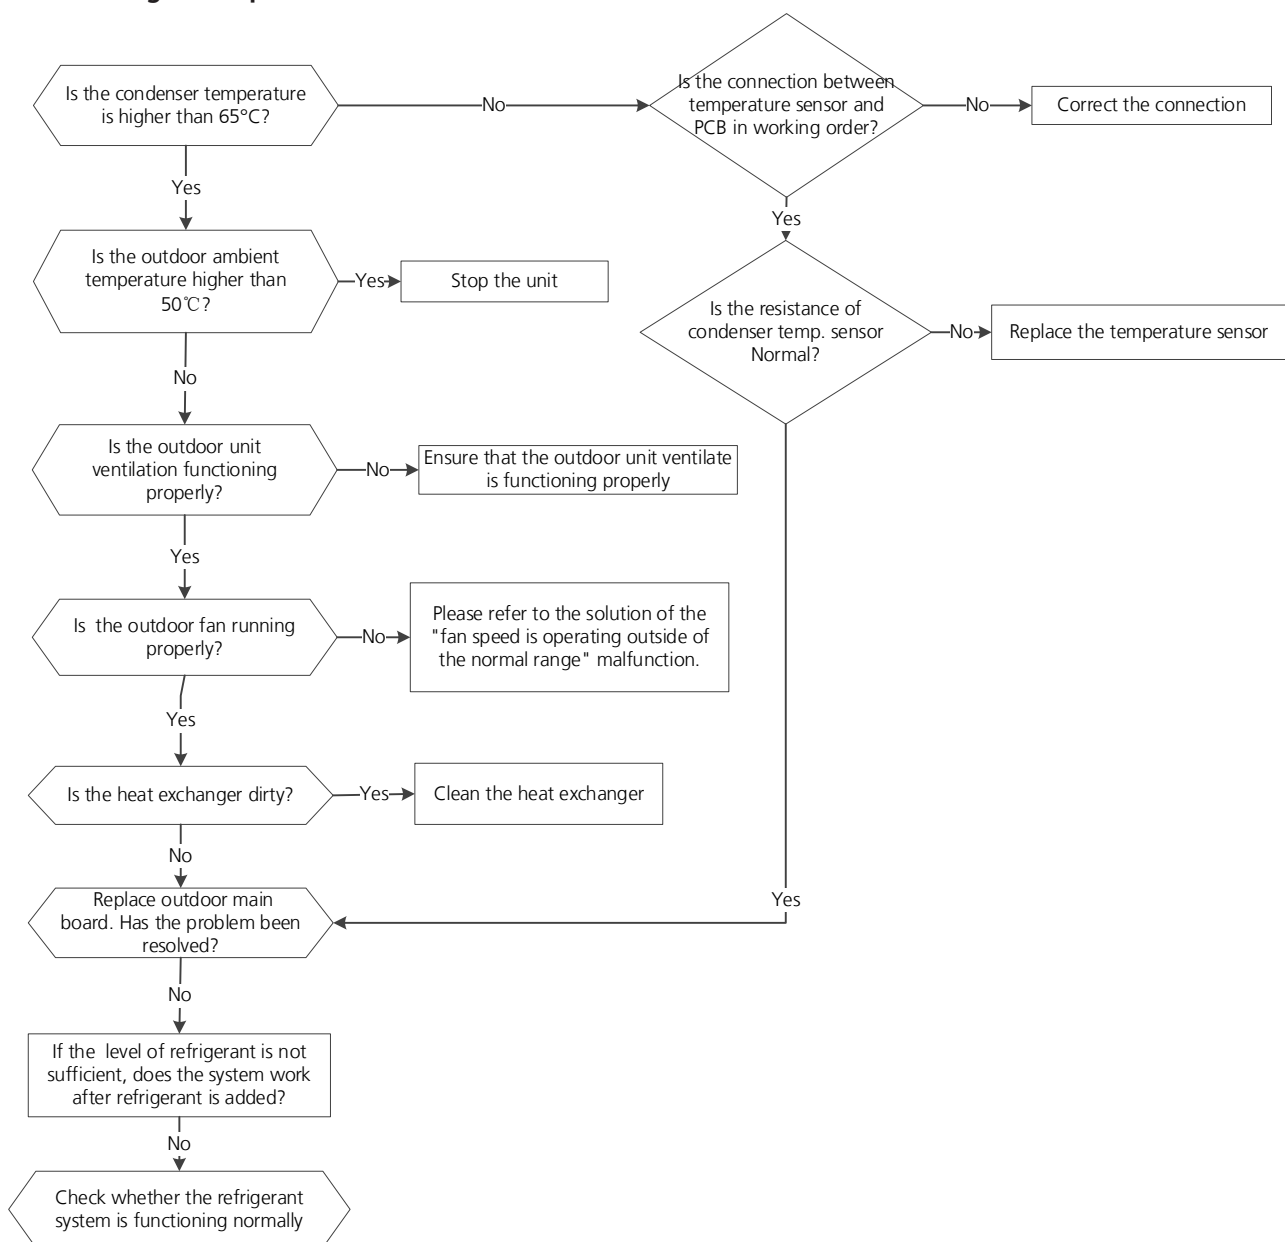



## 5.12 PC02/LC06 (Compressor top(or IPM) temp. protection/Refrigerant sensor error diagnosis and solution)


**Description:** For some models with overload protector, If the sampling voltage is not 5V, the LED will display the failure. If the temperature of IPM module is higher than a certain value, the LED displays the failure code.


Models without overload protector should be diagnosed according to the second flowchart.

### Recommended parts to prepare:

- Connection wires
- Outdoor PCB
- IPM module board
- High pressure protector
- System blockages

### Troubleshooting and repair:

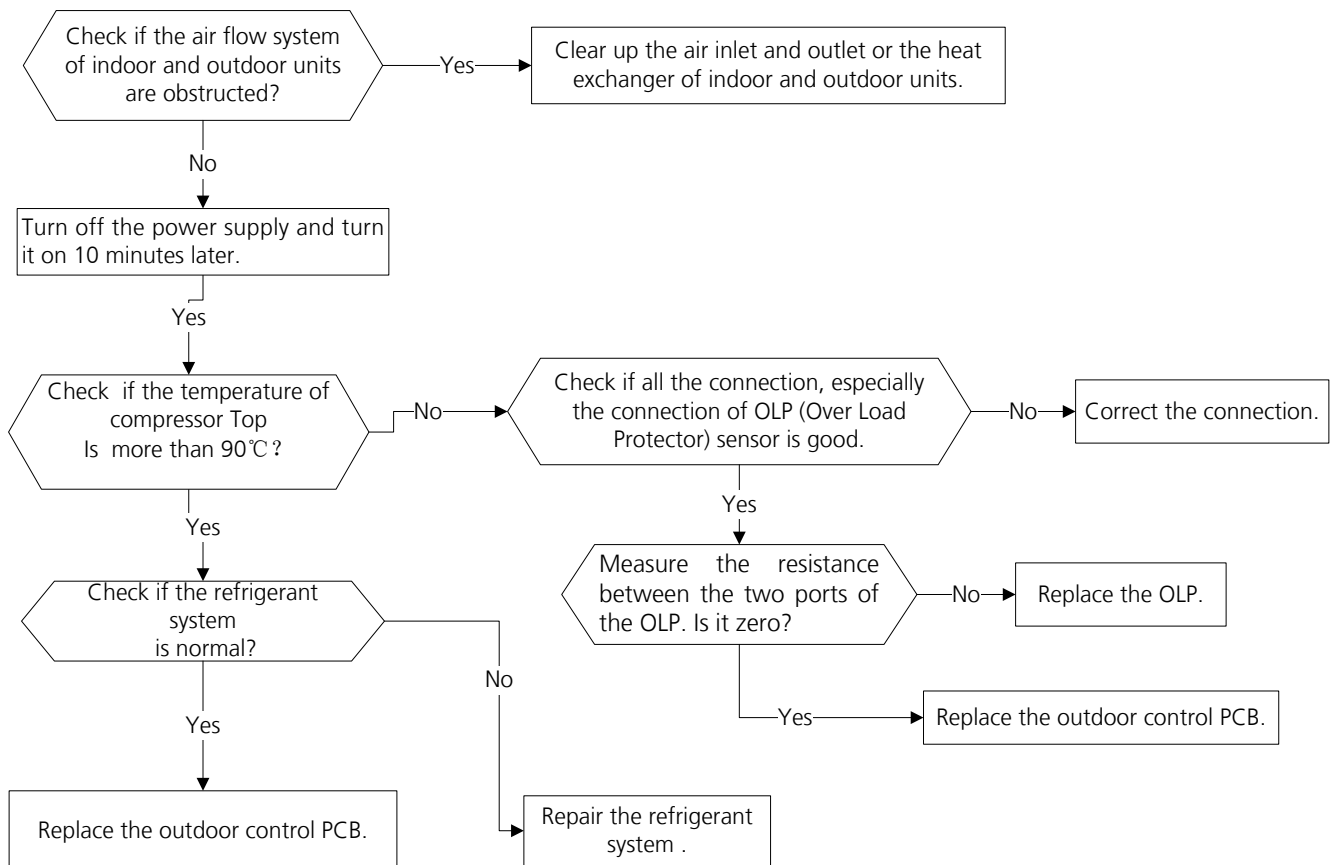

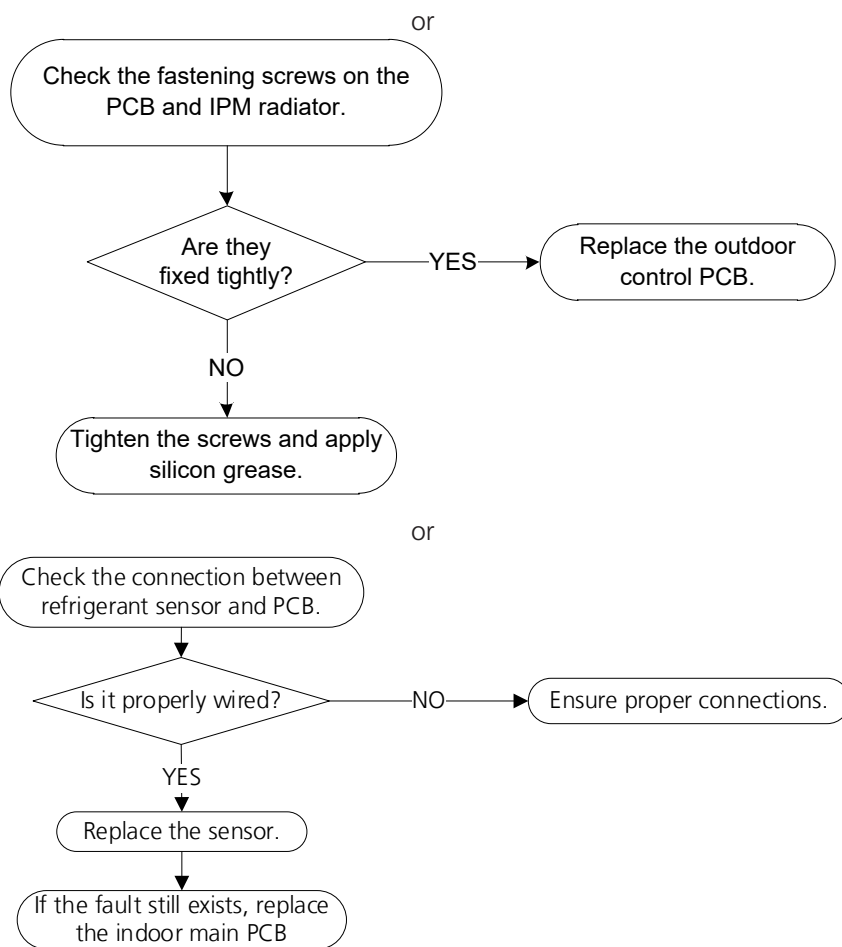

---


### 5.13 PC30 (System high pressure protection diagnosis and solution)

**Description:** Outdoor pressure switch cut off the system because high pressure is higher than 4.4 MPa

**Recommended parts to prepare:**

- Connection wires
- Pressure switch
- Outdoor fan
- Outdoor main PCB

**Troubleshooting and repair:**

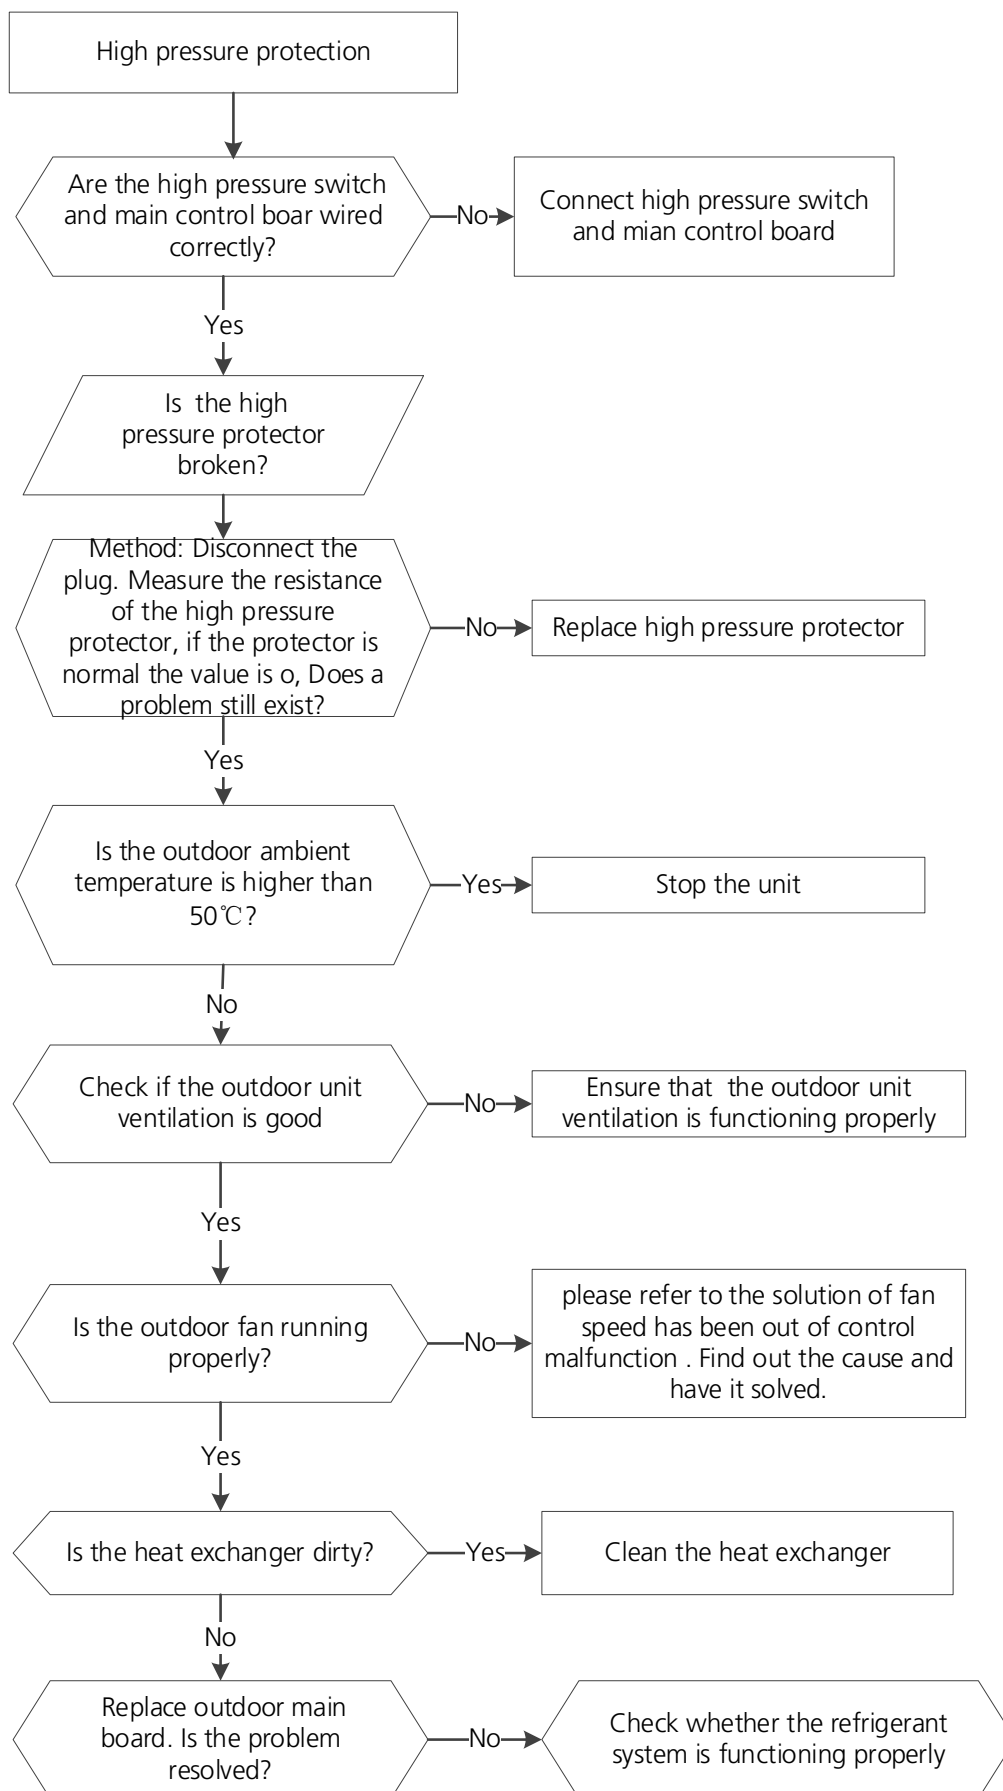

---


## 5.14 PC31 (System low pressure protection diagnosis and solution)

**Description:** Outdoor pressure switch cut off the system because low pressure is lower than 0.13 MPa, the LED displays the failure code.

### Recommended parts to prepare:

- Connection wires
- Outdoor PCB
- Low pressure protector
- Refrigerant

### Troubleshooting and repair:

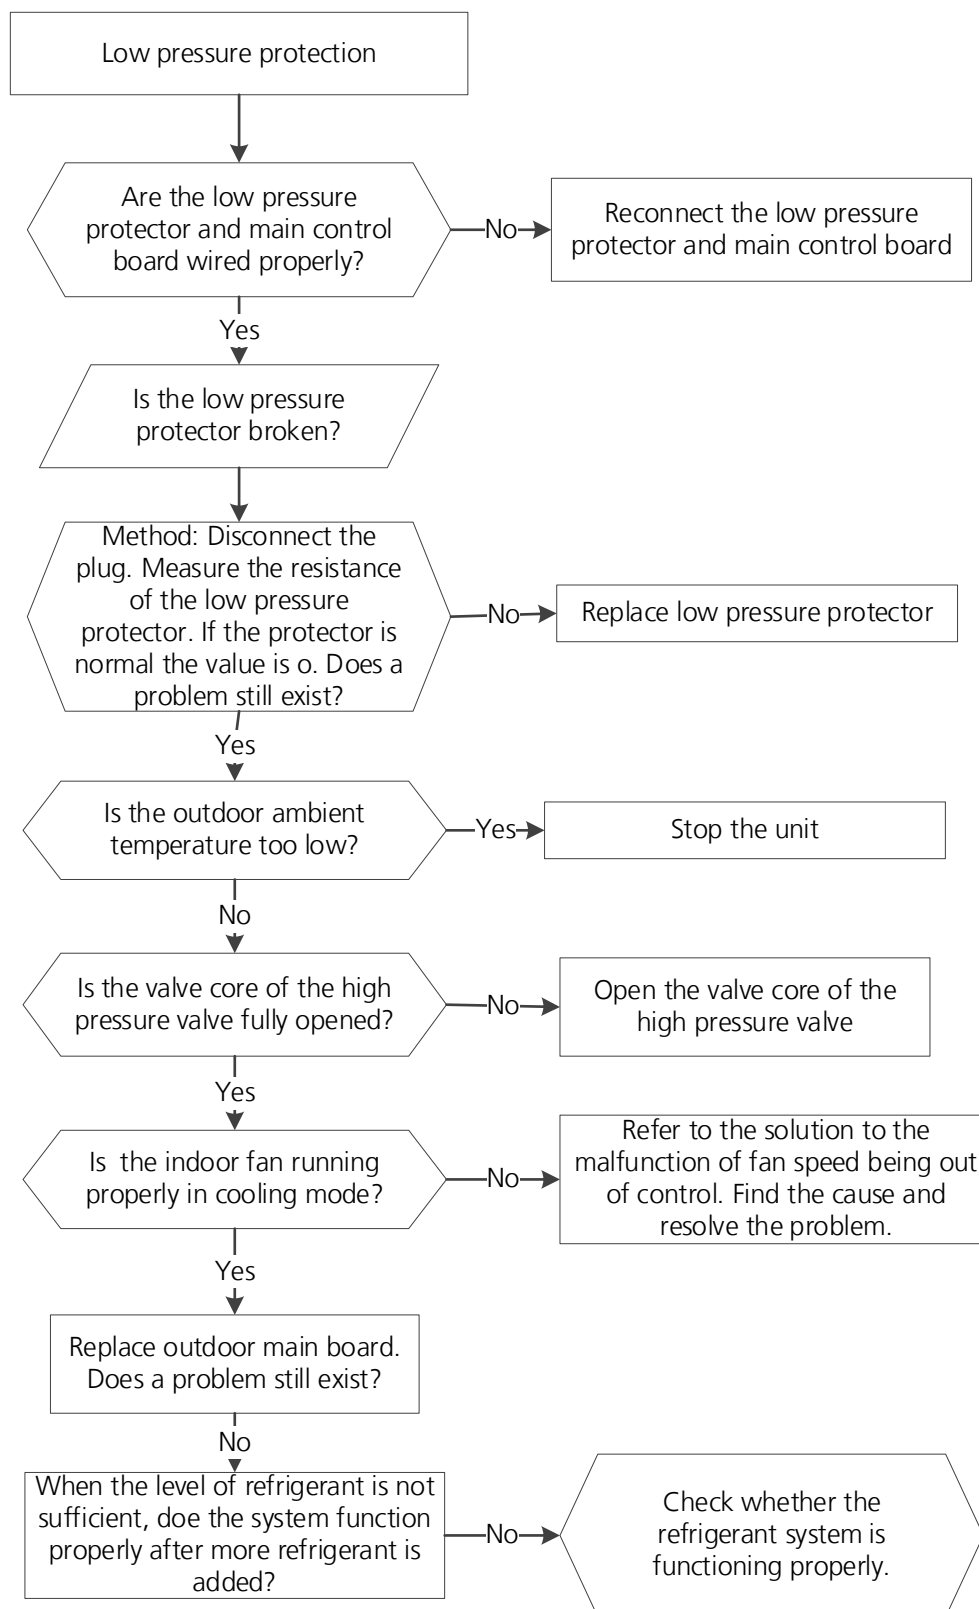

---


## 5.15 EC72 (Lack phase failure of outdoor DC fan motor diagnosis and solution)

**Description:** When the three-phase sampling current of the DC motor is abnormal, especially when the current of one or more phases is always small and almost 0, the LED displays the failure code.

### Recommended parts to prepare:

- Connection wire
- Fan motor
- Outdoor PCB

### Troubleshooting and repair:

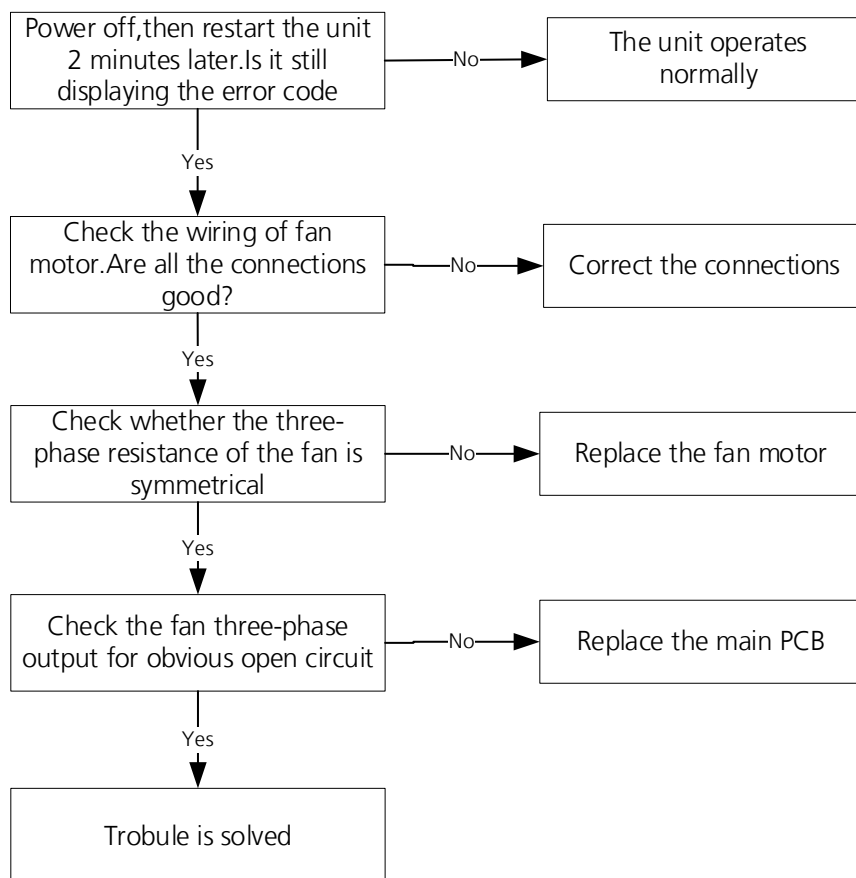

---


## 5.16 PC43 (ODU compressor lack phase protection diagnosis and solution)

**Description:** When the three-phase sampling current of the compressor is abnormal, especially when the current of one or more phases is always small and almost 0, the LED displays the failure code

### Recommended parts to prepare:

- Connection wire
- Compressor
- Outdoor PCB

### Troubleshooting and repair:

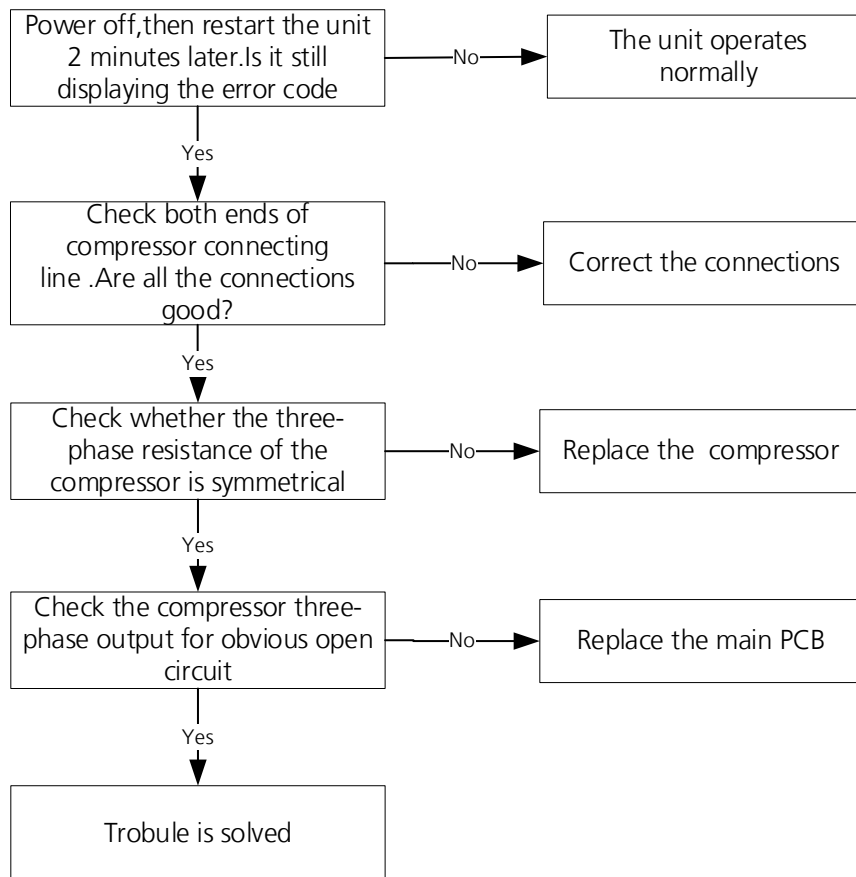



---


## 5.17 PC45 (ODU IR chip drive failure diagnosis and solution)

**Description:** When the IR chip detects its own parameter error, the LED displays the failure code when power on.

**Recommended parts to prepare:**

- Inverter module PCB.

**Troubleshooting and repair:**

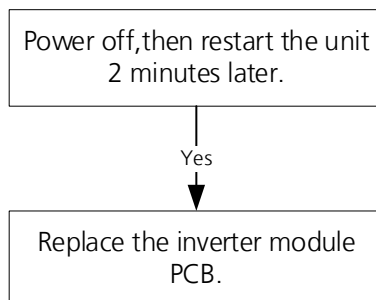

## 5.18 EC55(ODU IPM module temperature sensor malfunction diagnosis and solution)


**Description:** If the sampling voltage is 0V or 5V, the LED displays the failure code.

**Recommended parts to prepare:**


- IPM module PCB
- Connection wires
- Sensors
- Outdoor main PCB

**Troubleshooting and repair:**

If the radiator has no sensor, follow the steps below to resolve,

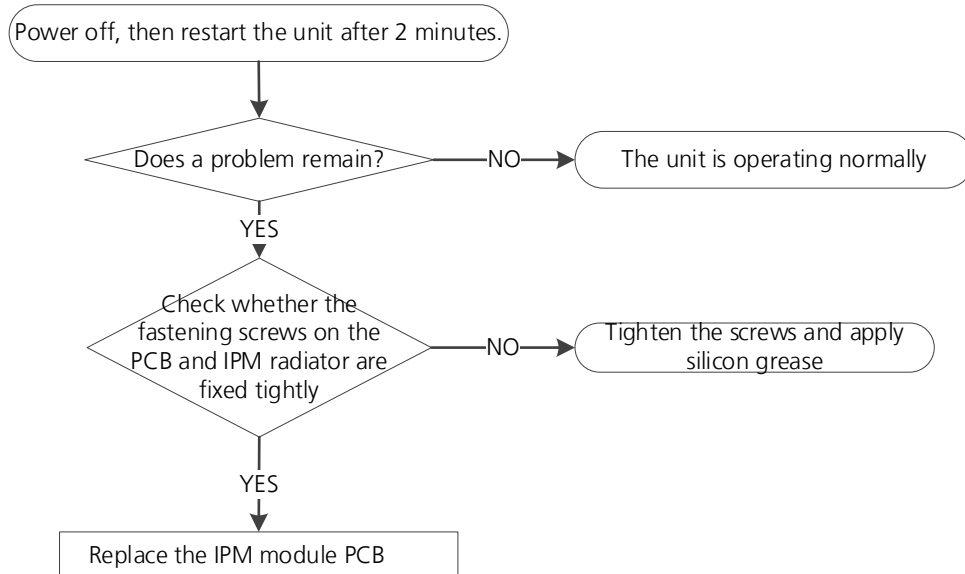

If the radiator has a sensor(TH), follow the steps below to resolve,

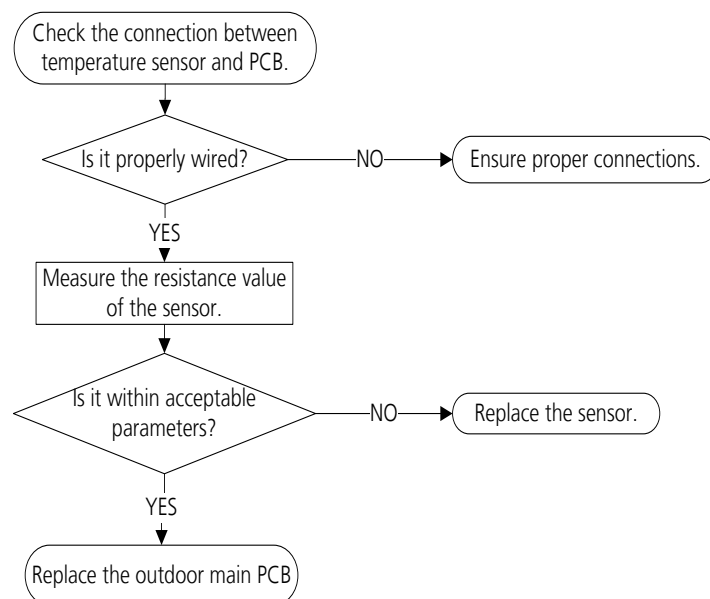


## 5.19 PH90(High temperature protection of evaporator diagnosis and solution)

**Description:** When evaporator coil temperature is more than 60°C in heating mode, the unit stops. It starts again only when the evaporator coil temperature is less than 52°C.

### Recommended parts to prepare:

- Connection wires
- Evaporator coil temperature sensor (T2)
- Indoor fan
- Indoor main PCB

### Troubleshooting and repair:

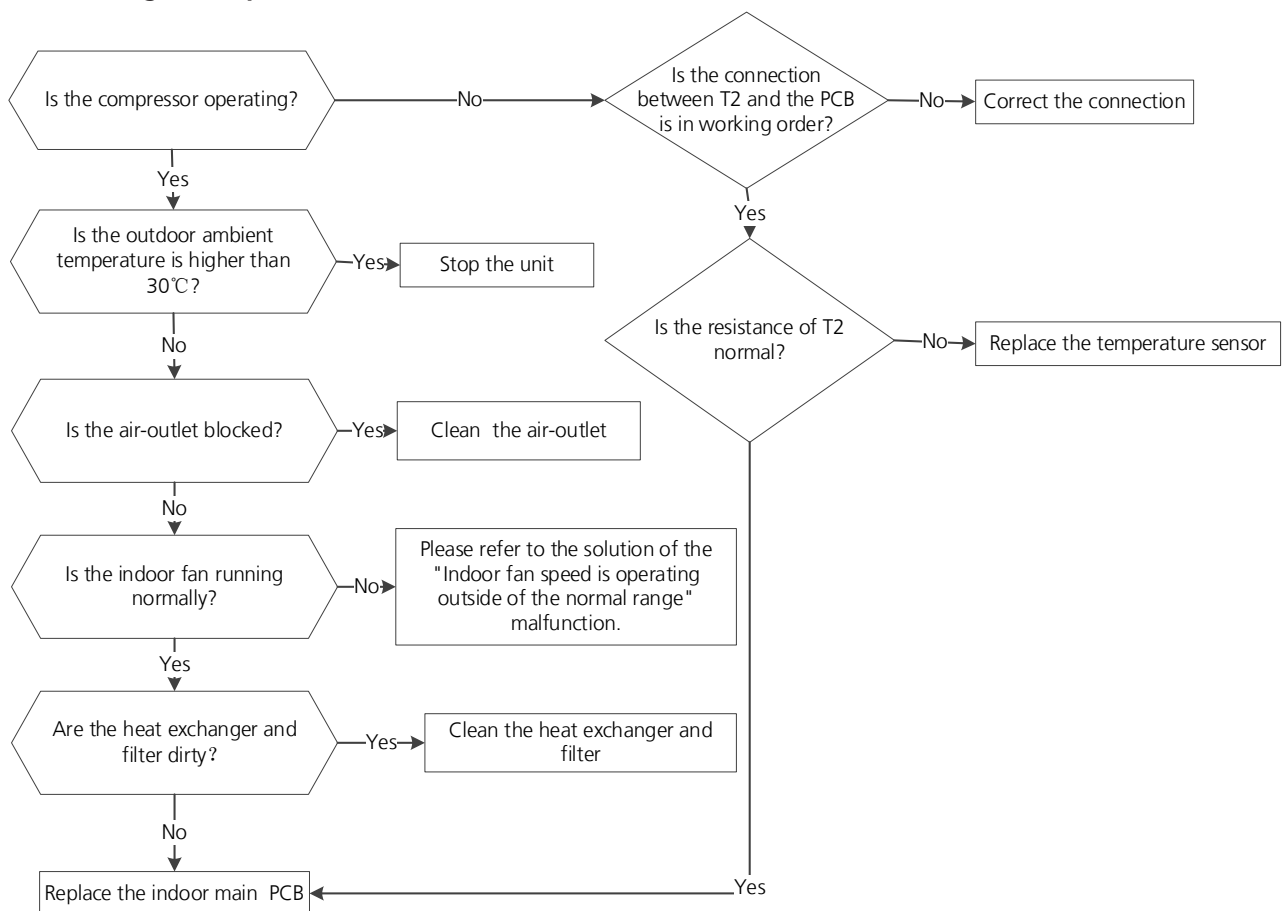


## 5.20 PH91(Low temperature protection of evaporator diagnosis and solution)

**Description:** When evaporator coil temperature is lower than 0°C in cooling mode or drying mode, the unit stops. It starts again only when the evaporator coil temperature is more than 5°C.

### Recommended parts to prepare:

- Connection wires
- Evaporator coil temperature sensor (T2)
- Indoor main PCB

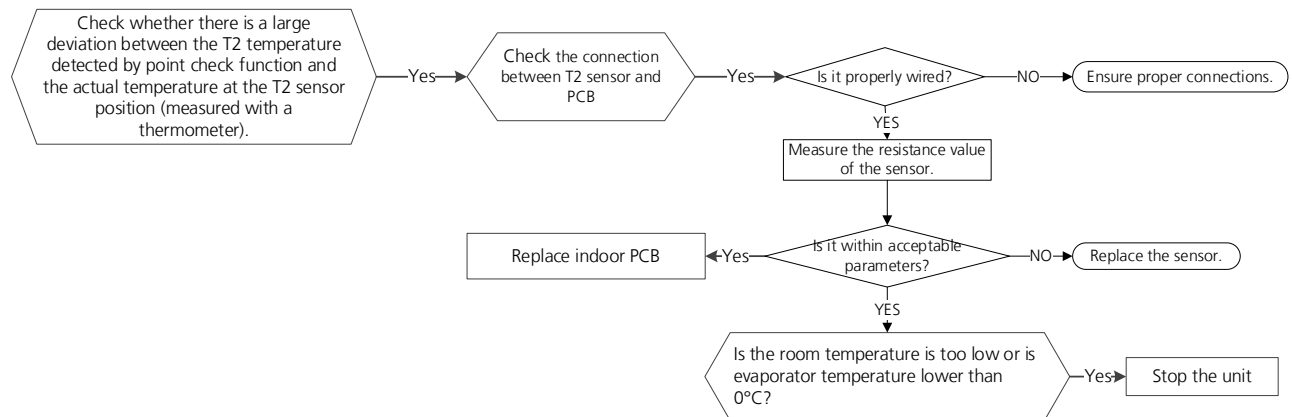


## 6. Check Procedures

### 6.1 Temperature Sensor Check

#### WARNING

**Be sure to turn off all power supplies or disconnect all wires to avoid electric shock.  
Operate after compressor and coil have returned to normal temperature in case of injury.**


1. Disconnect the temperature sensor from PCB (Refer to Chapter 5&6. Indoor&Outdoor Unit Disassembly).
2. Measure the resistance value of the sensor using a multi-meter.
3. Check corresponding temperature sensor resistance value table (Refer to Chapter Appendix).

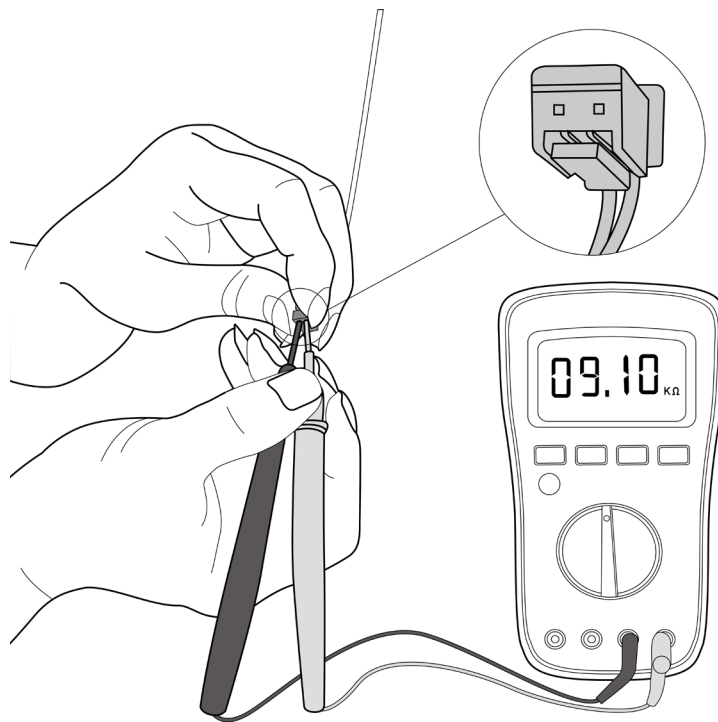

**Note: The picture and the value are only for reference, actual condition and specific value may vary.**

### 6.2 Compressor Check


1. Disconnect the compressor power cord from outdoor PCB (Refer to Chapter 6. Outdoor Unit Disassembly).
2. Measure the resistance value of each winding using a multi-meter.
3. Check the resistance value of each winding in the following table.

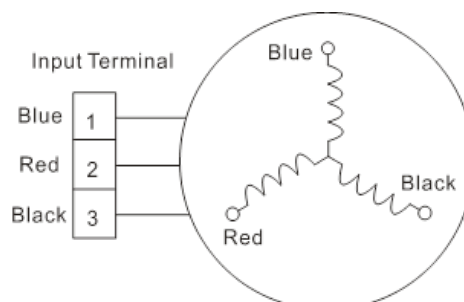

Resistance Value	KSK103D33UEZ3	KSN140D58UFZ	KTF250D22UMT	KTN110D42UFZ	KTF420D62UNT
Blue-Red	2.13Ω	1.86Ω	0.75Ω	1.82Ω	0.86Ω
Blue-Black					
Red-Black					

Resistance Value	KTN150D30UFZA	KTM240D46UKT2	KTF310D43UMT	ETPQ420D1UMUA ETPQ440D1UMUB KTQ420D1UMU EKPQ440D1UMUB	MTH356UKRC8FQL
Blue-Red	1.02Ω	1.04Ω	0.65Ω	0.37Ω	0.487Ω
Blue-Black					
Red-Black					

Resistance Value	MTH550UKPC8FU				
Blue-Red	0.295Ω				
Blue-Black					
Red-Black					

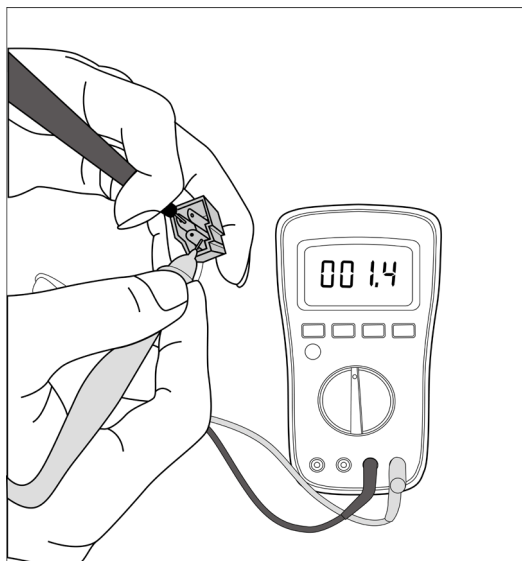

**Note:** The picture and the value are only for reference, actual condition and specific value may vary.

### 6.3 IPM Continuity Check

#### WARNING


**Electricity remains in capacitors even when the power supply is off.  
Ensure the capacitors are fully discharged before troubleshooting.**

1. Turn off outdoor unit and disconnect power supply.
2. Discharge electrolytic capacitors and ensure all energy-storage unit has been discharged.
3. Disassemble outdoor PCB or disassemble IPM board.
4. Measure the resistance value between P and U(V, W, N); U(V, W) and N.

Digital tester		Resistance value	Digital tester		Resistance value
(+)Red	(-)Black	$\infty$  (Several MΩ)	(+)Red	(-)Black	$\infty$  (Several MΩ)
P	N		U	N	
	U		V		
	V		W		
	W		-		

**Or test the conductivity of IPM with diode mode.**

Needle-type Tester		Normal Value	Needle-type Tester		Normal Value
Red	Black		Red	Black	
P	U	Open-circuit	N	U	0.3-0.5V
	V			V	
	W			W	
Needle-type Tester		Normal Value	Needle-type Tester		Normal Value
Black	Red		Black	Red	
P	U	0.3-0.5V	N	U	Open-circuit
	V			V	
	W			W	

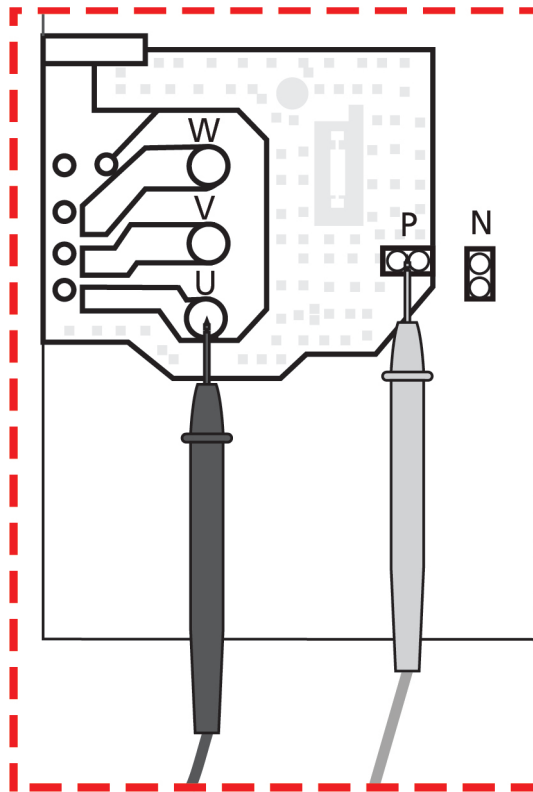


**Note:** The picture and the value are only for reference, actual condition and specific value may vary.

#### 6.4 Normal voltage of P and N

208-230V(1-phase)		
In standby		
around 310VDC		
In operation		
With passive PFC module	With partial active PFC module	With fully active PFC module
>200VDC	>310VDC	>370VDC

#### 6.5 Reactor Check

Measure the resistance and voltage (to ground) of the reactor. The normal resistance should be around 0.1 ohm. Otherwise, the reactor must have malfunction.

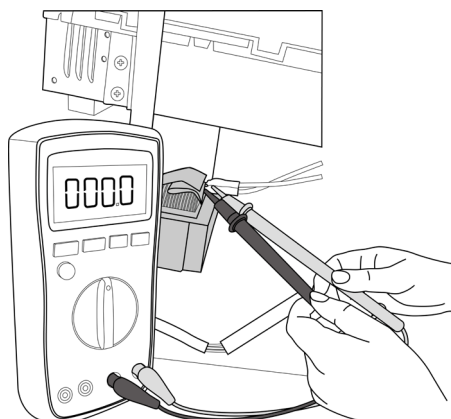



---


## 6.6 4-way valve Check

1. Power on, use a digital tester to measure the voltage, when the unit operates in cooling, it is 0V. When the unit operates in heating, it is about equal to power supply voltage.

If the value of the voltage is not in the range, the PCB must have problems and need to be replaced.

2 Turn off the power, use a digital tester to measure the resistance. The value should be 1.8~2.5 K $\Omega$ .

## 6.7 EXV Check

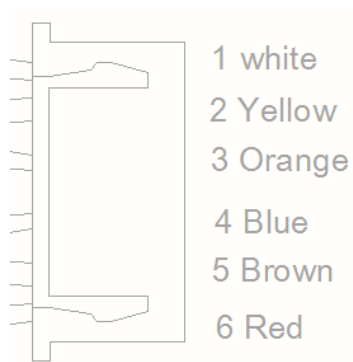

1. Turn off outdoor unit and disconnect power supply.

2. Disconnect the connectors of EXV.

3. Measure the resistance value between Red and Blue(Yellow); Brown and Orange(White).

### Resistance to EXV coil

Color of lead wire	Normal Value
Red- Blue	About 50 $\Omega$
Red - Yellow	
Brown-Orange	
Brown-White	



---

# Appendix

## Contents

i)	Temperature Sensor Resistance Value Table for TP (°C --K) .....	2
ii)	Other Temperature Sensors Resistance Value Table (°C – K) .....	3
iii)	System Pressure Table .....	4

## i) Temperature Sensor Resistance Value Table for TP (°C --K)

°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm
°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm
-20	-4	542.7	20	68	68.66	60	140	13.59	100	212	3.702
-19	-2	511.9	21	70	65.62	61	142	13.11	101	214	3.595
-18	0	483	22	72	62.73	62	144	12.65	102	216	3.492
-17	1	455.9	23	73	59.98	63	145	12.21	103	217	3.392
-16	3	430.5	24	75	57.37	64	147	11.79	104	219	3.296
-15	5	406.7	25	77	54.89	65	149	11.38	105	221	3.203
-14	7	384.3	26	79	52.53	66	151	10.99	106	223	3.113
-13	9	363.3	27	81	50.28	67	153	10.61	107	225	3.025
-12	10	343.6	28	82	48.14	68	154	10.25	108	226	2.941
-11	12	325.1	29	84	46.11	69	156	9.902	109	228	2.86
-10	14	307.7	30	86	44.17	70	158	9.569	110	230	2.781
-9	16	291.3	31	88	42.33	71	160	9.248	111	232	2.704
-8	18	275.9	32	90	40.57	72	162	8.94	112	234	2.63
-7	19	261.4	33	91	38.89	73	163	8.643	113	235	2.559
-6	21	247.8	34	93	37.3	74	165	8.358	114	237	2.489
-5	23	234.9	35	95	35.78	75	167	8.084	115	239	2.422
-4	25	222.8	36	97	34.32	76	169	7.82	116	241	2.357
-3	27	211.4	37	99	32.94	77	171	7.566	117	243	2.294
-2	28	200.7	38	100	31.62	78	172	7.321	118	244	2.233
-1	30	190.5	39	102	30.36	79	174	7.086	119	246	2.174
0	32	180.9	40	104	29.15	80	176	6.859	120	248	2.117
1	34	171.9	41	106	28	81	178	6.641	121	250	2.061
2	36	163.3	42	108	26.9	82	180	6.43	122	252	2.007
3	37	155.2	43	109	25.86	83	181	6.228	123	253	1.955
4	39	147.6	44	111	24.85	84	183	6.033	124	255	1.905
5	41	140.4	45	113	23.89	85	185	5.844	125	257	1.856
6	43	133.5	46	115	22.89	86	187	5.663	126	259	1.808
7	45	127.1	47	117	22.1	87	189	5.488	127	261	1.762
8	46	121	48	118	21.26	88	190	5.32	128	262	1.717
9	48	115.2	49	120	20.46	89	192	5.157	129	264	1.674
10	50	109.8	50	122	19.69	90	194	5	130	266	1.632
11	52	104.6	51	124	18.96	91	196	4.849			
12	54	99.69	52	126	18.26	92	198	4.703			
13	55	95.05	53	127	17.58	93	199	4.562			
14	57	90.66	54	129	16.94	94	201	4.426			
15	59	86.49	55	131	16.32	95	203	4.294			
16	61	82.54	56	133	15.73	96	205	4.167			
17	63	78.79	57	135	15.16	97	207	4.045			
18	64	75.24	58	136	14.62	98	208	3.927			
19	66	71.86	59	138	14.09	99	210	3.812			

## ii) Other Temperature Sensors Resistance Value Table (°C – K)

°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm	°C	°F	K Ohm
-20	-4	115.266	20	68	12.6431	60	140	2.35774	100	212	0.62973
-19	-2	108.146	21	70	12.0561	61	142	2.27249	101	214	0.61148
-18	0	101.517	22	72	11.5	62	144	2.19073	102	216	0.59386
-17	1	96.3423	23	73	10.9731	63	145	2.11241	103	217	0.57683
-16	3	89.5865	24	75	10.4736	64	147	2.03732	104	219	0.56038
-15	5	84.219	25	77	10	65	149	1.96532	105	221	0.54448
-14	7	79.311	26	79	9.55074	66	151	1.89627	106	223	0.52912
-13	9	74.536	27	81	9.12445	67	153	1.83003	107	225	0.51426
-12	10	70.1698	28	82	8.71983	68	154	1.76647	108	226	0.49989
-11	12	66.0898	29	84	8.33566	69	156	1.70547	109	228	0.486
-10	14	62.2756	30	86	7.97078	70	158	1.64691	110	230	0.47256
-9	16	58.7079	31	88	7.62411	71	160	1.59068	111	232	0.45957
-8	18	56.3694	32	90	7.29464	72	162	1.53668	112	234	0.44699
-7	19	52.2438	33	91	6.98142	73	163	1.48481	113	235	0.43482
-6	21	49.3161	34	93	6.68355	74	165	1.43498	114	237	0.42304
-5	23	46.5725	35	95	6.40021	75	167	1.38703	115	239	0.41164
-4	25	44	36	97	6.13059	76	169	1.34105	116	241	0.4006
-3	27	41.5878	37	99	5.87359	77	171	1.29078	117	243	0.38991
-2	28	39.8239	38	100	5.62961	78	172	1.25423	118	244	0.37956
-1	30	37.1988	39	102	5.39689	79	174	1.2133	119	246	0.36954
0	32	35.2024	40	104	5.17519	80	176	1.17393	120	248	0.35982
1	34	33.3269	41	106	4.96392	81	178	1.13604	121	250	0.35042
2	36	31.5635	42	108	4.76253	82	180	1.09958	122	252	0.3413
3	37	29.9058	43	109	4.5705	83	181	1.06448	123	253	0.33246
4	39	28.3459	44	111	4.38736	84	183	1.03069	124	255	0.3239
5	41	26.8778	45	113	4.21263	85	185	0.99815	125	257	0.31559
6	43	25.4954	46	115	4.04589	86	187	0.96681	126	259	0.30754
7	45	24.1932	47	117	3.88673	87	189	0.93662	127	261	0.29974
8	46	22.5662	48	118	3.73476	88	190	0.90753	128	262	0.29216
9	48	21.8094	49	120	3.58962	89	192	0.8795	129	264	0.28482
10	50	20.7184	50	122	3.45097	90	194	0.85248	130	266	0.2777
11	52	19.6891	51	124	3.31847	91	196	0.82643	131	268	0.27078
12	54	18.7177	52	126	3.19183	92	198	0.80132	132	270	0.26408
13	55	17.8005	53	127	3.07075	93	199	0.77709	133	271	0.25757
14	57	16.9341	54	129	2.95896	94	201	0.75373	134	273	0.25125
15	59	16.1156	55	131	2.84421	95	203	0.73119	135	275	0.24512
16	61	15.3418	56	133	2.73823	96	205	0.70944	136	277	0.23916
17	63	14.6181	57	135	2.63682	97	207	0.68844	137	279	0.23338
18	64	13.918	58	136	2.53973	98	208	0.66818	138	280	0.22776
19	66	13.2631	59	138	2.44677	99	210	0.64862	139	282	0.22231

### iii) System Pressure Table-R454B

Pressure			Temperature		Pressure			Temperature	
Kpa	bar	PSI	°C	°F	Kpa	bar	PSI	°C	°F
58.196	0.58	8.44	-60	-76	935.23	9.35	135.64	8	46.4
61.517	0.62	8.92	-59	-74.2	963.75	9.64	139.78	9	48.2
64.988	0.65	9.43	-58	-72.4	992.93	9.93	144.01	10	50
68.615	0.69	9.95	-57	-70.6	1022.8	10.23	148.34	11	51.8
72.402	0.72	10.50	-56	-68.8	1053.3	10.53	152.76	12	53.6
76.354	0.76	11.07	-55	-67	1084.5	10.85	157.29	13	55.4
80.478	0.80	11.67	-54	-65.2	1116.4	11.16	161.91	14	57.2
84.776	0.85	12.30	-53	-63.4	1149	11.49	166.64	15	59
89.256	0.89	12.95	-52	-61.6	1182.3	11.82	171.47	16	60.8
93.923	0.94	13.62	-51	-59.8	1216.3	12.16	176.40	17	62.6
98.781	0.99	14.33	-50	-58	1251.1	12.51	181.45	18	64.4
103.84	1.04	15.06	-49	-56.2	1286.6	12.87	186.60	19	66.2
109.1	1.09	15.82	-48	-54.4	1322.8	13.23	191.85	20	68
114.56	1.15	16.61	-47	-52.6	1359.9	13.60	197.23	21	69.8
120.25	1.20	17.44	-46	-50.8	1397.7	13.98	202.71	22	71.6
126.15	1.26	18.30	-45	-49	1436.3	14.36	208.31	23	73.4
132.28	1.32	19.18	-44	-47.2	1475.7	14.76	214.02	24	75.2
138.64	1.39	20.11	-43	-45.4	1515.9	15.16	219.85	25	77
145.24	1.45	21.06	-42	-43.6	1557	15.57	225.82	26	78.8
152.09	1.52	22.06	-41	-41.8	1598.9	15.99	231.89	27	80.6
159.18	1.59	23.09	-40	-40	1641.6	16.42	238.09	28	82.4
166.54	1.67	24.15	-39	-38.2	1685.2	16.85	244.41	29	84.2
174.15	1.74	25.26	-38	-36.4	1729.7	17.30	250.86	30	86
182.04	1.82	26.40	-37	-34.6	1775	17.75	257.43	31	87.8
190.2	1.90	27.59	-36	-32.8	1821.3	18.21	264.15	32	89.6
198.65	1.99	28.81	-35	-31	1868.4	18.68	270.98	33	91.4
207.39	2.07	30.08	-34	-29.2	1916.5	19.17	277.95	34	93.2
216.42	2.16	31.39	-33	-27.4	1965.6	19.66	285.08	35	95
225.76	2.26	32.74	-32	-25.6	2015.5	20.16	292.31	36	96.8
235.41	2.35	34.14	-31	-23.8	2066.5	20.67	299.71	37	98.6
245.37	2.45	35.59	-30	-22	2118.4	21.18	307.24	38	100.4
255.67	2.56	37.08	-29	-20.2	2171.3	21.71	314.91	39	102.2
266.29	2.66	38.62	-28	-18.4	2225.2	22.25	322.73	40	104
277.25	2.77	40.21	-27	-16.6	2280.2	22.80	330.70	41	105.8
288.56	2.89	41.85	-26	-14.8	2336.1	23.36	338.81	42	107.6
300.22	3.00	43.54	-25	-13	2393.2	23.93	347.09	43	109.4
312.24	3.12	45.28	-24	-11.2	2451.3	24.51	355.52	44	111.2
324.63	3.25	47.08	-23	-9.4	2510.4	25.10	364.09	45	113
337.39	3.37	48.93	-22	-7.6	2570.7	25.71	372.84	46	114.8
350.54	3.51	50.84	-21	-5.8	2632.1	26.32	381.74	47	116.6
364.08	3.64	52.80	-20	-4	2694.7	26.95	390.82	48	118.4
378.02	3.78	54.83	-19	-2.2	2758.3	27.58	400.04	49	120.2
392.37	3.92	56.91	-18	-0.4	2823.2	28.23	409.46	50	122
407.13	4.07	59.05	-17	1.4	2889.3	28.89	419.04	51	123.8

---

422.31	4.22	61.25	-16	3.2	2956.5	29.57	428.79	52	125.6
437.92	4.38	63.51	-15	5	3025	30.25	438.72	53	127.4
453.98	4.54	65.84	-14	6.8	3094.7	30.95	448.83	54	129.2
470.47	4.70	68.23	-13	8.6	3165.7	31.66	459.13	55	131
487.43	4.87	70.69	-12	10.4	3238.1	32.38	469.63	56	132.8
504.84	5.05	73.22	-11	12.2	3311.7	33.12	480.30	57	134.6
522.73	5.23	75.81	-10	14	3386.7	33.87	491.18	58	136.4
541.1	5.41	78.48	-9	15.8	3463	34.63	502.25	59	138.2
559.95	5.60	81.21	-8	17.6	3540.7	35.41	513.52	60	140
579.31	5.79	84.02	-7	19.4	3619.9	36.20	525.00	61	141.8
599.16	5.99	86.90	-6	21.2	3700.5	37.01	536.69	62	143.6
619.54	6.20	89.85	-5	23	3782.7	37.83	548.61	63	145.4
640.43	6.40	92.88	-4	24.8	3866.3	38.66	560.74	64	147.2
661.86	6.62	95.99	-3	26.6	3951.5	39.52	573.10	65	149
683.82	6.84	99.18	-2	28.4	4038.3	40.38	585.69	66	150.8
706.34	7.06	102.44	-1	30.2	4126.8	41.27	598.52	67	152.6
729.41	7.29	105.79	0	32	4217	42.17	611.60	68	154.4
753.06	7.53	109.22	1	33.8	4309	43.09	624.95	69	156.2
777.28	7.77	112.73	2	35.6	4402.9	44.03	638.56	70	158
802.08	8.02	116.33	3	37.4	4498.7	44.99	652.46	71	159.8
827.48	8.27	120.01	4	39.2	4596.5	45.97	666.64	72	161.6
853.49	8.53	123.78	5	41	4696.5	46.97	681.15	73	163.4
880.11	8.80	127.64	6	42.8	4798.9	47.99	696.00	74	165.2
907.35	9.07	131.60	7	44.6	4904.1	49.04	711.25	75	167

# ACiQ

The design and specifications are subject to change without prior notice for product improvement. Consult with the sales agency or manufacturer for details. Any updates to the manual will be uploaded to the service website, please check for the latest version.