




JET Series Installation, Operation and Maintenance Manual

March 2024

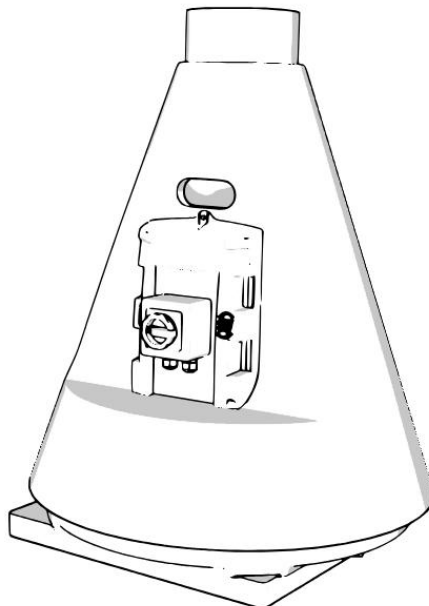



1	General Information	3	9.2.2	JET 30 Installation	35
1.1	Introduction.....	3	9.3	Speed Nozzle.....	38
1.2	Shipping and Receiving	3	9.3.1	Installation	38
1.3	Storage.....	3	9.4	Weather Stack	40
2	Safety Information.....	4	9.4.1	Installation	40
2.1	Safety Warnings	4	9.4.2	Stack Guywire Band Installation.....	42
2.2	Personal Protective Equipment.....	5	10	Test & Start Procedures.....	43
3	Regulatory Compliance.....	5	10.1	Test & Normal Start Procedures	43
3.1	Certifications.....	5	10.2	VFD Start Procedures	44
4	Explosion Resistant Products.....	6	11	Troubleshooting/Maintenance/Repair	44
5	Warranty	7	11.1	Maintenance Schedule.....	45
6	Description.....	7	11.2	Common Questions	47
6.1	Intended Use	9	11.3	Troubleshooting Procedures	47
6.2	Technical Data	9			
6.3	Dimensions.....	9			
6.3.1	JET Series.....	9			
6.4	Expanded View.....	11			
6.4.1	JET Series.....	11			
7	Installation	11			
7.1	Handling Information.....	12			
7.2	Installation Orientations	12			
7.3	JET Series.....	13			
7.3.1	Disassembly Instructions.....	13			
7.3.2	Assembly/Reassembly Instructions	18			
8	Electrical Installation/Wiring	24			
8.1	Motors	24			
8.2	Single Phase Motors.....	25			
8.2.1	Techtop	25			
8.2.2	Elprom/Orange1	26			
8.3	Three Phase Motors	26			
8.3.1	Techtop	26			
8.3.2	Elprom/Orange1	27			
8.4	Thermal Protection	27			
8.4.1	Single Phase	27			
9	Accessories	28			
9.1	Roof Curb.....	28			
9.1.1	JET 20 and JET 25 Installation	28			
9.1.2	JET 30 Installation.....	30			
9.2	JET Wall Bracket	33			
9.2.1	JET 20 and JET 25 Installation	33			



1 General Information

1.1 Introduction

DO NOT INSTALL, USE OR OPERATE THIS EQUIPMENT UNTIL THIS MANUAL HAS BEEN FULLY READ AND UNDERSTOOD. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.

THESE INSTRUCTIONS ARE INTENDED TO SUPPLEMENT GOOD GENERAL PRACTICES FOR THE VARIOUS STYLES OF PLASTEC FANS AND BLOWERS. DETAILED INSTRUCTIONS WILL BE PRESENTED SEPARATELY.

IT IS THE RESPONSIBILITY OF THE USER / PURCHASER TO ASSURE THE INSTALLATION, OPERATION, AND MAINTENANCE OF THIS EQUIPMENT IS CARRIED OUT BY EXPERIENCED AND QUALIFIED PERSONNEL IN THIS TYPE OF WORK.

CONTACT YOUR LOCAL REPRESENTATIVE FOR ANY FURTHER INFORMATION REQUIRED.

By using this product, Buyer, and Buyer's past, present, and future agents, representatives, attorneys, affiliates, heirs, executors, assigns and successors, and all other persons or entities associated therewith, agrees that it will indemnify and hold harmless Plastec Ventilation Inc., and all of its past, present, and future agents, representatives, principals, attorneys, affiliates, owners, parent corporations, subsidiaries, officers, directors, employees, assigns and successors, and all other persons or entities associated therewith, against any and all claims, demands, causes of action, liabilities, damages, costs, and judgments, including attorney's fees, hereafter brought or asserted by any person or entity arising out of the design, installation or use of any Product(s) manufactured by Plastec Ventilation Inc under this Agreement and in accordance with Buyer's Specifications except for any intentional acts of Manufacture or any of Manufacture's employees, agents or contractors.

No claims, representations or warranties, whether expressed or implied, are made by Plastec Ventilation Inc as to the safety, reliability, durability, and performance of any of our companies' products. Furthermore, our company accepts no liability whatsoever for the safety, reliability, durability, and performance of any of our companies' products.

1.2 Shipping and Receiving

All fans and blowers have been thoroughly inspected before shipment. Unless otherwise noted. All fans and blowers are tested and approved prior to shipment.



THE RECEIVER MUST NOTE ANY DAMAGE ON THE CARRIER'S BILL OF LADING AND FILE A CLAIM IMMEDIATELY WITH THE FREIGHT COMPANY.

Keep a record of all equipment received including inspection details and date of receipt. Contact your sales representative for replacement service.

Handle your equipment with caution using proper equipment and safety procedures

The receiver MUST report any missing equipment, accessories, or items from delivery within 60 days of the ship date. Any equipment, accessories, or items damaged within shipping MUST be reported within 60 days of the ship date. PLASTEC will NOT replace any equipment, accessories, or items missing from the shipment or equipment, accessories, or items damaged in shipment if it is not reported within 60 days of ship date. For further information, see **5 Warranty**.

1.3 Storage

Store fans in a clean, dry location prior to installation to protect against the weather and corrosive atmospheres. If it is necessary to store equipment outdoors, protect it from the elements as much as possible. Keep equipment dry and clean. Cover inlets/outlets to prevent collection of moisture, dust, etc.

For equipment stored for extended periods of time (1 month), rotate motor bearings. Records of stored equipment should be kept to assure proper procedures.

2 Safety Information

2.1 Safety Warnings

CAUTION! Fans contain rotating parts and electrical service is used to operate.

Use appropriate safety precautions during Installation, Operation and Maintenance procedures.

WARNING! Do not install or operate fan in an environment or atmosphere where combustible or flammable materials, gases or fumes are present unless it is specifically designed for that type of environment. Explosion or fire can result.

Roof curbs for mounting of fans should be securely installed prior to fan installation. Fan should be firmly secured to roof curb to prevent vibration.

CAUTION! All electrical work must be done in accordance with local and /or national codes as applied. Work should be performed by qualified electricians.

WARNING! This product must be grounded.

DANGER! Make sure power is turned off and locked in the off position before installing, wiring, or servicing fan.



CAUTION! Always check the supply voltage against the motor name plate voltage. Incorrect voltage can damage the motor and void the motor warranty.

WARNING! Keep all wiring clear of rotating or moving parts.

WARNING! Before starting the fan, turn the wheel to assure it rotates freely. **POWER MUST BE OFF DURING THIS OPERATION.**

CAUTION! Before operating any fan or blower, make sure any guards or protective devices required are in place for protection against injury.

WARNING! Do not insert your hands or arms in the fan while it is running.

WARNING! Ensure that all belongings and clothing items are secured if working near blower while it is running. Failure to do will result in blower sucking in said items.

CAUTION! Blower motor may become hot during operation. Do not touch blower motor without proper personal protective equipment (PPE) during operation.

WARNING! Ensure that the blower is installed in a well-ventilated area. Do not insulate motor. Insulating motor can result in failure of blower and fire.

2.2 Personal Protective Equipment

When working in the vicinity of the fan or performing maintenance on the fan, wear the proper personal protective equipment. Personal protective equipment (PPE) includes the following:

- Goggles or Eye-protection
- Hearing Protection
- Helmet or Head Protection
- Protective Working Clothes
- Protective Working Shoes
- Protective Working Gloves

3 Regulatory Compliance

3.1 Certifications

PLASTEC Ventilation certifies that the JET Series shown herein is licensed to bear the AMCA Seal. The ratings shown are based on tests and procedures performed in accordance with AMCA Publication 211 and AMCA Publication 311 and comply with the requirements of the AMCA Certified Ratings Program.



4 Explosion Resistant Products

The fans listed below are also available in Explosion Resistant version. They are compliant with all the international standards: NEC 500/505, ATEX (EN60079) and European directives (99/92/EC and 94/9/EC)



PLASTEC 15	-	STORM 10	-	JET 20
PLASTEC 20	-	STORM 12	-	JET 25
PLASTEC 25	-	STORM 14	-	JET 30
PLASTEC 30	-	STORM 16		
PLASTEC 35	-	STORM 18		
PLASTEC 50				

For all Explosion Resistant certified PLASTEC products, additives are added to the polypropylene to reduce the risk of creating an electrical charge. The surface and volume resistivity is lower than $10^9\Omega$ as mentioned in the IEC60079-0 standard.

WARNING: FOR EXPLOSION RESISTANT FANS, ANY ASSEMBLY, DISASSEMBLY OR OTHER MODIFICATIONS, EVEN MINOR, ARE NOT RECOMMENDED AND MUST BE CARRIED OUT ONLY IN AGREEMENT ON THE RETURN BASIS WITH PLASTEC VENTILATION.

FAN INSTALLATIONS IN HAZARDOUS LOCATIONS MUST BE PERFORMED BY ATEX APPROVED COMPANIES.

THE DEFINITION OF THE ZONE AND DIVISION (0, 1 OR 2 FOR GASES) IS THE RESPONSIBILITY OF THE USER, CUSTOMER, PROJECT MANAGER AND/OR SITE MANAGER. IN NO CASE CAN PLASTEC VENTILATION BE HELD RESPONSIBLE FOR A WRONG CHOICE OF ZONE.

IT IS HIGHLY RECOMMENDED TO USE MOTORS EQUIPED WITH A PTC OR PTO SENSOR WHEN OPERATING WITH A VARIABLE FREQUENCY DRIVE. IT IS THE CUSTOMER'S RESPONSIBILITY TO REQUEST IT WHEN ORDERING THE PRODUCTS.

WARNING: Elprom motors are not frequency inverter duty certified.



WARNING: ALL INSTALLATIONS OF EXPLOSION-RESISTANT PRODUCTS MUST BE DONE BY QUALIFIED PERSONNEL WHO MEET THE REQUIRED CERTIFICATIONS. ALL INSTALLATIONS MUST FOLLOW INSTALLATION PROCEDURES.

WARNINGS: AFTER INSTALLATION OF BLOWER, ENSURE THAT MOTOR JUNCTION BOX LID IS COMPLETELY SEALED AND THAT ANY GASKET IS SEATED PROPERLY. FAILURE TO DO SO CAN RESULT IN EXHAUST GASES ENTERING THE MOTOR JUNCTION BOX. ENSURE THAT ALL CABLE GLANDS ARE SECURELY FASTENED TO THE MOTOR JUNCTION BOX AND THAT ALL SEALS ARE IN PLACE.

PLASTEC VENTILATION PRODUCTS ARE CERTIFIED ONLY FOR ZONE II GAZ.

EXPLOSION RESISTANT MARKING:

NEC 500: CLASS I DIV II GROUP A,B,T4

NEC 505: CLASS I ZONE II AEx d GROUP IIC T4

ATEX : Ex II 3G Ex c GROUP IIC T4

5 Warranty

This Blower Housing Assembly is warranted to be free from defects in material and workmanship for two years from date of original shipment. Any units or parts which prove to be defective and are reported during the warranty period will be replaced at our option when returned to our factory, transportation prepaid by the sender. Deterioration of wear by heat, abrasive action, chemicals, improper installation or operation or lack of normal maintenance shall not constitute defects, and are not covered by warranty. Transportation to and from the factory for warranty repairs is not covered under warranty and is the sole responsibility of the owner of the equipment.

The motor is warranted by the motor manufacturer for one year. If the motor becomes defective in the warranty period, it should be taken to the nearest authorized motor service station. If this is not done, the motor manufacturer will not warrant the motor. Call the factory for instructions if authorized service station is not known.

The manufacturer will not be responsible for any installation, removal or re-installation cost or any consequential damage resulting in failure to meet conditions of any warranty.

LIMITATION OF WARRANTY AND LIABILITY: This warranty does not apply to any product or parts which have failed as a result of faulty installation or abuse, or incorrect electrical connections or alterations, made by other, or use under abnormal operating conditions or misapplications of the products and parts.



The manufacturer will not approve for payment any repairs made outside its factory without prior written consent. The foregoing shall constitute our sole and exclusive warranty and our sole and exclusive liability and is in lieu of all other warranties whether written, oral, implied, or statutory. There are no warranties which extend beyond the description of the page hereof. Seller does not warranty that said goods and articles are merchantable quality or that they are fit for any particular purpose. The liability of seller on any claim of any kind, including negligence, for any loss or damage arising out of, or connected with, or resulting from the sale and purchase of the products and parts covered by this proposal, acknowledgment, order or from performance or breach of any contract pertaining to such sale or purchase, or from the design, manufacture, sale, delivery, resale, installation, technical direction of installation, inspection, repair, operation or use of any products or parts covered by this proposal,

acknowledgment, order or furnished by seller shall, in no case exceed the price allocable to the product or parts thereof which give rise to the claim and shall terminate one (1) year after shipment of said products and parts.

In no event, whether as a result of breach of contract, or warranty or alleged negligence, defects, incorrect advise or other causes, shall seller be liable for special or consequential damages including, but not limited to, loss of profits or revenue, loss of use of the equipment or any associated equipment, cost of capital, cost of substitute equipment, facilities or services, down time costs or claims of customers of the purchaser for such damages. The manufacturer neither assumes nor authorizes any persons to assume for it any other liability in connection with the sale of its fan products and parts.

The receiver MUST report any missing equipment, accessories, or items from delivery within 60 days of the ship date. Any equipment, accessories, or items damaged within shipping MUST be reported within 60 days of the ship date. PLASTEC will NOT replace any equipment, accessories, or items missing from the shipment or equipment, accessories, or items damaged in shipment if it is not reported within 60 days of ship date. For further information, see **1.2 Shipping and Receiving**

SAFETY ACCESSORIES WARNING: The responsibility for providing safety accessories for equipment supplied by the manufacturer is that of the installer and user of this equipment. The manufacturer sells its equipment with and without safety accessories, and accordingly it can supply such safety accessories upon receipt of order.

The user, in making its determination as to the appropriate safety accessories to be installed and any warning notices, should consider (1) the location of the installation, (2) the accessibility of employees and other persons to this equipment, (3) any adjacent equipment, (4) applicable building codes, and (5) requirements of the Federal Occupational Safety and Health Act.

Users and installers of this equipment should read, "RECOMMENDED SAFETY PRACTICES FOR AIR MOVING DEVICES" which is published by Air Movement and Control Association, 30 West University Drive, Arlington Heights, Illinois, 60004.



The invalidity or unenforceability of any particular provision in this document shall not affect the other provisions hereto, and this document shall be construed as though such invalid or unenforceable provisions were omitted.

6 Description

6.1 Intended Use

The JET series and JET XP series blowers were developed and built for the intended purpose of being used in ventilation systems. These blowers are intended to be used for extracting air from ventilation systems, especially for ventilation systems with the presence of corrosive gases/vapors. The JET series and JET XP series blowers are built as chemical and corrosion resistant fans.


The JET XP series blowers are intended to be used for conveying air or explosive atmospheres.

6.2 Technical Data

Sub Series	Min. Flow (cfm)	Max. Flow (cfm)	Min. Static (in. Wg)	Max. Static (in. Wg)	Max. Inlet Temp (F)	Min. Operating Temp (F)	Acoustic dB(A)
Jet 20	150	1250	0.1	4.2	140	-39	70.3
Jet 25	200	2740	0.15	8.6	140	-39	76
Jet 30	500	2700	0.2	3	140	-39	83

6.3 Dimensions

6.3.1 JET Series

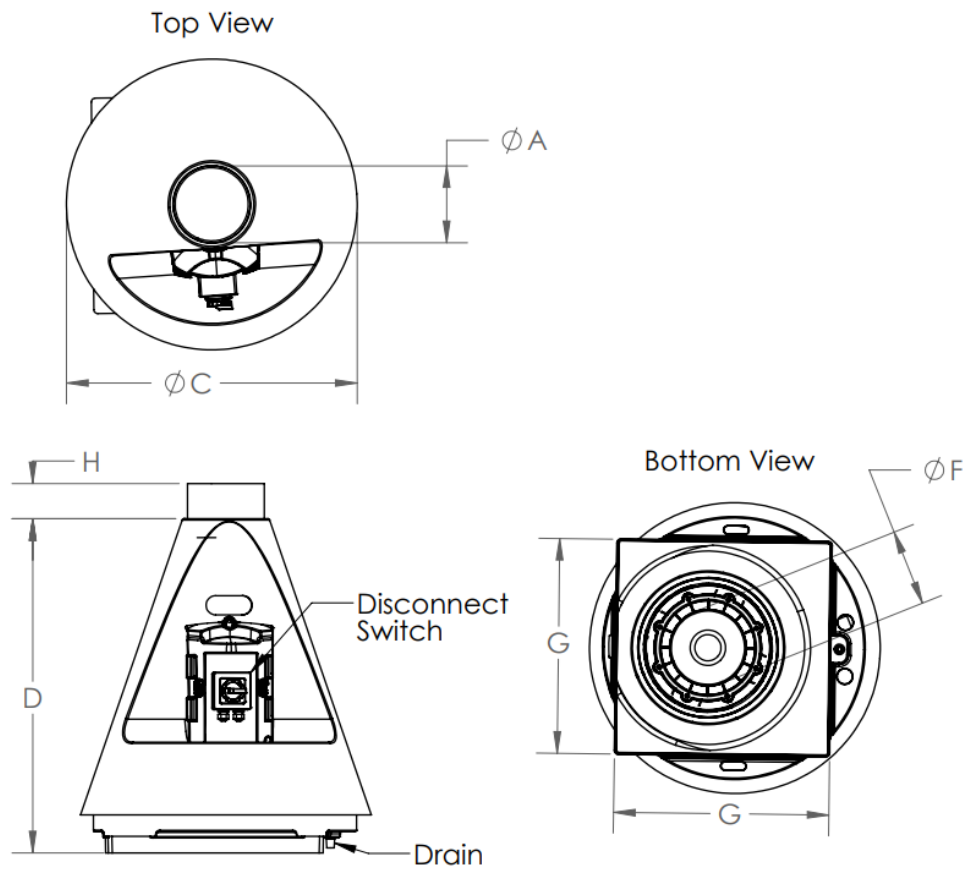


Sub Series	ϕA (OD) in (mm)	C in (mm)	D in (mm)	ϕF (OD) in (mm)	G in (mm)	H in (mm)	Drain ϕ in (mm)
Jet 20	6.29 (160)	23.58 (600)	30.77 (783)	6.29 (160)	22.1 (563)	1.55 (39.5)	0.94 (24)
Jet 25	7.86 (200)	29.71 (756)	37.73 (960)	7.86 (200)	22.0 (560)	3.58 (91)	0.94 (24)
Jet 30	9.83 (250)	35.37 (900)	37.53 (955)	9.83 (250)	22.1 (563)	3.50 (89)	0.94 (24)



6.4 Expanded View

6.4.1 JET Series

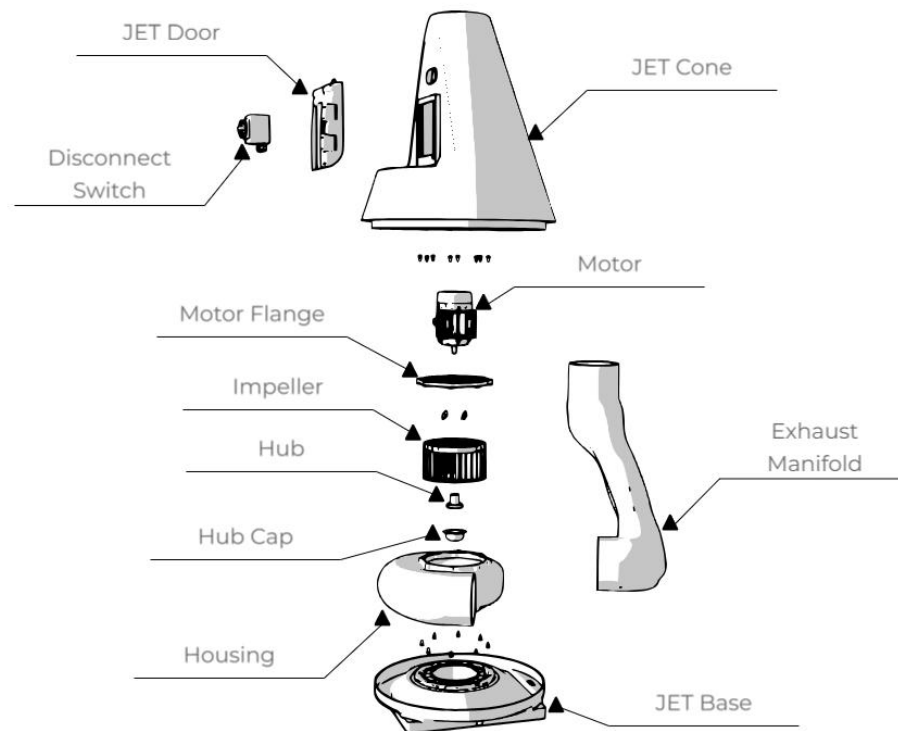

7 Installation

The area where fan(s) are installed should provide support for rigid mounting of the fan(s). Fans not supported properly will cause vibration that could cause damage or injury!

It is recommended to mount the fan(s) on a flat, level surface. This includes concrete pads, C-channels/C-Struts, roof curbs, steel platforms, metal plates, etc.

The fan(s) should be securely mounted when installed. Failure to do so can result in accidental tipping of the fan.

Use guy wires to secure roof mounted units, stacks and accessories where excessively windy conditions are prevalent.



WARNING: ALL INSTALLATIONS OF EXPLOSION-RESISTANT PRODUCTS MUST BE DONE BY QUALIFIED PERSONNEL WHO MEET THE REQUIRED CERTIFICATIONS. ALL INSTALLATIONS MUST FOLLOW INSTALLATION PROCEDURES.

WARNINGS: AFTER INSTALLATION OF BLOWER, ENSURE THAT MOTOR JUNCTION BOX LID IS COMPLETELY SEALED AND THAT ANY GASKET IS SEATED PROPERLY. FAILURE TO DO SO CAN RESULT IN EXHAUST GASES ENTERING THE MOTOR JUNCTION BOX. ENSURE THAT ALL CABLE GLANDS ARE SECURELY FASTENED TO THE MOTOR JUNCTION BOX AND THAT ALL SEALS ARE IN PLACE.

7.1 Handling Information


When handling the fan(s), ensure that all the necessary safety precautions are taken, as outlined in *2 Safety Information*. Please ensure that the required safety procedures are followed and that personnel are wearing the proper PPE.

7.2 Installation Orientations

The direction of rotation is determined from the drive or motor side of the fan. All blowers ship CCW 360 or in the up-blast position unless specified otherwise. For single inlet fans, it's important to note that the drive or motor side of the fan is always considered to be on the opposite side of the fan inlet.

7.3 System Effects

IMPORTANT! When installing the blower, ensure that there is proper spacing between the blower's inlet/outlet and any duct bends. It is recommended to have about 3x blower diameter in length between a duct bend and the blower's inlet/outlet.

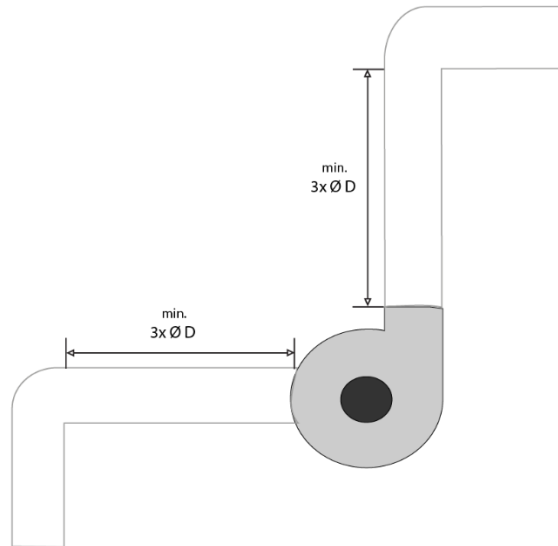


IMPORTANT! Installing a blower with a duct bend directly before or after the fan can lead to increased back pressure and turbulence which will cause increased pressure drop, excess noise and vibration, potential premature wear on the blower, and reduced blower efficiency.


7.4 JET Series

7.4.1 Disassembly Instructions


1. Place the blower onto the inlet (The top of the cone facing upwards) on a table that can support the weight of the blower.

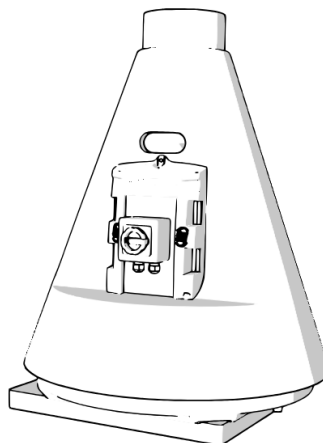


2. Open the disconnect switch on the front of the JET cone. Remove the wiring from the disconnect switch and feed through the hole in the back of the switch housing. Take note of the order of the wiring before removing it.
3. Remove the 8 perimeter screws from the bottom of the cone.
4. Carefully lift the cone over the exhaust manifold to reveal the motor.

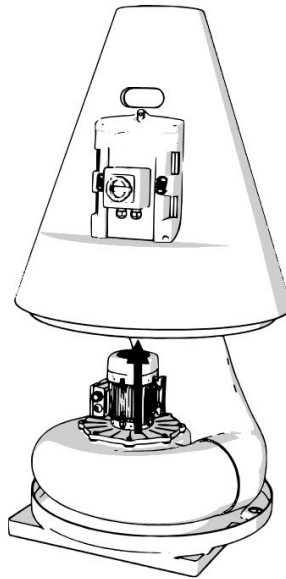


5. Remove the exhaust manifold from the outlet of the blower housing.

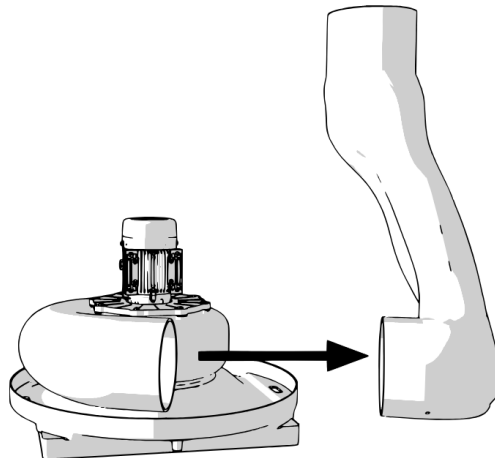


6. Remove the T25 Torx head screws from the motor plate. (There will be 8 or 16 screws depending on the blower. There may be a screw already missing in front of the motor junction box)

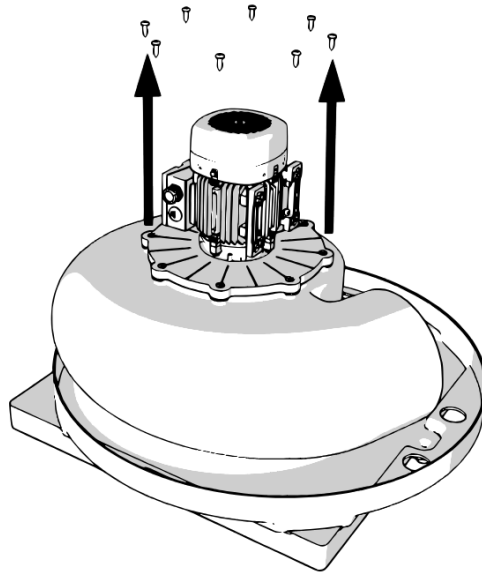


7. Pull the motor assembly from the blower housing. It may require some force to unseal the motor plate from the blower housing. Be careful not to damage the impeller.

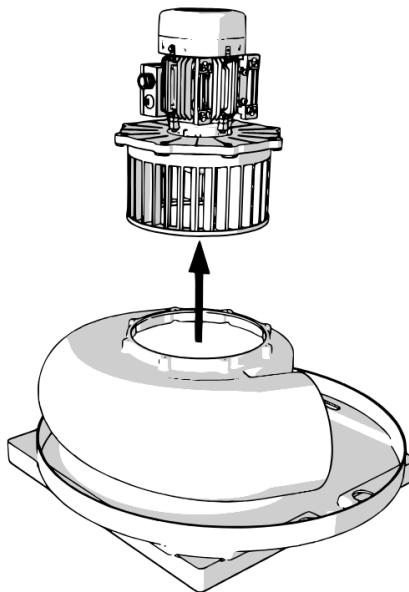


8. Using a flathead screwdriver or a flat pry tool, remove the hub cap from the center of the impeller. It may require going through the blade of the impeller to remove the hub cap. Be careful not to damage the impeller.

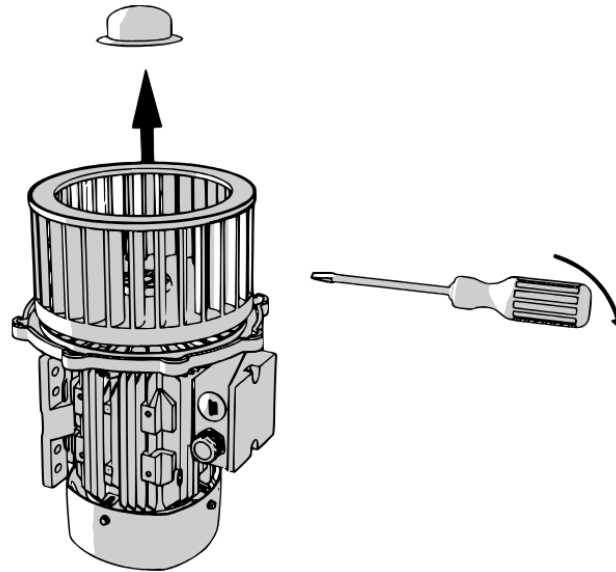


9. Remove the shaft bolt and washer in the center of the impeller from the shaft of the motor.
10. Remove the impeller from the motor shaft.
 - a. Removing the impeller will require the aid of a gear/bearing puller. To do so, remove 2 of the bolts from the green bushing/hub of the impeller. Screw in the same bolts with the addition of a washer on each bolt. Hook the arms of the bearing puller onto the washers that were just added with the center screw of the puller on the shaft of the motor. Begin pulling the impeller from the motor shaft. At a certain point, it may require adding a spacer to the middle of the impeller for extra leverage. A bolt with the head facing up can act as a spacer. Continue pulling until the impeller is removed from the shaft.

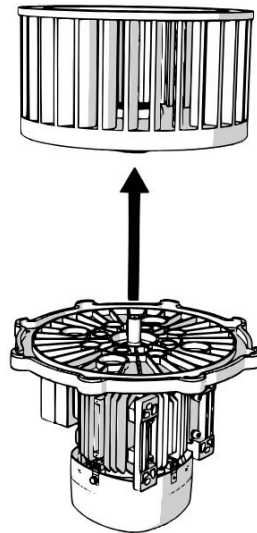

11. Remove the 4 bolts going through the motor plate into the C face of the motor.

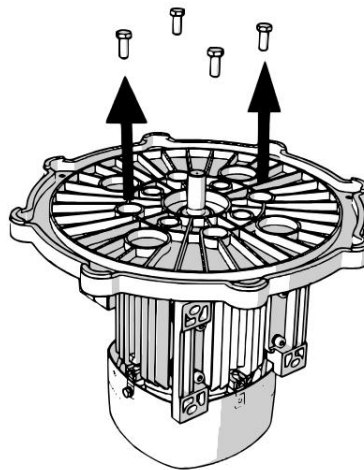


12. Remove the motor plate from the C face of the motor.

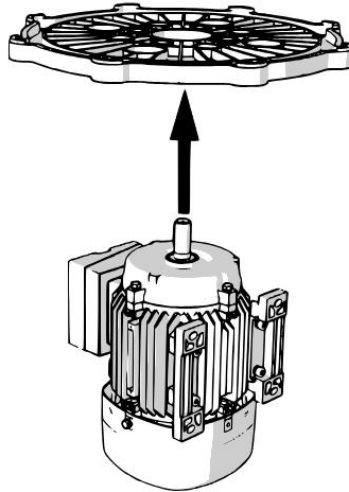


7.4.2 Assembly/Reassembly Instructions


1. Place the motor with the shaft facing upwards on a table that can support the weight of the blower.

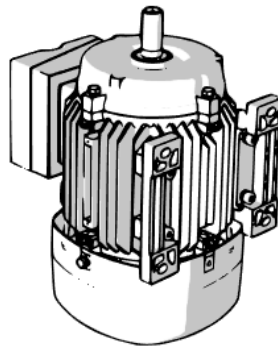


2. Set the motor plate onto the C face of the motor. It may require a small hammer or dead blow mallet to set the plate onto the rabbet. It will not require that much force to properly seat the motor plate.

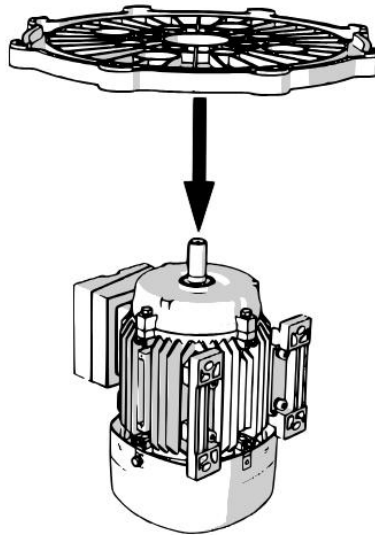


3. Secure the motor plate screwing the 4 bolts and washers through the plate into the C face of the motor.

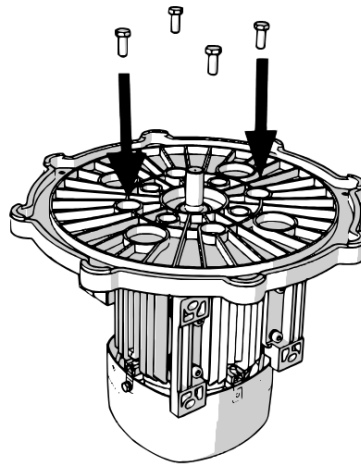


4. Align the impeller with the top of the motor shaft, ensuring that it is level. Push the impeller down the shaft until it touches the shaft shoulder. If the fit is tight or the impeller gets stuck at any point, it may require the use of a driving rod and mallet. When using a driving rod, only use it on the bushing in the center of the impeller. Place the driving rod on the bushing and smack with the mallet until the impeller touches the shoulder. Do not hit with excessive force as it may cause damage to the bearings. Ensure that the impeller can rotate freely. Using the supplied bolt, screw down the impeller onto the shaft. If there is a gap between the tip of the shaft and the top of the bushing, then use a stainless-steel washer to fill the gap.

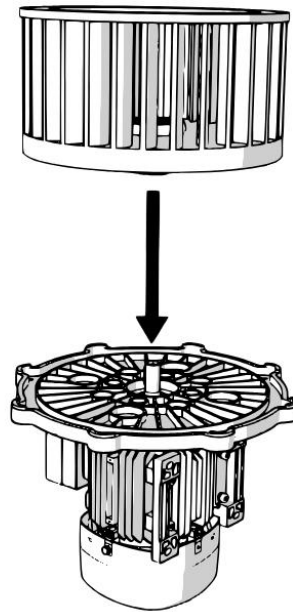


5. Cover the hub bushing with the hub cap. Use a driving rod and mallet to seat it properly.

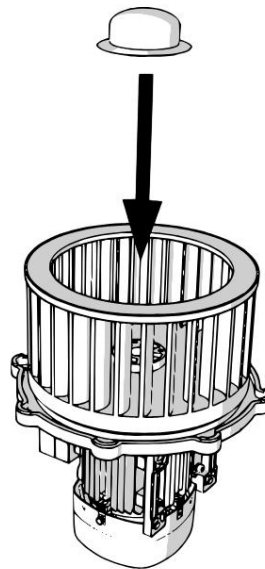

6. Place the blower housing and JET base with the inlet downward on the table (The blower housing will be on top of the JET base).
7. Lift the motor assembly, and lower it into the blower housing, being careful not to damage the impeller.

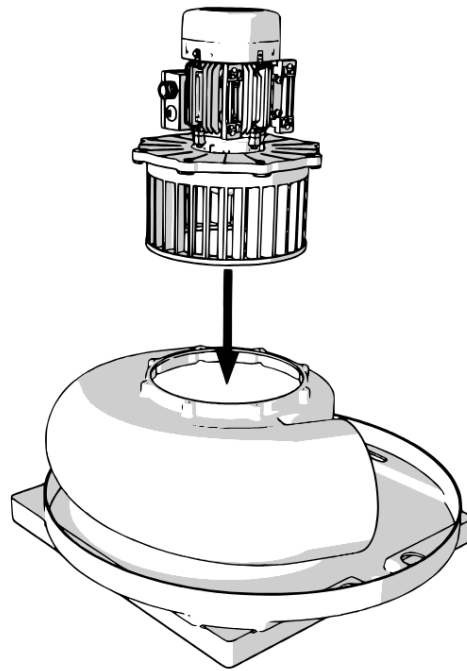


8. Using the supplied Torx head screws (Either 8 or 16), secure the motor assembly to the blower assembly. Depending on the supplied motor, one screw may not be able to be screwed in due to the size and placement of the motor junction box.
 - a. It is recommended to wire the motor before proceeding as it may become difficult to access the junction box of the motor.

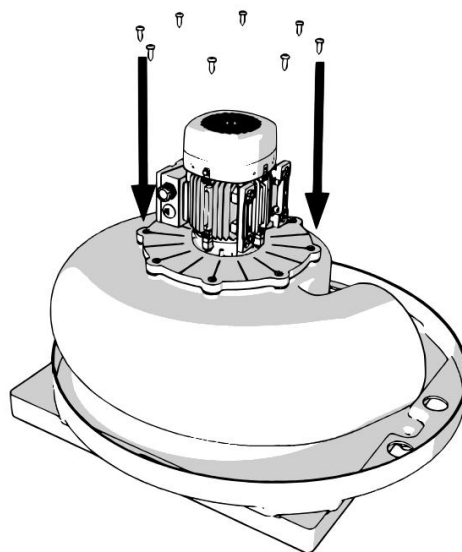




9. Place the exhaust manifold over the outlet of the blower housing. Ensure that the manifold is completely seated onto the outlet and that the exit of the exhaust manifold is pointing upward.

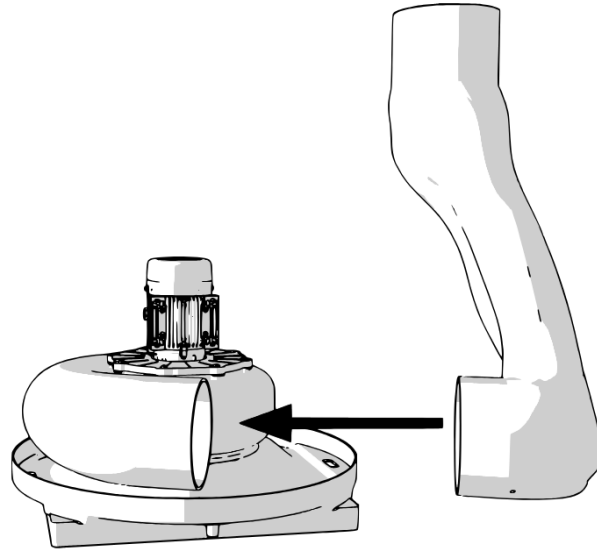


10. Slide the cone over the exhaust manifold and onto the base of the JET. Ensure that any wiring does not interfere with the JET cone.

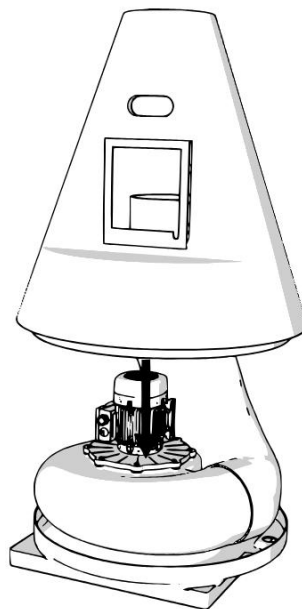


11. Feed the wiring through the rear of the JET door and into the disconnect switch.



- a. Wire the disconnect switch. Match the order of the wiring to the order of the wiring on the motor to ensure easy installation.
12. Slide the JET door onto the face of the JET cone.

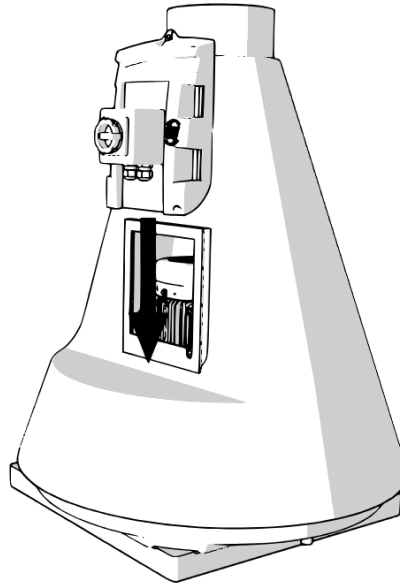

13. Secure the JET door with the provided T25 screw.
14. Orient the fan so that the inlet is accessible. Ensure that the impeller can rotate freely and does not rub on the blower housing.

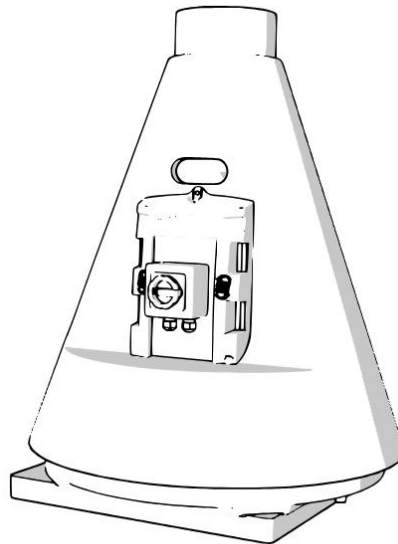



8 Electrical Installation/Wiring

WARNING! This equipment should be installed, adjusted, and serviced by qualified electrical maintenance personnel familiar with the construction and operation of the equipment and the hazards involved. Failure to observe this precaution could result in property damage and/or serious bodily injury, including death. **HIGH VOLTAGE!** Hazard of electrical shock. Disconnect incoming power before working on this control.

WARNING! Wait at least five (5) minutes after turning off the input power supply before performing maintenance or an inspection. Otherwise, there is the danger of electric shock.

CAUTION! Proper grounds, disconnecting devices and other safety devices and their location are the responsibility of the user and are not provided by Plastec Ventilation Inc.

WARNING! For equipment protection, install a ground leakage type breaker with a fast response circuit capable of handling large currents. The ground fault protection circuit is not designed to protect against personal injury.

8.1 Motors

Periodic checks of voltage, frequency and current of a motor while in operation are recommended. Such checks assure the correctness of frequency and voltage applied to the motor and yield an indication of the fan load. Comparison of this data with previous data will give an indication of the fan performance. Any serious deviations could indicate a potential motor failure.

All motors carry a one-year warranty from date of shipment. For repairs within warranty period, the motor must be taken to the motor manufacturer's authorized service dealer. Contact your representative for additional warranty details.


A periodic motor check should consist of spinning the motor shaft with the power off so to be sure the motor turns freely and the bearings run smoothly.

Repair or replacement of motors is normally performed by a repair station authorized by the manufacturer. Contact your representative or the factory for locations nearest you. **DO NOT** ship motor to factory without specific authorization forms.




8.2 Single Phase Motors

8.2.1 Techtop

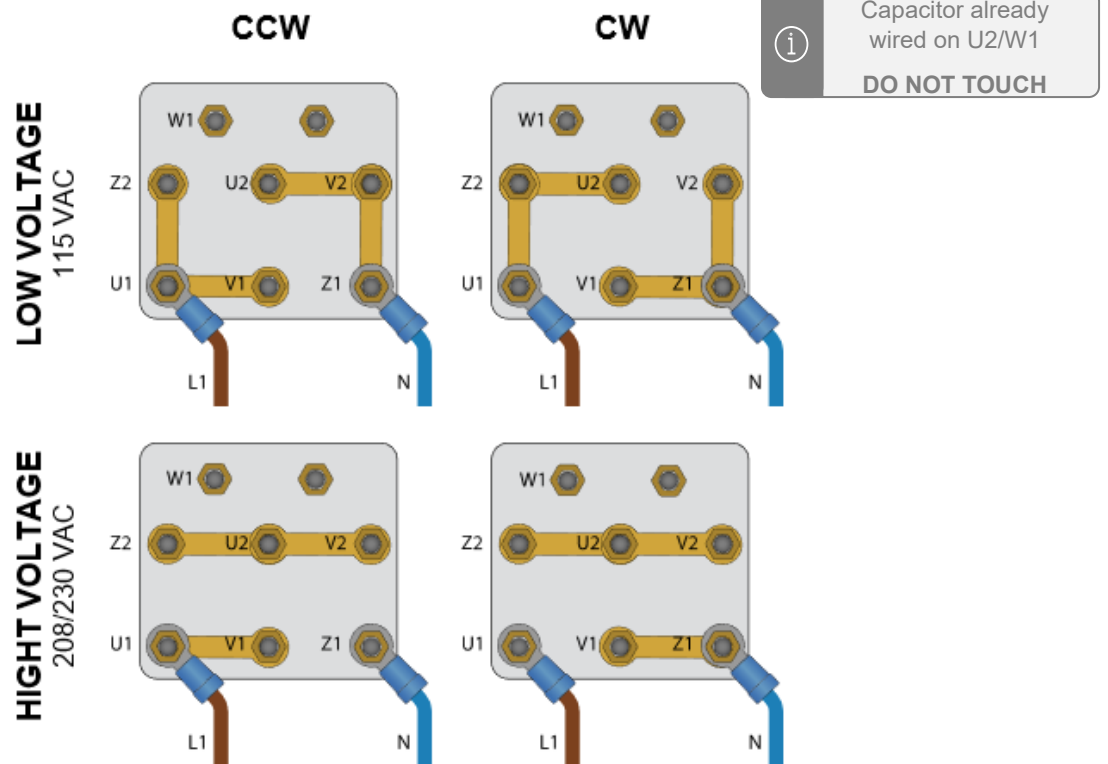


8.2.2 Elprom/Orange1

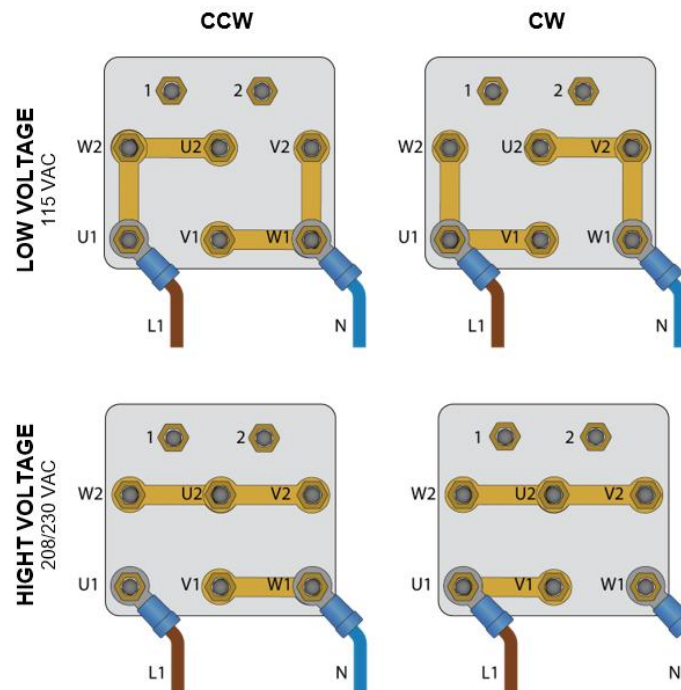


Capacitor already
wired on U2/W1
DO NOT TOUCH

8.3 Three Phase Motors

8.3.1 Techtop

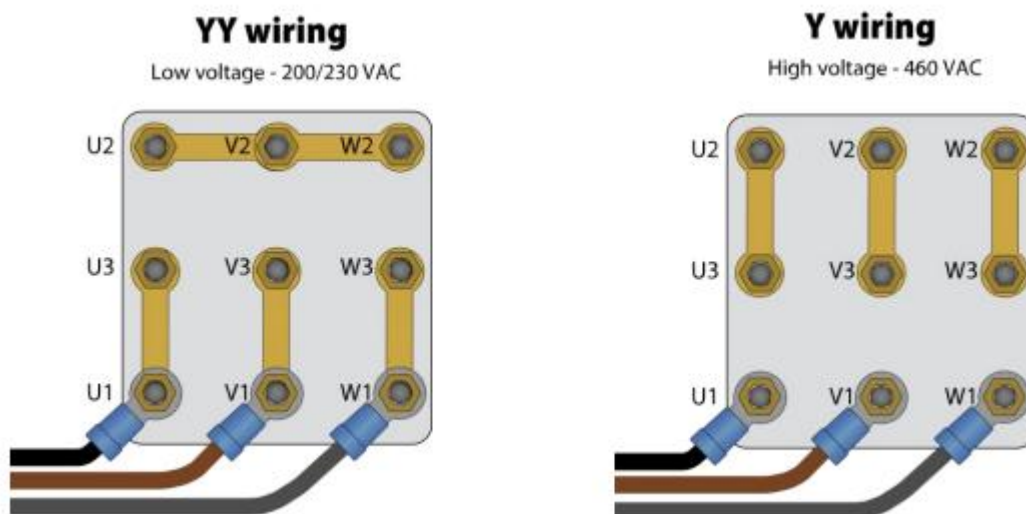


8.3.2 Elprom/Orange1

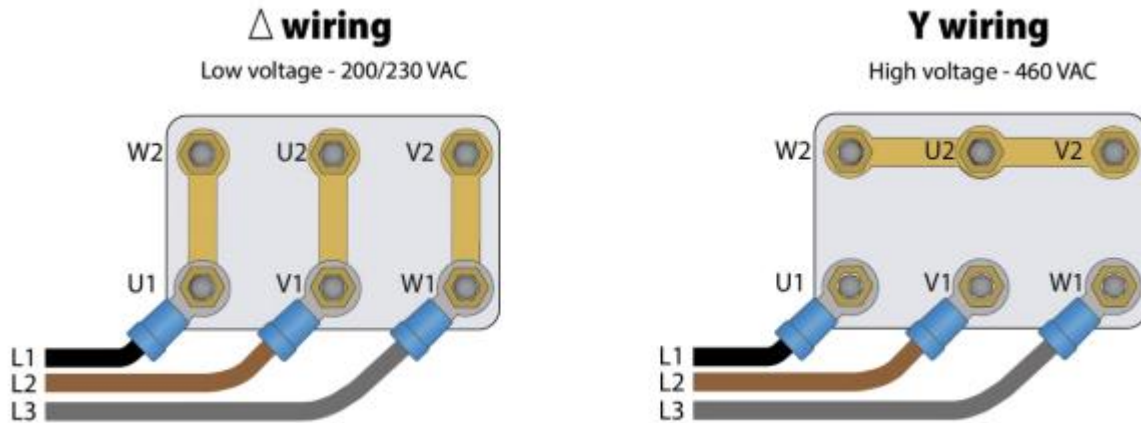

8.4 Thermal Protection

PLASTEC's explosion resistant motors are equipped with thermal protection from factory. A Normally Open relay is required to use the thermal protection that is built into the motors.

8.4.1 Single Phase

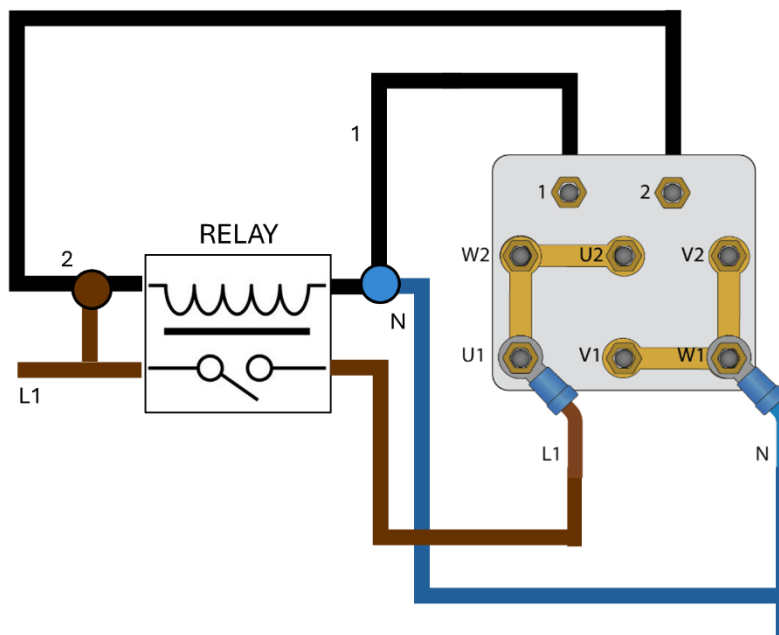


9 Accessories


9.1 Roof Curb

9.1.1 JET 20 and JET 25 Installation


1. Secure the roof curb in the desired location before installing the blower on top of the curb.

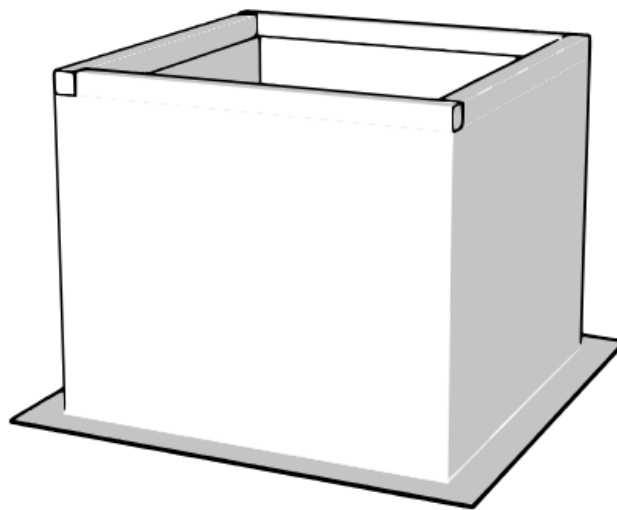


2. For ease of installation, it is recommended to use flexible tubing to connect the piping in the roof to the inlet of the JET. Attach the flexible tubing from Roof top outlet pipe to inlet of the JET.
3. Place JET on Roof Curb. Ensure that the roof curb is seated properly within the roof cap base of the JET.

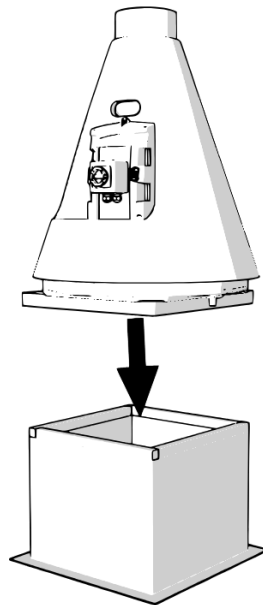

4. On the sides of the base, drill two holes near the corners of the base, going through the JET and into the wooden section of the Roof Curb.
5. Secure the JET using stainless steel screws through the previously drilled holes.

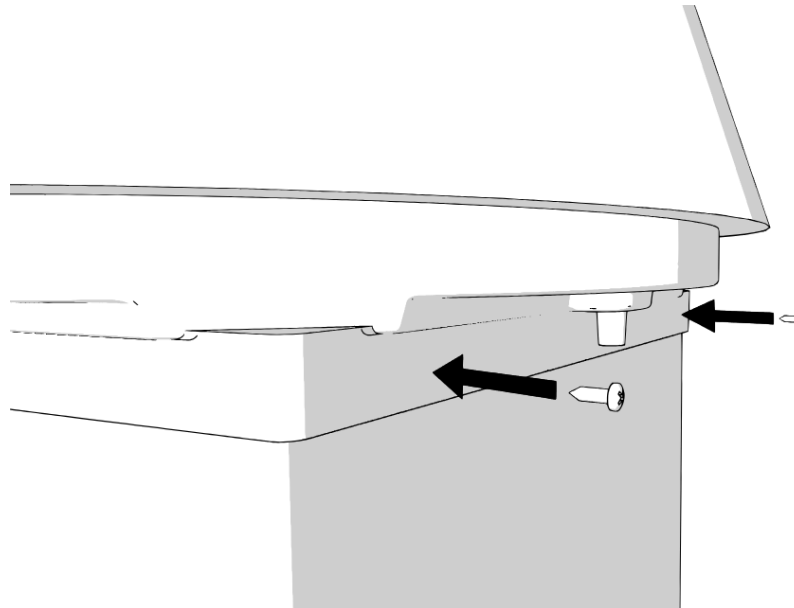


6. Ensure that the blower is properly secured before running.

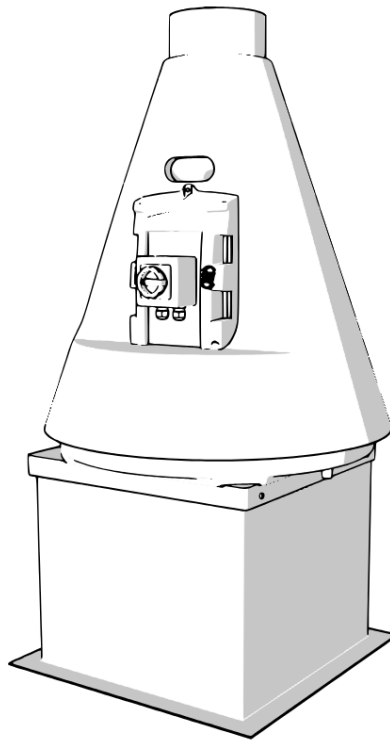


9.1.2 JET 30 Installation

1. Secure the roof curb in the desired location before installing the blower on top of the curb.

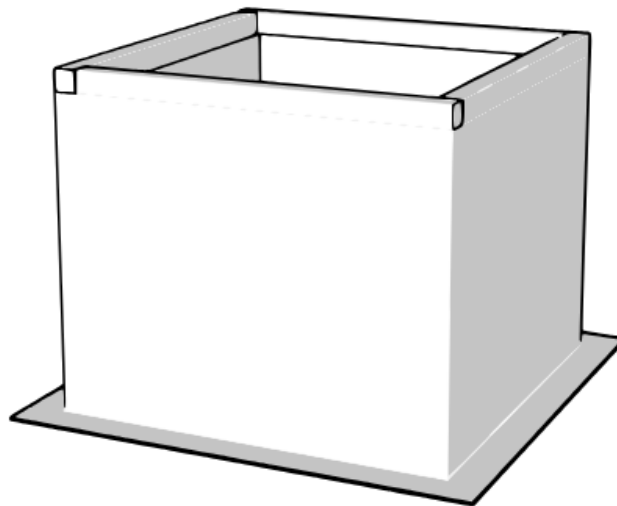





2. For ease of installation, it is recommended to use flexible tubing to connect the piping in the roof to the inlet of the JET. Attach the flexible tubing from Roof top outlet pipe to inlet of the JET.
3. Place JET on Roof Curb. Ensure that the roof curb is seated properly within the roof cap base of the JET.

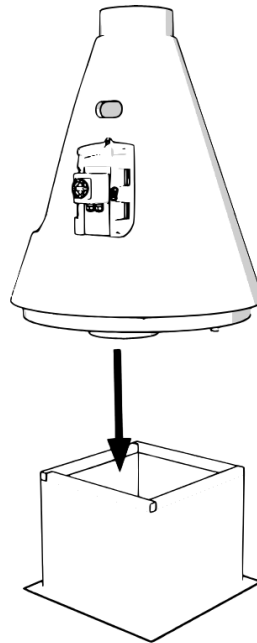


4. Remove the cone of the JET. See *7.3.1 Disassembly Instructions* for removing the cone.

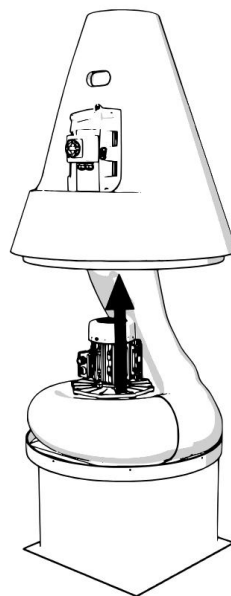


5. Within the JET, there will be a raised square that the roof curb will be sitting in. In this square, drill holes near the edges through the JET into the wooden section of the roof curb.
6. Secure the JET using stainless steel screws through the previously drilled holes.

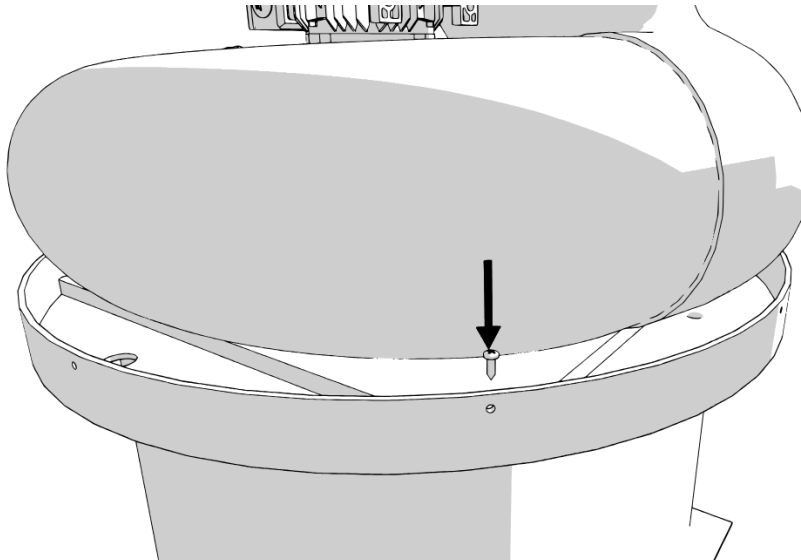

7. Reinstall the JET Cone. See *7.3.2 Assembly/Reassembly Instructions* for reinstalling the cone.

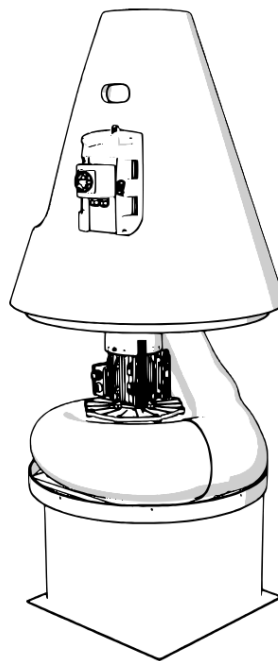


8. Ensure that the blower is properly secured before running.

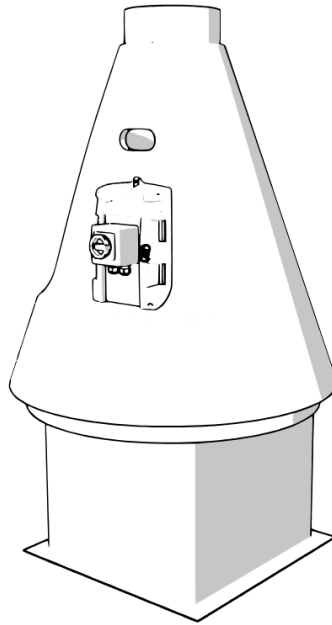


9.2 JET Wall Bracket

9.2.1 JET 20 and JET 25 Installation


1. Secure the wall bracket in the desired location before installing the blower on top of the bracket.

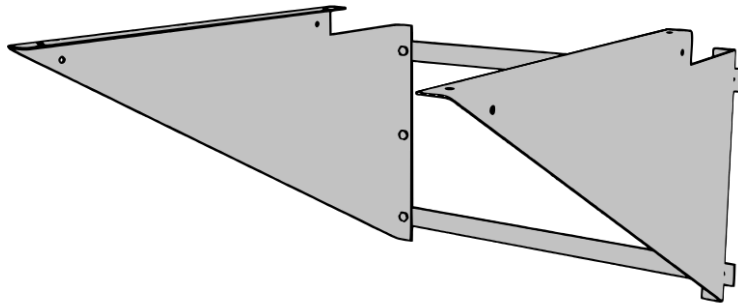


2. Place the JET on the Wall Bracket. Ensure that the wall bracket is seated properly within the roof cap base of the JET.

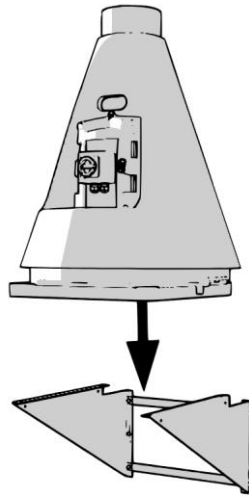

3. Drill holes into the JET base through the two side holes in the wall bracket. Do this for both sides.
4. Secure the JET using stainless steel bolts through the previously drilled holes.

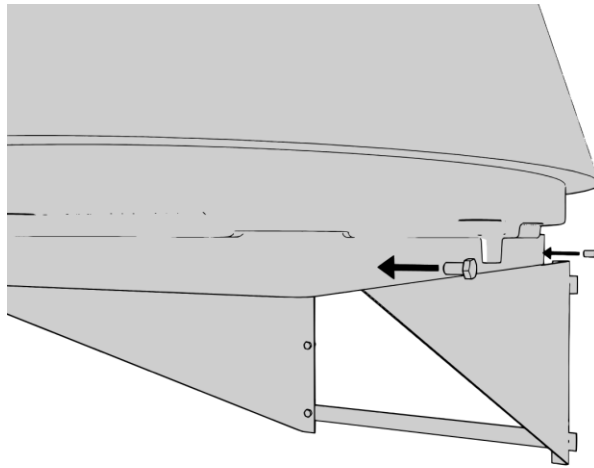


5. Secure the bolts with corresponding nuts.

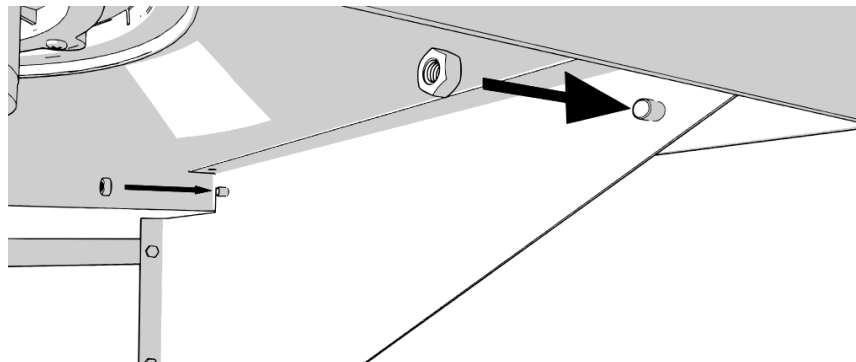




6. Ensure that the blower is properly secured before running.

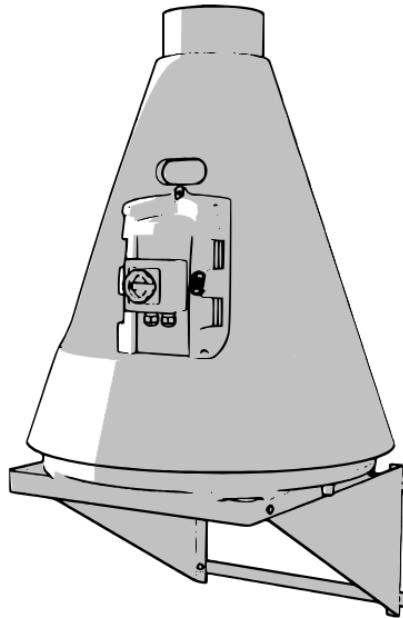


9.2.2 JET 30 Installation


1. Secure the wall bracket in the desired location before installing the blower on top of the bracket.

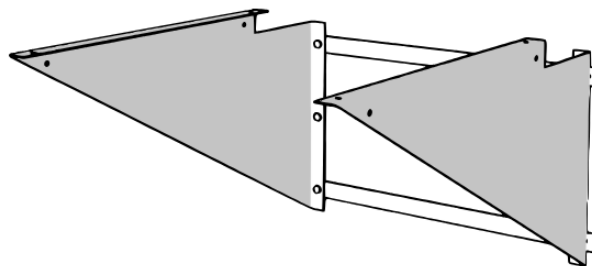


2. Place the JET on the Wall Bracket. Ensure that the wall bracket is seated properly within the roof cap base of the JET.

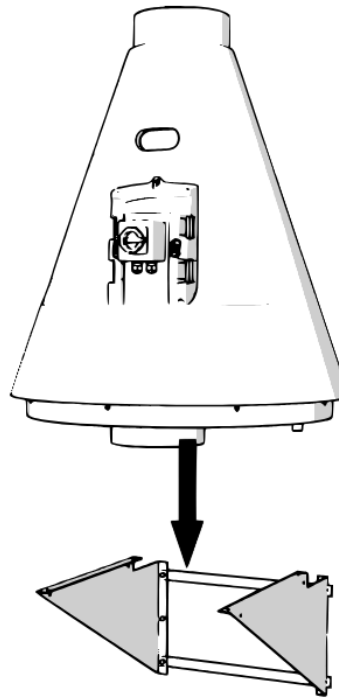


3. Remove the cone of the JET. See *7.3.1 Disassembly Instructions* for removing the cone.

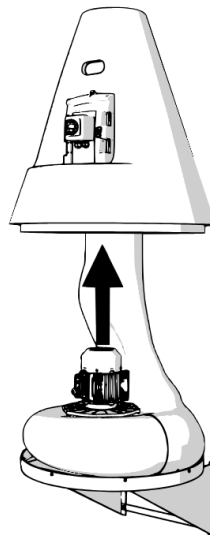


4. Within the JET, there will be a raised square that the wall bracket will be sitting in. Drill holes into the raised square within the JET through the two top holes in the wall bracket. Do this for both sides.
5. Secure the JET using stainless steel screws through the previously drilled holes.

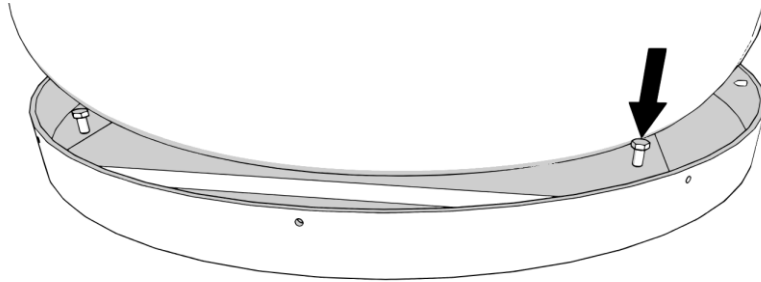


6. Secure the bolts with corresponding nuts.

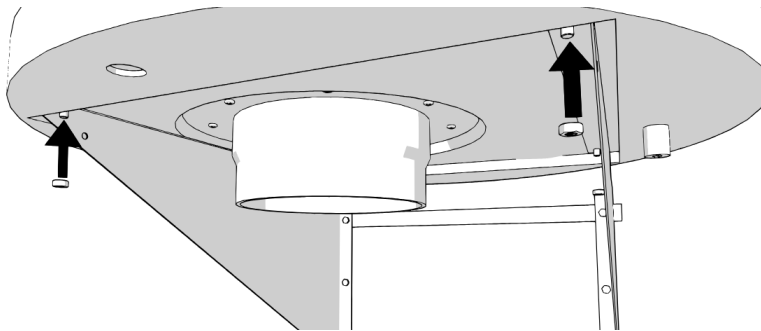

7. Reinstall the JET Cone. See 7.3.2 *Assembly/Reassembly Instructions* for reinstalling the cone.

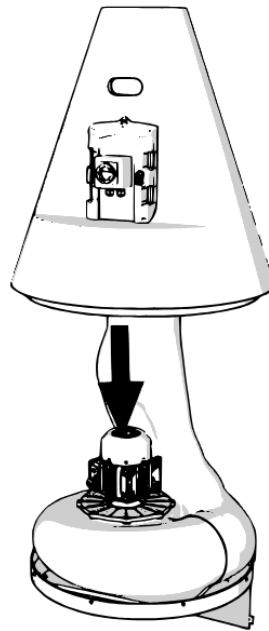


8. Ensure that the blower is properly secured before running.

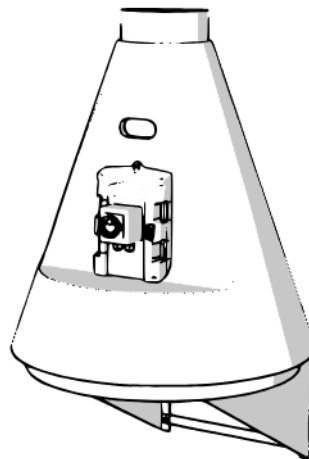


9.3 Speed Nozzle

9.3.1 Installation


1. Secure the blower in the desired location before installing the speed nozzle onto the blower.

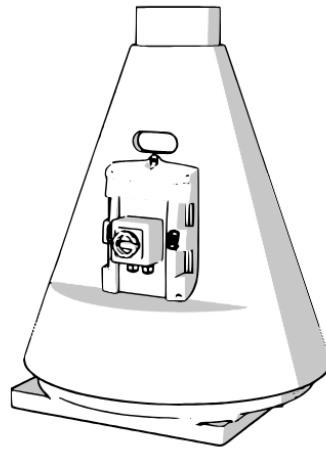

2. Place the speed nozzle over the blower outlet. The speed nozzle should slide smoothly onto the blower outlet.

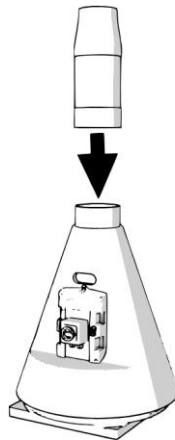


3. Secure the speed nozzle to the blower outlet. Drill four evenly spaced holes through the speed nozzle and into the blower outlet. Insert screws into the holes to secure the speed nozzle.

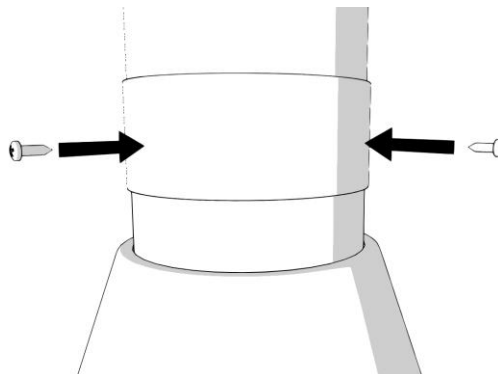




4. Ensure that the speed nozzle is properly secured before starting the blower.

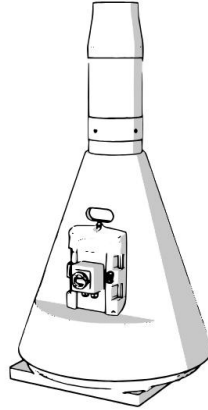


9.4 Weather Stack

9.4.1 Installation


1. Secure the blower in the desired location before installing the stack onto the blower.

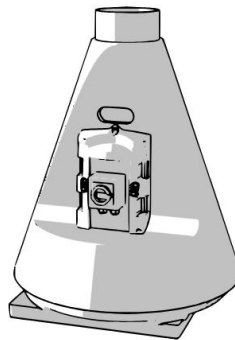


2. Place the stack over the blower outlet. The stack should slide smoothly onto the blower outlet.

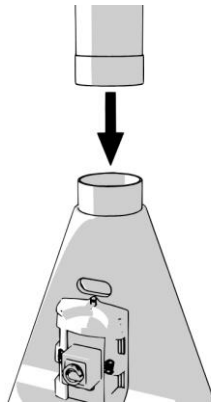

3. Secure the stack to the blower outlet. Drill four evenly spaced holes through the stack and into the blower outlet. Insert screws into the holes to secure the stack.

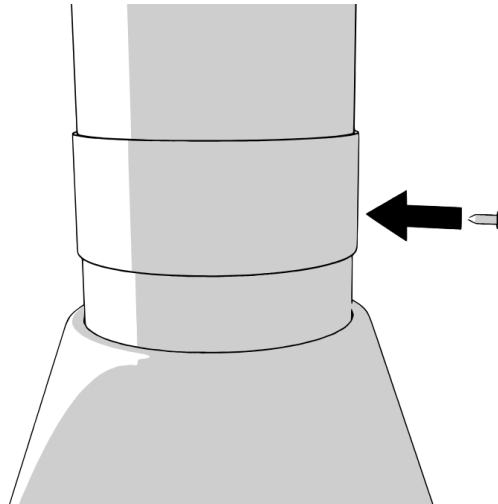


4. Ensure that the stack is properly secured before starting the blower.

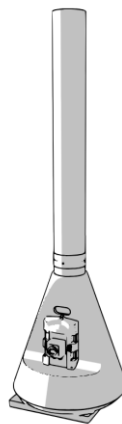


9.4.2 Stack Guywire Band Installation

1. Ensure that the blower is properly secured in the desired location. Before installing the band and guywires, ensure that the stack is secured onto the blower and is standing vertically.
2. Wrap the stack guywire band around the stack and insert the provided bolt through the two ends. Install the provided nut onto the bolt and tighten.
3. Install screws through the pre-drilled holes above each of the tabs in the guywire band.
4. Install the anchor points so that each point aligns with each tab in the guywire band. The anchor points should be placed in a circle around the center of the stack whose diameter is 2 times the height of the guywire band from the ground.

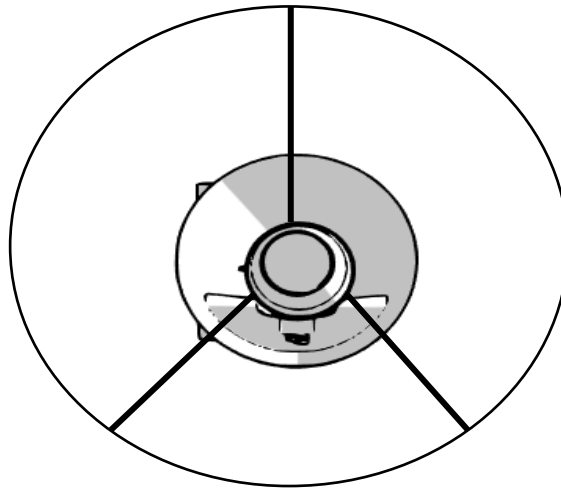

5. Bend out the three tabs on the stack guywire band. Loop the guywires through the pre-drilled holes in the tabs. Secure the guywires with the provided D-clamps.
6. Hook the turnbuckles onto the anchor points
7. Loop the guywires through the eye of the provided turnbuckle. Secure the guywires with the provided D-clamps. Before securing, ensure that the guywires are taught.
8. Turn the turnbuckles Counterclockwise to begin tensioning the guywires. When tensioning, ensure that all three guywires are tensioned evenly.
9. Ensure that the blower is stable and that the guywires are secured.

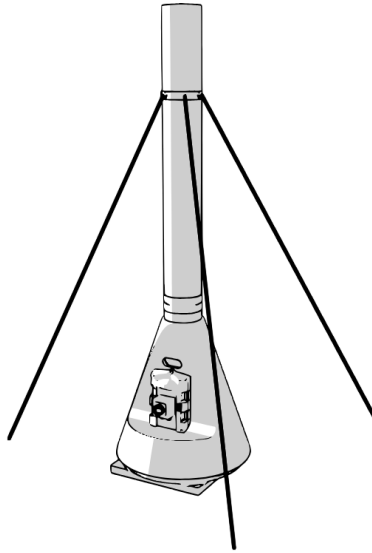

10 Test & Start Procedures

10.1 Test & Normal Start Procedures

WARNING: Do not insert your hands or arms in the fan while it is running.

It is highly recommended to insert an exhaust cap on the outlet and a six feet duct on the inlet flange to avoid accident or aspiration of hand, arm, or clothes when the fan is running. Do not wear a scarf close to the fan when it is running to avoid accidental choking and potential death.

Disconnect power before servicing the unit. Make sure that the power is turned off and locked in the OFF position.

Check that fan/blower is securely attached to the mounting location and that the mounting location is also secure. This unit should not vibrate when operating! Check clearances and all mounting hardware and secure as required.

All fans have sealed for life ball bearings and do not require lubrication. Running the unit for 15 to 20 minutes will ensure lubricant thoroughly mixed with the bearings and operate at optimum quietness.

When power is applied to the unit, check for proper rotation of fan wheel/impeller. Most motors allow for reverse rotation and if the fan wheel/impeller is moving in the wrong direction, air performance will be greatly affected. Reverse rotation for a prolonged period may cause motor damage that could void the warranty. Check the motor wiring diagram for proper wiring.



Electrical input check should be performed with fan properly loaded (pressure drop) to assure motor name plate amps are not exceeded. Never run a fan at free air.

Do not open the terminal box before turning off the power.

Check fan RPM against motor name plate to verify correct performance.

The fans are factory tested and checked for vibration, so this type of balancing is not required. Vibration could be caused by rough handling during shipment, installation, and weak foundations. Correct as required.

10.2 VFD Start Procedures

Before starting, ensure that all the parameters in the VFD are correctly set for the motor. This will allow the motor to operate at optimum conditions and prevent premature wear on the motor. Failure to do so may also result in excessive noise and whining noise from the motor.

Verify that the VFD ramp-up speed is set appropriately for the blower being used. It is recommended to have a slower ramp-up speed for larger blowers to reduce wear on the motor.

Check all connections between the VFD and the motor and verify that the connections are properly seated in the correct positions.

Check that fan/blower is securely attached to the mounting location and that the mounting location is also secure. This unit should not vibrate when operating! Check clearances and all mounting hardware and secure as required.

When the VFD is started, check for proper rotation of fan wheel/impeller. Most motors allow for reverse rotation and if the fan wheel/impeller is moving in the wrong direction, air performance will be greatly affected. Reverse rotation for a prolonged period may cause motor damage that could void the warranty. Some VFDs also have a reverse function to easily reverse the rotation of the motor. Otherwise, refer to the 12.3 *Troubleshooting Procedures* for reversing the rotation of the motor.

11 Troubleshooting/Maintenance/Repair

Before performing any maintenance on the fan, be sure power is turned off and locked in the off position at the service entrance.

Ventilators should be carefully checked at least once a year. For critical or rugged applications, a routine check every two or three months is suggested.



All motors carry a one-year warranty from the date of shipment. For repairs within the warranty period, the motor must be taken to the motor manufacturer's authorized service dealer. Contact your representative for additional warranty details.

A periodic motor check should consist of spinning the motor shaft with the power off to be sure the motor turns freely, and the bearings run smoothly.

The motor cooling fan and guard should also be maintained by checking and cleaning accumulated dust and debris.

The rotating wheel or propeller requires enhanced attention since materials in the air being handled can build up on blades to cause destructive vibration or weaken the structure of the propeller by corroding and /or eroding the blades. Regular inspection and corrective action at intervals determined by the severity of each application are essential to good service life and safety.

WARNING: Failure to comply with the above-mentioned maintenance schedule may result in catastrophic failure of equipment. Said failure may include physical damage, shrapnel, electrical short, equipment damage, overheating, fire, property damage and other dangerous conditions.

11.1 Maintenance Schedule

Before performing any maintenance on the fan, be sure power is turned off and locked in the off position at the service entrance.

Ventilators should be carefully checked at least once a year. For critical or rugged applications, a routine check every two or three months is suggested.

All motors carry a one-year warranty from the date of shipment. For repairs within the warranty period, the motor must be taken to the motor manufacturer's authorized service dealer. Contact your representative for additional warranty details.

A periodic motor check should consist of spinning the motor shaft with the power off to be sure the motor turns freely and the bearings run smoothly.

The motor cooling fan and guard should also be maintained by checking and cleaning accumulated dust and debris.

The rotating wheel or propeller requires enhanced attention since materials in the air being handled can build up on blades to cause destructive vibration or weaken the structure of the propeller by corroding and /or eroding the blades. Regular inspection and corrective action at intervals determined by the severity of each application are essential to good service life and safety.

WARNING! Failure to comply with the above-mentioned maintenance schedule may result in catastrophic failure of equipment. Said failure may include physical damage, shrapnel, electrical short, equipment damage, overheating, fire, property damage and other dangerous conditions.



IMPORTANT! If replacing parts on a blower, use original spare parts from PLASTEC Ventilation only. When ordering spare parts, please specify the serial number or model number of the fan. This can be found on the fan nameplate. It is recommended to speak to a sales representative or technical representative to determine the necessary parts required.

Maintenance Activity	Annually	Every six Months	Quarterly
Check the blower housing, motor flange, and inlet flange for damage.	X		
Check the impeller for damage and imbalance.	X		
Clean the impeller and fan housing interior.		X	
Check the inlet flange and motor plate screws for corrosion and damage. Check that the screws are properly seated.	X		
Check that the fan inlet is clear and not blocked.		X	
Check the power and current consumption of the motor. Verify with the motor nameplate or spec sheet.			X
Check that cables and electrical connections are properly seated and there is no damage to the wires, clamps, or connections.	X		

WARNING! Before cleaning the fan, ensure that the impeller is at a complete stand still and that any disconnect switches are switched to the OFF position.

WARNING! Follow all safety precautions before approaching the fan. Only qualified individuals should be carrying out the cleaning of the fan.

WARNING! If the fan is responsible for transporting hazardous chemicals, pay attention to the safety data sheet of the chemical that is being transported. Wear the appropriate PPE for the chemical in question.

Do not use steel brushes, sharp-edged object, or high-pressure cleaners when cleaning the fan.



Do not bend the impeller blades when cleaning. Any damage to the impeller from cleaning may result in excessive vibration or further damage to the impeller or fan.

When cleaning the housing, ensure that any debris or built-up dirt is cleared. Ensure that the inlet and outlet are completely clear to allow for maximum performance.

11.2 Common Questions

Question	Answer
Can I use a VFD or Speed controller on a single-phase motor?	It is not recommended to use a speed controller with a single-phase motor as it can cause damage to the motor due to increased amperage draw. It is not possible to use a VFD for a single-phase motor.
What are the additional wires/terminals on the explosion-proof motors for?	The additional wires or terminals are for the built-in thermal protection system in these motors. To use these, it will require the use of an additional thermal overload relay system.

11.3 Troubleshooting Procedures

Problem	Possible Causes	Solution
Low Airflow	Impeller Rotates in wrong direction	Change direction of rotation for motor (Swap two phases for three phase motors).
	Wrong Wiring Configuration (Single Phase Motors)	Check 8 <i>Single Phase Motors</i> , for correct wiring configuration. Ensure that wiring configuration matches the direction of the housing. Check 7.2 <i>Installation Orientations</i> for housing direction.
	Intake or Outlet blocked/Ducting blocked	Remove blockage. Check for excess dirt or debris within the system. Remove dirt or debris if present.
	Dampers not or only partially open	Check Dampers, adjust damper plate to allow for larger opening.
	Pressure Losses too high	Check that Dampers are open and/or filters are not clogged. Ensure that the blower is not undersized for application/selection. If undersized, return and select appropriate blower or optimize duct routing.



Electronics/Motor overheated	Insufficient Cooling	Check that motor is not insulated. If insulated, remove insulation to restore
	Cooling Fan is broken	Contact PLASTEC Ventilation for replacement motor cooling fan
	Use of Speed Controller on Single Phase Motors	If a speed controller is being used on a Single Phase Motor, it will increase the motor amperage draw when reducing speed and thus overheat motor. Remove speed controller and add adjustable damper for flow control.
	Motor is Locked	Check that the impeller can rotate freely. If not, motor may have seized. Contact PLASTEC Ventilation about replacement motors.
	Overloaded Motor	Check if the blower is correct for the application/selection. Blowers that are oversized can overheat from too much flow. Add a damper or VFD (Three Phase Motors only) to reduce flow or control speed. Flow reduction will reduce amperage draw.
Motor does not rotate	Faulty supply voltage	Check supply voltage. Check that motor is receiving the correction voltage.
	Improper power supply connection	Ensure that all connections are properly seated in the motor junction box.
	Bearing have Seized	Check that the impeller can rotate freely. If not, the bearings may have seized and locked the motor. Contact PLASTEC Ventilation about replacement motors.
Excessive Vibration/Fan not running smoothly	Impeller Imbalance	Contact PLASTEC Ventilation about a replacement Impeller or Impeller exchange.
	Dirt or debris build-up on Impeller	Carefully remove dirt or debris from Impeller. Ensure that the Impeller is not damaged before running blower again.
	Damage to Impeller from debris or excessive temperature	Contact PLASTEC Ventilation about a replacement Impeller
	Damage to Impeller due to Material Incompatibility	Contact PLASTEC Ventilation about a replacement Impeller